

## FEATURES

- Hardened stainless steel frame and measuring jaws
- Thumbroll adjustment
- Knurled locking screw
- Depth rod
- Clear LCD Display
- Large 11mm digits

# RS PRO Electronic Digital


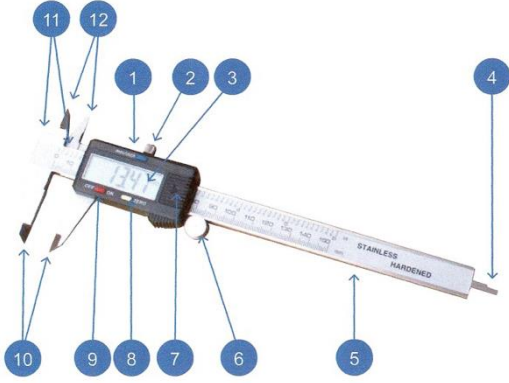
## Caliper DIN862

RS Stock No.: 2436615, 2436801,  
2436802, 2436803, 2436804, 2436806,  
2436807



RS Professionally Approved Products bring to you professional quality parts across all product categories. Our product range has been tested by engineers and provides a comparable quality to the leading brands without paying a premium price.

## Product Description


 <p>Metric / Inch model</p>	<p>Hardened stainless steel frame and measuring jaws Thumbroll adjustment Knurled locking screw Depth rod Clear LCD Display Large 11mm digits Inch/Metric conversion Origin setting Resolution: 0.01mm / 0.0005" Repeatability: 0.01mm / 0.0005" 4 Way measurement: Individual serial numbers Power: 1 x Silver oxide battery SR44 - 1.55v Operating temperature: 5 - 40°C Relative humidity: Maximum 80% Warranty: 1 year</p>
	<p>1 Metric / Inch Conversion Button 2 Knurled Locking Screw 3 LCD Display 4 Depth Measuring Blade 5 Caliper Beam 6 Thumbroll Fine Adjustment 7 Battery Cover 8 Zero Set Button 9 Power Button ON/OFF 10 External Measuring Jaws 11 Step Measuring Faces 12 Internal Measuring Jaws</p>
<p><b>Manufacturers code</b></p>	<p>2436615</p>
<p><b>Description</b></p>	<p>Electronic Caliper 0-150mm/0-6"</p>

## General Specifications

<b>Range</b>	150mm/6"
<b>Resolution</b>	0.01mm/0.0005"
<b>Repeatability</b>	0.01mm/0.0005"
<b>Accuracy</b>	±0.02mm (≤ 100mm) ±0.03mm (≥ 100mm – 150mm)
<b>External Jaw Length</b>	40mm
<b>Internal Jaw Length</b>	18mm

## Electronic Caliper

### 4 Way Measurement Feature

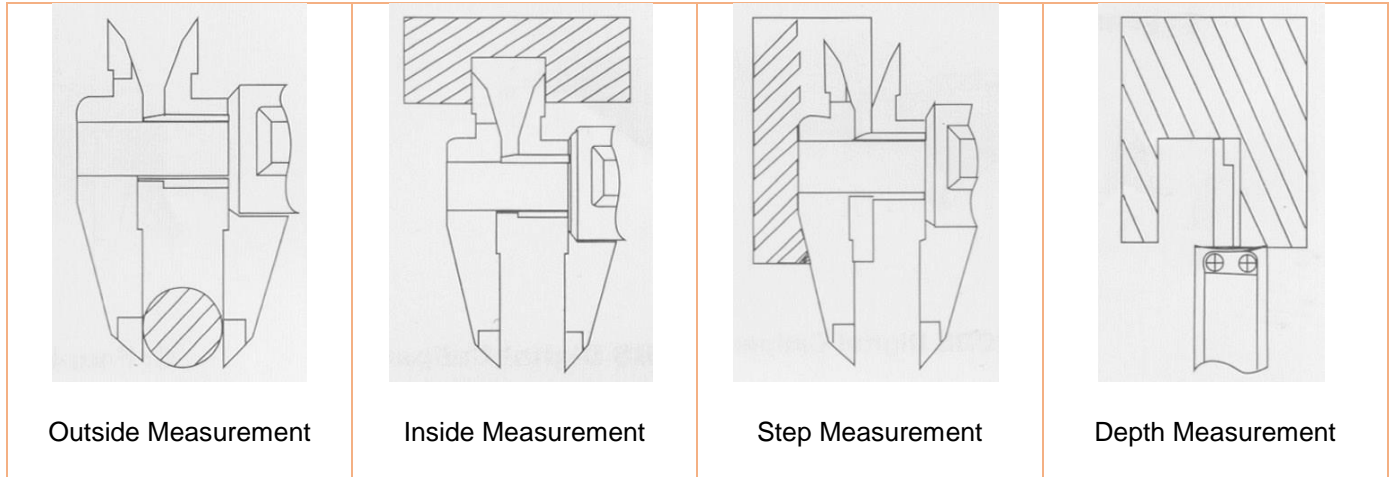

### OPERATING INSTRUCTIONS

When using the Caliper for the first time or after a period of non-use, wipe the beam scale with a dry clean cloth to remove any condensation or oil deposits.

Prior to setting the caliper for measuring, first clean the measuring faces with a soft clean cloth or paper.

Switch Caliper ON

Move Caliper jaws together.

Select required measuring mode Inch / Metric.

Zero display, caliper is now ready for direct measurement.

Caliper can be zeroed at any position within its range, to provide relative measurements.

Caliper provides 4 way measurements, External, Internal, Step and Depth.

### OPERATING CARE

Clean measuring faces with dry soft cloth

Keep away from strong magnetic fields

Prevent ingress of oil / liquids into electronics

Remove battery if instrument is not used for a long period of time

Do not disassemble or drop the instrument

**Do not mark instrument by engraving, etching or any other permanent marking method, as this will invalidate the warranty**

### FAULT FINDING

Fault	Cause	Action
Display flashes	Battery voltage below 1.45volts	Replace battery
Display frozen	Circuit overload	Remove battery and replace after 4 minutes
Accuracy below specification but within +/- 0.1mm	Dirt in sensor	Remove slider cover assembly, clean face of sensor with dry clean compressed air (5kg/cm <sup>2</sup> )
No display	Poor battery contact Dead battery	Remove battery and carefully adjust battery contacts, replace battery.