



Become familiar with the Master Key

A - Unlocked (insert)

Blades together

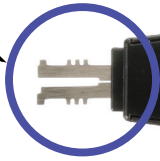


Sliding button

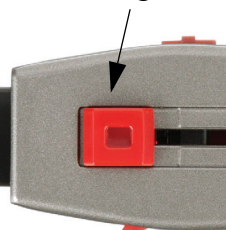


Locking pin is visible (not engaged)

B - Locked (Remove)

Blades separate

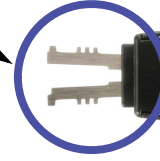


Sliding button

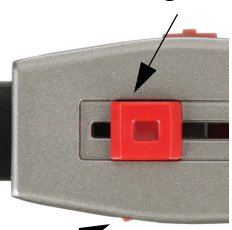

Locking pin is not visible (engaged)

1. Installation

a) Ensure device is in the unlocked (open) position

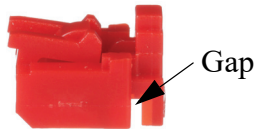

Unlocked





Locked

b) Insert the device into the RJ45 opening and press to lock




If device is in LOCKED position, use master key to unlock

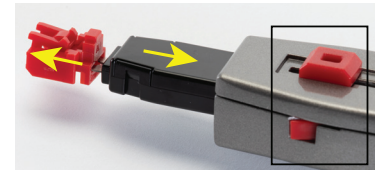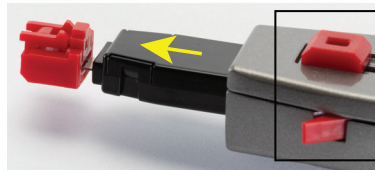

2. Removal

a) Key should be in UNLOCKED position

Blades Closed

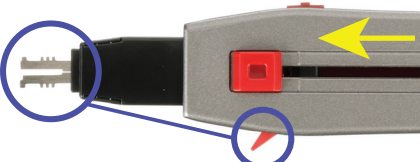



Locking pin visible

b) Insert blades into RJ45 device

Orient sliding button to be opposite the entrance slots on device



c) Once inserted, switch Key to LOCKED position. Pull key to slide device out of the port.

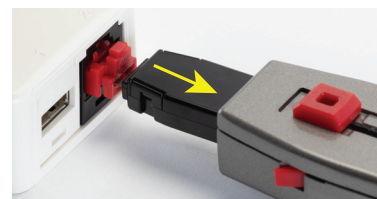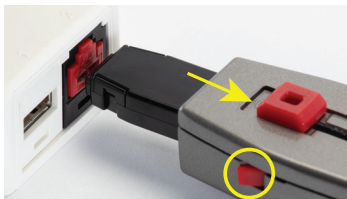

d) To remove device from key, switch Key to UNLOCKED position and remove device.

For Instructions in Local Languages
and Technical Support:

www.panduit.com/resources/install_maintain.asp

PANDUIT

www.panduit.com

E-mail:
techsupport@panduit.com

Phone:
866-405-6654