



WORLD-BEAM® QS18 Series Adjustable-Field Sensors

Hookups

NPN (Sinking) Outputs

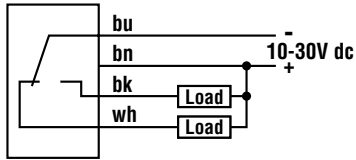

PNP (Sourcing) Outputs

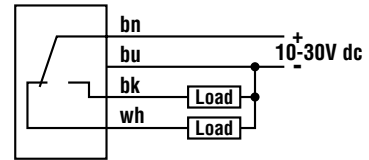

Quick-Disconnect (QD) Cables

Style	Model	Length	Used with:	Dimensions	Pinout
4-Pin Pico-style Straight, Snap-on Connector	PKG4-2	2 m (6.5')	QS18 with Q suffix		
4-Pin Euro-style Straight, Threaded Connector	MQDC-406 MQDC-415 MQDC-430	2 m (6.5') 5 m (15') 9 m (30')	QS18 with Q5 suffix		

Accessory Mounting Brackets

SMBQS18A	• Nickel-plated die-cast zinc • Wrap-around bracket	SMBQS18AF	• 14 ga., 304 stainless steel • Right-angle mounting bracket
 M2.5 for QS18AF and QS18LAF Cable Isolation Grommet		 12.7 mm (0.50\"/> 5.1 mm (0.20\"/> 10.2 mm (0.40\"/> Ø 3.0 mm (0.12\"/> R20.3 mm (0.80\"/> 4.32 mm (0.169\"/> Ø 4.32 mm (0.169\"/> 7.6 mm (0.30\"/> 15.2 mm (0.60\"/> 15.0° 7.5° 5.8 mm (0.23\"/> 13.5 mm (0.53\"/> 31.8 mm (1.25\"/> 1.9 mm (0.07\"/> 	

WORLD-BEAM® QS18 Series Adjustable-Field Sensors



more sensors, more solutions

WARRANTY: Banner Engineering Corp. warrants its products to be free from defects for one year. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture found to be defective at the time it is returned to the factory during the warranty period. This warranty does not cover damage or liability for the improper application of Banner products. This warranty is in lieu of any other warranty either expressed or implied.