

e-Product Data Sheet Page 1 of 1



Product Specifications COH20A1AH

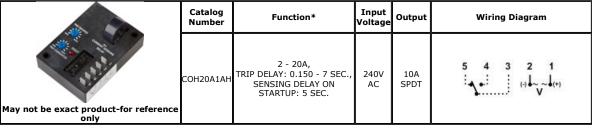

*DESCRIPTION OF FUNCTION	OPERATING CHART
Overcurrent Sensing After input voltage is applied & the sensing delay on power-up (t_s) is completed, the unit will begin sensing for a fault condition. A fault will occur when the monitored AC current (I) goes above the Fault Trip Current setting & remains above the Reset level for a period longer than the adjustable time delay period (t). The LED will turn ON immediately and the relay will energize after the time delay on pick-up (t) is completed. The relay will de-energize & the LED will turn OFF when the monitored AC current goes below the Reset level.	Current (I) Reset

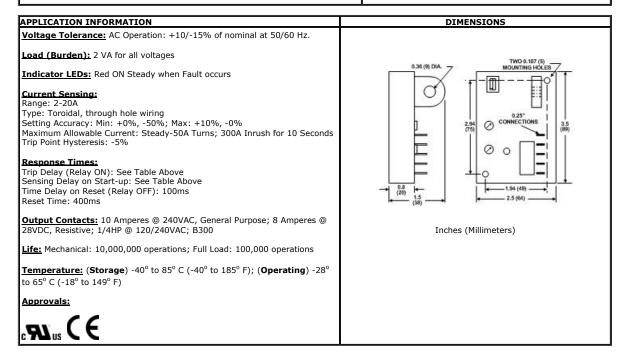

Macromatic Industrial Controls Inc.

W134N5345 Campbell Drive, Menomonee Falls, WI 53051 (USA) Telephone: 800-238-7474 (262-781-3366) © 1997-2015 Macromatic Industrial Controls Inc.