#### CABLE ASSEMBLY INSTRUCTION

# Maple Model(s)

HMI5000 Series (COM1) HMI600 Series (COM1)

#### **PLC or Controller**

Allen-Bradley SLC500 Series RS-485 with RJ-45

# **Communication Type**


Connector at Controller




## **Summary**

Use the wiring diagram and illustration to assemble a communication cable for use with an Allen-Bradley SLC500 Series PLC.

## **Drawing and Schematic**

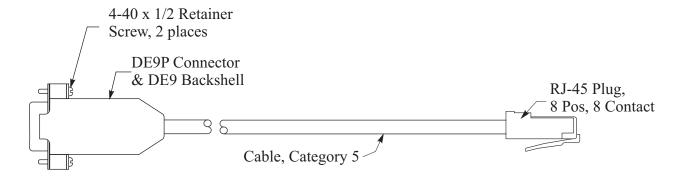

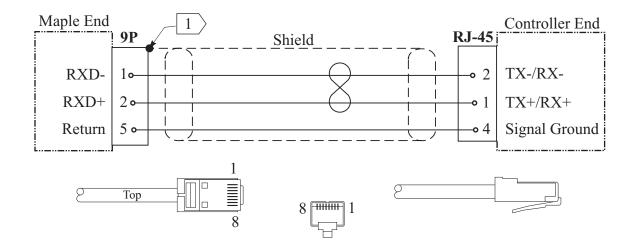

#### **Notes**

Shield wire must be terminated to controller metal shell.

Maple Systems Inc., 808 134th Street SW, Suite 120, Everett, WA 98204-7333 www.maplesystems.com