

Machine Automation Controller NX1P

Compact package-type machine automation controller







NX1P2-1□40DT NX1P2-1□40DT1

Features

- · Integrated sequence control and motion control
- · Up to eight axes of control via EtherCAT
- · Up to four synchronized axes electronic gear/cam and linear/circular interpolation
- · Standard-feature EtherCAT control network support
- Safety subsystem on EtherCAT
- · Standard-feature EtherNet/IP port
- · Up to eight NX units connectible on local bus including IO power supply modules and IO-Link master (See note)
- · Up to 16 remote NX I/O units connectible via couplers
- · High speed local bus for up to 256 IO points with expansion to 808 IO points
- · Up to two option boards connectible to add serial communications or analog I/O functionality
- · Battery-free operation
- · Fully conforms with IEC 61131-3 standard programming

Note: Additional power supply modules such as NX-PFXXXX maybe required to supply IO power and these are counted towards the total number of connectible modules.



Option Boards

- Serial Communications
- Analog I/O

NX I/O and Special Use Units

- Digital and Analog I/O
- Temperature Input
- Heater Burnout Detector
- Load Cell Input
- Position Interfaces: Encoder and SSI Input, Pulse Output
- IO-Link Master, Serial Communications
- Additional NX power supply modules


Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Windows is either registered trademarks or trademarks of Microsoft Corporation in the United Status and/or other countries.

EtherCAT[®] is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. EtherNet/IPTM is the trademarks of ODVA.

Other company names and product names in this document are the trademarks or registered trademarks of their respective companies. The product photographs and figures that are used in this catalog may vary somewhat from the actual products.

System Configuration

Basic System Configuration

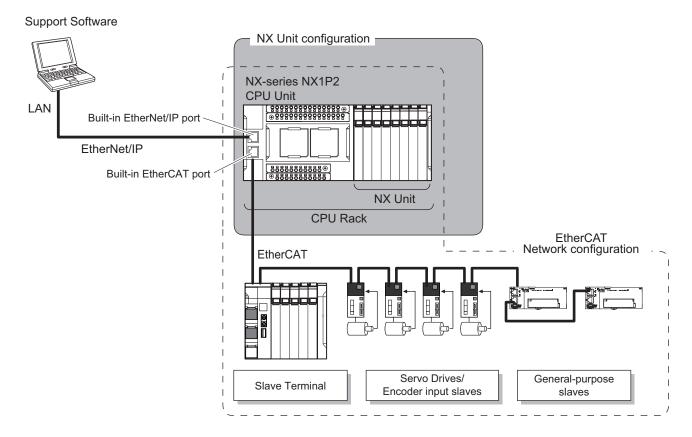

Interpreting Model Numbers

Model Number Legend (Not all models that can be represented with the model number legend can necessarily be produced.)

$$NX1\underline{P}_{1}^{2}-\underline{\square}_{2}\underline{\square}_{3}\underline{\square}_{4}\underline{D}_{5}\underline{\square}_{6}$$

No	Item	Symbol	Specifications
1	Туре	Р	DC power supply model with built-in I/O
2	Control anning	1	Motion control axes+
2	Control engine	9	No motion control axis (Single-axis position control only+)
3	Complyonized motion control avec *	0	2 axes (available only for models with motion control axes)
3	Synchronized motion control axes *	1	4 axes (available only for models with motion control axes)
4	Built-in I/O	24	24 (14 inputs, 10 outputs)
4	Built-in I/O	40	40 (24 inputs, 16 outputs)
5	Built-in input type	D	DC inputs
6	Duilt in output time	Т	NPN transistor outputs
O	Built-in output type	T1	PNP transistor outputs

^{*} The number of synchronized motion control axes when "Control engine" is "1". When "Control engine" is "9", "Synchronized motion control axes" is always "0" and those models will only perform "Single-axis position control".

- "+": Motion Control Axes includes:
- Point to point positioning
- Synchronized motion (gearing/camming)
- Multi-Axes coordinated motion (circular/linear interpolation)
- Axes grouping

Single-axis position control includes:

- Only point-to-point positioning
- No Synchronized motion (gearing/camming)
- No Multi-Axes coordinated motion (circular/linear interpolation)
- No Axes grouping

Ordering Information

International Standards

- The standards are abbreviated as follows: U: UL, U1: UL(Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus(Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, CE: EU Directives, RCM: Regulatory Compliance Mark, RCM: RCM: mark and KC: KC Registration.
- Contact your OMRON representative for further details and applicable conditions for these standards.

NX-series NX1P2 CPU Units

			Maximum	number of us	ed real axes	Total n	umber of	built-in I/O points		
Product Name	Program capacity	Memory capacity for variables		Motion control axes ¹	Single- axis position control ²		Number of input points	Number of output points	Model	Standards
NX1P2 CPU Unit			O avea	4 0 0 0 0	4 0000			16 points, NPN transistor	NX1P2-1140DT	
		32 KB	8 axes	4 axes	4 axes	40	24 points	16 points, PNP transistor ³	NX1P2-1140DT1	
		(Retained during power	6 axes	2 0400	axes 4 axes	points	ts 24 points	16 points, NPN transistor	NX1P2-1040DT	
	1.5 MB	interruptions) or 2 MB (Not	o axes	2 axes				16 points, PNP transistor ³	NX1P2-1040DT1	UC1, CE, RCM, KC
		retained during power interruptions)	4 0400	0 axes	4 axes	24	14 points	10 points, NPN transistor	NX1P2-9024DT	
		. ,	4 axes	o axes	4 axes	points	14 points	10 points, PNP transistor ³	NX1P2-9024DT1	

Note: One NX-END02 End Cover is provided with the NX1P2 CPU Unit.

- 1. Motion Control Axes includes:
 - Point to point positioning
 - Synchronized motion (gearing/camming)
 - Multi-Axes coordinated motion (circular/linear interpolation)
 - Axes grouping
- 2. Single-axis position control includes:
 - Only point-to-point positioning
 - No Synchronized motion (gearing/camming)
 - No Multi-Axes coordinated motion (circular/linear interpolation)
 - No Axes grouping
- 3. With the load short-circuit protection.

Option Boards (For CPU Units)

The Option Boards are mounted to the option board slot on the CPU Unit.

Product Name	Specification	Supported protocol	Model	Standards
Serial Communications Option Board	One RS-232C port. Transmission distance: 15 m. Connection type: Screwless clamping terminal block (9 terminals).	Host link, Modbus-RTU master, and	NX1W-CIF01	
- 000 - 000 - 000 - 000	One RS-422A/485 port. Transmission distance: 50 m. Connection type: Screwless clamping terminal block (5 terminals)	no-protocol	NX1W-CIF11	
Grows and the	One RS-422A/485 port (isolated). Transmission distance: 500 m. Connection type: Screwless clamping terminal block (5 terminals)		NX1W-CIF12	- UC1, CE,
Analog I/O Option Board	Analog input: 2 Voltage input: 0 to 10 V (Resolution: 1/4,000). Current input: 0 to 20 mA (1/2,000) Connection type: Screwless clamping terminal block (5 terminals)		NX1W-ADB21	RCM, KC
	Analog output: 2 Voltage output: 0 to 10 V (Resolution: 1/4,000) Connection type: Screwless clamping terminal block (3 terminals)		NX1W-DAB21V	
TO TO THE PARTY OF	Analog input: 2/Analog output: 2 Voltage input: 0 to 10 V (Resolution: 1/4,000). Current input: 0 to 20 mA (Voltage output: 0 to 10 V (Resolution: 1/4,000) Screwless clamping terminal block (8 terminals)	(1/2,000)	NX1W-MAB221	

NX Units

Up to eight NX Units can be connected to an NX1P2 CPU Unit.

Digital Input Units

				Specification			
Product Name	Number of points	Internal I/O common	Rated input voltage	I/O refreshing method	ON/OFF response time	Model	Standards
DC Input Unit			12 to 24 VDC	Switching Synchronous I/O	20 μs max./400 μs max.	NX-ID3317	
		NPN		refreshing and Free-Run refreshing		NX-ID3343	
	4 points		24 VDC	Input refreshing with input changed time only *	100 ns max./100 ns max.	NX-ID3344	
	4 points		12 to 24 VDC	Switching Synchronous I/O	20 μs max./400 μs max.	NX-ID3417	
		PNP		refreshing and Free-Run refreshing		NX-ID3443	UC1, N, L, CE, RCM,
(Screwless Clamping				Input refreshing with input changed time only *	100 ns max./100 ns max.	NX-ID3444	KC KC
Terminal Block,	8 points	NPN	24 VDC			NX-ID4342	
12 mm Width)	8 points	PNP		Switching Synchronous I/O	20 up may /400 up may	NX-ID4442	
	16 points	NPN		refreshing and Free-Run refreshing	20 μs max./400 μs max.	NX-ID5342	
	16 points	PNP				NX-ID5442	
DC Input Unit (M3 Screw Terminal	16 points	For both NPN/PNP	24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	20 μs max./400 μs max.	NX-ID5142-1	UC1, CE, RCM, KC
Block, 30 mm Width)							
DC Input Unit	16 points	For both	24 VDC	Switching Synchronous I/O	20 μs max./400 μs max.	NX-ID5142-5	UC1, CE,
(MIL Connector, 30 mm Width)	32 points	NPN/PNP	24 VBC	refreshing and Free-Run refreshing	EU po maximos po max	NX-ID6142-5	RCM, KC
DC Input Unit (Fujitsu Connector, 30 mm Width)	32 points	For both NPN/PNP	24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	20 μs max./400 μs max.	NX-ID6142-6	UC1, CE, RCM, KC
(Screwless Clamping Terminal Block, 12 mm Width)	4 points	200 to 240 V (170 to 264 V	/AC, 50/60 Hz VAC, ±3 Hz)	Free-Run refreshing	10 ms max./40 ms max.	NX-IA3117	UC1, N, CE, RCM, KC

^{*} To use input refreshing with input changed time, the EtherCAT Coupler Unit with unit version 1.1 or later and the Sysmac Studio version 1.07 or higher are required.

Digital output Units

			Specificatio	n			
Number of points	Internal I/O common	Maximum value of load current	Rated voltage	I/O refreshing method	ON/OFF response time	Model	Standards
2 points	NPN	0.5 A/point,	24 VDC	Output refreshing with	300 ns max./	NX-OD2154	
2 points	PNP	1 A/Unit	24 VDC	specified time stamp only *	300 ns max.	NX-OD2258	
	NDN		12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD3121	UC1, N, L,
	14114	0.5 A/point,			300 ns max./ 300 ns max.	NX-OD3153	CE, RCM, KC
4 points		2 A/Unit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD3256	
	PNP		24 VDC		300 ns max./ 300 ns max.	NX-OD3257	
		2 A/point, 8 A/Unit		I/O refreshing and Free-	0.5 ms max./ 1.0 ms max.	NX-OD3268	UC1, CE, RCM, KC
8 points	NPN		12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD4121	
o points	PNP	0.5 A/point,	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD4256	UC1, N, L, CE, RCM,
16 noints	NPN	4 A/Unit	12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD5121	KC KC
To points	PNP		24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD5256	
	NPN	0.5.4/2-124	12 to 24 VDC	Switching Synchronous	0.1 ms max./ 0.8 ms max.	NX-OD5121-1	UC1, CE,
16 points	PNP	5 A/Unit	24 VDC	Run refreshing	0.5 ms max./ 1.0 ms max.	NX-OD5256-1	RCM, KC
	NPN	0.5 A/point	12 to 24 VDC		0.1 ms max./ 0.8 ms max.	NX-OD5121-5	
16 points	PNP	2 A/Unit	24 VDC	Switching Synchronous	0.5 ms max./ 1.0 ms max.	NX-OD5256-5	UC1, CE,
00 int-	NPN	0.5 A/point,	12 to 24 VDC	Run refreshing	0.1 ms max./ 0.8 ms max.	NX-OD6121-5	RCM, KC
32 points	PNP	4 A/Unit	24 VDC		0.5 ms max./ 1.0 ms max.	NX-OD6256-5	
32 points	NPN	0.5 A/point, 2 A/common, 4 A/Unit	12 to 24 VDC	Switching Synchronous I/O refreshing and Free- Run refreshing	0.1 ms max./ 0.8 ms max.	NX-OD6121-6	UC1, CE, RCM, KC
	4 points 4 points 8 points 16 points 16 points 16 points	of points common	of points common of load current 2 points NPN	Number of points Internal I/O common Maximum value of load current Rated voltage 2 points NPN PNP 0.5 A/point, 1 A/Unit 24 VDC A points NPN PNP 12 to 24 VDC A points NPN PNP 2 A/point, 8 A/Unit 24 VDC A points NPN PNP 12 to 24 VDC 24 VDC A points NPN PNP 12 to 24 VDC 12 to 24 VDC A points NPN PNP 12 to 24 VDC 12 to 24 VDC A points NPN PNP 12 to 24 VDC 12 to 24 VDC A points NPN PNP 0.5 A/point, 5 A/Unit 12 to 24 VDC A points NPN PNP 0.5 A/point, 2 A/Unit 12 to 24 VDC A points NPN PNP 0.5 A/point, 2 A/common, 4 A/Unit 12 to 24 VDC A points NPN PNP 0.5 A/point, 2 A/common, 4 A/Unit 12 to 24 VDC	10 10 10 10 10 10 10 10	Number of points Internal I/O common of load current Voltage V/O refreshing method NOVOFF response time NovoFF	Number Internativo Common Commo

Machine Automation Controller NX1P

			Specifica	tion			
Product Name	Number of points Relay type		Maximum switching I/O refreshing capacity method		ON/OFF response time	Model	Standards
Relay Output Unit	N.C	N.O.	250 VAC/2 A (cosφ=1) 250 VAC/2 A (cosφ=0.4)	Free-Run	15 ms max./15 ms max.	NX-OC2633	UC1, N, L, CE, RCM, KC
Treasy output Since	2 points	N.O.+N.C.	24 VDC/2 A 4 A/Unit	refreshing	15 ms max./15 ms max.	NX-OC2733	UC1, N, CE, RCM, KC
(Screwless Clamping Terminal Block, 12 mm Width/24 mm Width)	8 points	N.O.	250 VAC/2 A (cosφ=1) 250 VAC/2 A (cosφ=0.4) 24 VDC/2 A 8 A/Unit	Free-Run refreshing	15 ms max./15 ms max.	NX-OC4633	UC1, CE, RCM, KC

^{*} To use input refreshing with input changed time, the EtherCAT Coupler Unit with unit version 1.1 or later and the Sysmac Studio version 1.07 or higher are required.

Digital Mixed I/O Units

			Specifica	ition				
Product Name	Number of points	Internal I/O common	Maximum value of load current	I/O refreshing method	ON/OFF response time	Model	Standards	
DC Input/Transistor Output Unit	Outputs: 16 points	Outputs: NPN Inputs: For both NPN/PNP	Outputs: 12 to 24 VDC Inputs: 24 VDC	Switching Synchronous I/O	Outputs: 0.1 ms max./0.8 ms max. Inputs: 20 µs max./400 µs max.	NX-MD6121-5	UC1, CE,	
(MIL Connector, 30 mm Width)	Inputs: 16 points	Outputs: PNP Inputs: For both NPN/PNP	Outputs: 24 VDC Inputs: 24 VDC	refreshing and Free-Run refreshing	Outputs: 0.5 ms max./1.0 ms max. Inputs: 20 μs max./400 μs max.	NX-MD6256-5	RCM, KĆ	
DC Input/Transistor Output Unit (Fujitsu Connector, 30 mm Width)	Outputs: 16 points Inputs: 16 points	Outputs: NPN Inputs: For both NPN/PNP	Outputs: 12 to 24 VDC Inputs: 24 VDC	Switching Synchronous I/O refreshing and Free-Run refreshing	Outputs: 0.1 ms max./0.8 ms max. Inputs: 20 μs max./400 μs max.	NX-MD6121-6	UC1, CE, RCM, KC	

Analog Input Units

					Specifi	cation							
Product Name	Number of points	Input range	Resolution	Conversion value, decimal number (0 to 100%)	Over all accuracy (25°C)	Input method	Conversion time	Input impedance	I/O refreshing method	Model	Standards		
Voltage Input Unit			1/8000	-4000 to 4000	±0.2%	Single- ended input	250 μs/		Free-Run refreshing	NX-AD2603			
	2 points				(full scale)	Differential Input	point		J. J	NX-AD2604			
			1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free- Run refreshing	NX-AD2608			
			1/8000	-4000 to 4000	±0.2%	Single- ended input	250 μs/		Free-Run refreshing	NX-AD3603			
	4 points	-10 to +10 V	1/8000	-4000 10 4000	(full scale)	Differential Input	point	1 MΩ min.	Tree-nurreneshing	NX-AD3604			
			1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free- Run refreshing	NX-AD3608			
			1/8000	-4000 to 4000	±0.2%	Single- ended input	250 μs/		Free-Run refreshing	NX-AD4603			
	8 points		170000	-4000 10 4000	(full scale)	Differential Input	point		Tree-Hurreneshing	NX-AD4604	_		
			1/30000	-15000 to 15000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free- Run refreshing	NX-AD4608	UC1, N, L, CE, RCM,		
Current Input Unit		points		1	1/8000	1/8000 0 to 8000	±0.2%	Single- ended input	250 μs/		Free-Run refreshing	NX-AD2203	KC KC
	2 points		170000	0 10 0000	(full scale)	Differential Input	point		Free-Run refreshing	NX-AD2204			
			1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point	252.0		Selectable Synchronous I/O refreshing or Free- Run refreshing	NX-AD2208		
4			1/8000	0 to 8000	±0.2%	Single- ended input	250 μs/	230 12	Free-Run refreshing	NX-AD3203			
	4 points	4 to 20 mA	1/0000	0 10 0000	(full scale)	Differential Input	point		Tree-Hurreneshing	NX-AD3204			
			1/30000	0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free- Run refreshing	NX-AD3208			
			1/8000	0 to 8000	±0.2%	Single- ended input	250 μs/		Eroo Bun refreshing	NX-AD4203			
	8 points			(full scale)		point		Free-Run refreshing	NX-AD4204				
		3 points		0 to 30000	±0.1% (full scale)	Differential Input	10 μs/ point		Selectable Synchronous I/O refreshing or Free- Run refreshing				

Analog Output Units

				Speci	fication				
Product Name	Number of points	Input range	Resolution	Output setting value, decimal number (0 to 100%)	Over all accuracy (25°C)	Conversion time	I/O refreshing method	Model	Standards
Voltage Output Unit	2 nointe		1/8000	-4000 to 4000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA2603	
	2 points	-10 to +10 V	1/30000	-15000 to 15000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA2605	
	4 mainte	-10 to +10 V	1/8000	-4000 to 4000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA3603	
	4 points		1/30000	-15000 to 15000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA3605	UC1, N, L,
Current Output Unit	O mainte		1/8000	0 to 8000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA2203	CE, RCM, KC
	2 points	4 to 20 mA	1/30000	0 to 30000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA2205	
100	4 nointe	4 10 20 MA	1/8000	0 to 8000	±0.3% (full scale)	250 μs/ point	Free-Run refreshing	NX-DA3203	
	4 points		1/30000	0 to 30000	±0.1% (full scale)	10 μs/ point	Selectable Synchronous I/O refreshing or Free-Run refreshing	NX-DA3205	

Machine Automation Controller NX1P

Temperature Input Units

Product				Specification					
Name	Number of points	Input type	Resolution (25°C)	Over all accuracy (25°C)	Conversion time	I/O refreshing method	Terminals	Model	Standards
Thermocouple Input type	2 points		0.1°C max.		250 ms/		16 Terminals	NX-TS2101	
	4 points		*1		Unit		16 Terminals x 2	NX-TS3101	
	2 points	Theymagayınla	0.01°C max.		temperature coefficient according to the input type and measurement temperature of NX-series Temperature Input Unit in the Sysmac Integrated Temperature Input Unit Unit Temperature Input Unit Unit Temperature Input Unit Temperature Input Unit Unit Unit Temperature Input Unit Unit Unit Unit Unit Temperature Input Unit Unit Unit Unit Unit Unit Unit Uni	16 Terminals	NX-TS2102		
	4 points	Thermocouple					16 Terminals x 2	NX-TS3102	UC1, N, L, CE, RCM, KC
	2 points		0.001°C max.	accuracy and			16 Terminals	NX-TS2104	
	4 points			according to the input			16 Terminals x 2	NX-TS3104	
Resistance Thermometer	2 points			temperature of NX-series			16 Terminals	NX-TS2201	
Input type	4 points		0.1°C max.	in the Sysmac Integrated Catalog (Cat. No. P072).			16 Terminals x 2	NX-TS3201	
	2 points	Resistance Thermometer	0.0400	Odialog (Odi: No. 1 072).	10 ms/		16 Terminals	NX-TS2202	
	4 points	(Pt100/Pt1000, three-wire) *2	0.01°C max.		Unit		16 Terminals x 2	NX-TS3202	
	2 points		0.00400		60 ms/		16 Terminals	NX-TS2204	
	4 points		0.001°C max.		Unit		16 Terminals x 2	NX-TS3204	1

Heater Burnout Detection Units

				Specification					
	CT input	t section							
Product Name	Number of inputs	Maximum heater current	Number of outputs	Internal I/O common	Maximum load current	Rated voltage	I/O refreshing method	Model	Standards
Heater Burnout Detection Unit	4	50 AAC	4	NPN	0.1 A/point,	12 to 24 VDC	Free-Run	NX-HB3101	UC1, CE,
	4	30 AAC	4	PNP	0.4 A/Unit	24 VDC	refreshing	NX-HB3201	RCM, KC

Load Cell Input Unit

			Specification				
Load Cell Input	Number of Model Standards points	Conversion cycle	I/O refreshing method *	Load cell excitation voltage	Input range	Model	Standards
Load Cell Input Unit	1	125 μs	Free-Run refreshing Synchronous I/O refreshing Task period prioritized refreshing	5 VDC ± 10%	-5.0 to 5.0 mV/V	NX-RS1201	UC1, CE, RCM, KC

^{*} Refer to the NX-series Load Cell Input Unit User's Manual (W565) for detailed information on I/O refresh cycle.

^{*1.} The resolution is 0.2°C max. when the input type is R, S, or W. *2. The NX-TS2202 and NX-TS3202 only supports Pt100 three-wire sensor.

Position interface: Incremental Encoder Input Units

				Specification			
Product Name	Number of channels	External inputs	Maximum response frequency	I/O refreshing method	Number of I/O entry mappings	Model	Standards
Incremental Encoder Input Unit	1 (NPN)	3 (NPN)				NX-EC0112	UC1, CE, RCM, KC
Onit	1 (PNP)	3 (PNP)	500 kHz	Free-Run refreshing Synchronous I/O refreshing	1/1	NX-EC0122	UC1, N, L, CE, RCM, KC
	1	3 (NPN)	4 MHz			NX-EC0132	UC1, CE, RCM, KC
1000000		3 (PNP)				NX-EC0142	UC1, N, L, CE, RCM, KC
	2 (NPN)					NX-EC0212	UC1, CE, RCM, KC
	1 (PNP)	None	500 kHz		2/2	NX-EC0222	UC1, N, L, CE, RCM, KC

Position interface: SSI Input Units

			Specification	on				
Product Name	Number of channels	Input/Output form	Maximum data length	Encoder power supply	Type of external connections	Model	Standards	
SSI Input Unit		EIA standard RS-422-A	32 bits	24 VDC, 0.3 A/CH	Screwless push-in terminal block (12 terminals)	NX-ECS112	UC1, N, L,	
	2	EIA standard RS-422-A	32 bits	24 VDC, 0.3 A/CH	Screwless push-in terminal block (12 terminals)	NX-ECS212	CE, RCM, KC	

Position interface: Pulse Output Units

				Specific	cation				
Product Name	Number of channels *1	External inputs	External outputs	Maximum pulse output speed	I/O refreshing method	Number of I/O entry mappings	Control output interface	Model	Standards
Pulse Output Unit	1 (NPN)	2 (NPN)	1 (NPN)	- 500 kpps	1/1	Open collector	NX-PG0112	UC1, N, CE, RCM, KC	
	1 (PNP)	2 (PNP)	1 (PNP)	- 500 кррs	Synchronous I/O	1/1	output	NX-PG0122	UC1, N, L, CE, RCM, KC
THE STATE OF THE S		5 inputs/CH (NPN)	3 outputs/CH (NPN)		refreshing • Task period		Line driver output	NX-PG0232-5	
	2	5 inputs/CH (PNP)	3 outputs/CH (PNP)	4 Mara	prioritized refreshing *2	2/2		NX-PG0242-5	UC1, CE, RCM, KC
	4	5 inputs/CH (NPN)	3 outputs/CH (NPN)	4 Mpps		4/4		NX-PG0332-5	
	4	5 inputs/CH (PNP)	3 outputs/CH (PNP)			4/4		NX-PG0342-5	

^{*1.} This is the number of pulse output channels.
*2. Unit version 1.2 or later and an NX-ECC203 EtherCAT Coupler Unit are required.

Machine Automation Controller NX1P

Communications Interface Units

Product Name	Serial interface	External connection terminals	Number of serial ports	Communications protocol	Model	Standards
Communications Interface Unit	RS-232C				NX-CIF101	
	RS-422A/485	Screwless Clamping Terminal Block	1 port	No-protocol Signal lines	NX-CIF105	UL, CE, RCM, KC
	RS-232C	D-Sub connector	2 ports		NX-CIF210	

IO-Link Master Unit

Product Name	Number of IO-Link ports I/O refreshing method I/O connection terminals				Standards	
IO-Link Master Unit						
Jiii Vannenneer.	4	Free-Run refreshing	Screwless clamping terminal block	NX-ILM400	UC1, CE, RCM, KC	

System Units

Product Name	Specification	Model	Standards	
Additional NX Unit Power Supply Unit	NX-PD1000	UC1, N, L, CE, RCM, KC		
Additional I/O Power Supply Unit	Power supply voltage: 5 to 24 VDC (4.5 to 28.8 VDC) I/O power feed maximum current: 4 A	NX-PF0630	UC1, N, L,	
34 34 34 34 34	Power supply voltage: 5 to 24 VDC (4.5 to 28.8 VDC) I/O power feed maximum current: 10 A *			
I/O Power Supply Connection Unit	Number of I/O power terminals: IOG: 16 terminals Current capacity of I/O power terminal: 4 A/terminal max.	NX-PC0010	UC1, N, L, CE, RCM, KC	
	Number of I/O power terminals: IOV: 16 terminals Current capacity of I/O power terminal: 4 A/terminal max.	NX-PC0020	UC1, N, L, CE, RCM, KC	
\$ \$ \$ \$ \$ \$	Number of I/O power terminals: IOV: 8 terminals, IOG: 8 terminals Current capacity of I/O power terminal: 4 A/terminal max	NX-PC0030	UC1, N, L, CE, RCM, KC	
Shield Connection Unit	Number of shield terminals: 14 terminals (The following two terminals are functional ground terminals.)	NX-TBX01	UC1, N, L, CE, RCM, KC	

^{*} Use the NX-PF0730 at 4 A or less on the CPU Rack where the NX1P2 CPU Unit is mounted.

EtherCAT Coupler Units

NX-series Units on previous pages and NX-series Safety Units can be used by connecting to the EtherCAT Coupler Unit that is connected to the built-in EtherCAT port on the NX1P2 CPU Unit.

Product Name	Communications cycle in DC Mode	Current consumption	Maximum I/O power supply current	Model	Standards	
EtherCAT Coupler Unit *1	250 to 4000 μs *2	- 1.45 W max.	4 A	NX-ECC201	UC1, N, L, CE,	
	250 to 4000 μs *2	1.45 W Max.	10 A	NX-ECC202	KC	
	125 to 10000 μs *2	1.25 W max.	IOA	NX-ECC203	UC1, CE, KC	

^{*1.} One End Cover NX-END01 is provided with the EtherCAT Coupler Unit.

Safety CPU Units

			Specification				
Appearance	Maximum number of safety I/O points			I/O refreshing method	Unit version	Model	Standards
	256 points	512 KB	32	Free-Run refreshing	Ver.1.1	NX-SL3300	Refer to the NX-series Safety Control Units in the
	1024 points	2048 KB	128	Free-Run refreshing	Ver.1.1	NX-SL3500	Sysmac Integrated Catalog (Cat. No. P072).

Note: Connect the Safety CPU Unit to the NX1P2 CPU Unit via the EtherCAT Coupler Unit.

Safety Input Units

				Spe	cification					
Appearance	Number of safety input points	Number of test output points	Internal I/O common	Rated input voltage	OMRON special safety input devices	Number of safety slave connections	I/O refreshing method	Unit version	Model	Standards
	4 points	2 points	Sinking inputs (PNP)	24 VDC	Can be connected.	1	Free-Run refreshing	Ver.1.1	NX-SIH400	Refer to the NX-series Safety Control Units in the
	8 points	2 points	Sinking inputs (PNP)	24 VDC	Cannot be connected.	1	Free-Run refreshing	Ver.1.0	NX-SID800	Sysmac Integrated Catalog (Cat. No. P072).

Note: Connect the Safety CPU Unit to the NX1P2 CPU Unit via the EtherCAT Coupler Unit.

Safety Output Units

			Specific	cation					Standards	
Appearance	Number of Model safety output points	Internal I/O common	Maximum load current	Rated voltage	Number of safety slave connections	I/O refreshing method	Unit version	Model		
The state of the s	2 points	Sourcing outputs (PNP)	2.0 A/point, 4.0 A/Unit at 40°C, and 2.5A/Unit at 55°C The maximum load current depends on the installation orientation and ambient temperature.	24 VDC	1	Free-Run refreshing	Ver.1.0	NX-SOH200	Refer to the NX-series Safety Control Units in the Svsmac	
	4 points	Sourcing outputs (PNP)	0.5 A/point and 2.0 A/Unit	24 VDC	1	Free-Run refreshing	Ver.1.0	NX-SOD400	Sysmac Integrated Catalog (Cat. No. P072).	

Note: Connect the Safety CPU Unit to the NX1P2 CPU Unit via the EtherCAT Coupler Unit.

^{*2.} This depends on the specifications of the EtherCAT master. For example, the values are as follows when the EtherCAT Coupler Unit is connected to the built-in EtherCAT port on an NJ5-series CPU Unit: 500 μs, 1,000 μs, 2,000 μs, and 4,000 μs. Refer to the *NJ/NX-series CPU Unit Built-in EtherCAT Port User' Manual* (Cat. No. W505) for the specifications of the built-in EtherCAT ports on NJ/NX-series CPU Units. This also depends on the unit configuration.

Automation Software Sysmac Studio

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually.

Each model of licenses does not include any DVD.

	Specification				Standards	
Product Name		Number of licenses	Media	Model		
	The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of	(Media only)	DVD	SYSMAC-SE200D		
Sysmac Studio Standard Edition Ver.1.□□	machine automation controllers including the NJ/NX-series CPU Units, NY-series Industrial PC, EtherCAT Slave, and the HMI. Sysmac Studio runs on the following OS. Windows 7 (32-bit/64-bit version)/Windows 8 (32-bit/64-bit version)/Windows 8.1 (32-bit/64-bit version)/Windows 10 (32-bit/64-bit version) The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer). For details, refer to the Sysmac Integrated Catalog (Cat. No. P072).	1 license *		SYSMAC-SE201L		

^{*} Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

Recommended EtherCAT Communications Cables

Use Straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (braiding and aluminum foil tape) for EtherCAT.

Cabel with Connectors

Item	Appearance	Recommended manufacturer	Cable length (m)	Model
			0.3	XS6W-6LSZH8SS30CM-Y
Cable with Connectors on Both Ends (RJ45/RJ45)			0.5	XS6W-6LSZH8SS50CM-Y
Standard RJ45 plugs type *1		0117011	1	XS6W-6LSZH8SS100CM-Y
Wire Gauge and Number of Pairs: AWG27, 4-pair Cable Cable Sheath material: LSZH *2		OMRON	2	XS6W-6LSZH8SS200CM-Y
Cable color: Yellow *3			3	XS6W-6LSZH8SS300CM-Y
			5	XS6W-6LSZH8SS500CM-Y
			0.3	XS5W-T421-AMD-K
		OMRON	0.5	XS5W-T421-BMD-K
Cable with Connectors on Both Ends (RJ45/RJ45) Rugged RJ45 plugs type *1			1	XS5W-T421-CMD-K
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable Cable color: Right blue	***		2	XS5W-T421-DMD-K
Cable Color. Hight blue			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
		0.1501	0.5	XS5W-T421-BM2-SS
Cable with Connectors on Both Ends (M12 Straight/M12 Straight)			1	XS5W-T421-CM2-SS
Shield Strengthening Connector cable *4			2	XS5W-T421-DM2-SS
M12/Smartclick Connectors Wire Gauge and Number of Pairs: AWG22, 2-pair Cable		OMRON	3	XS5W-T421-EM2-SS
Cable color: Black			5	XS5W-T421-GM2-SS
			10	XS5W-T421-JM2-SS
			0.5	XS5W-T421-BMC-SS
Cable with Connectors on Both Ends (M12 Straight/RJ45)			1	XS5W-T421-CMC-SS
Shield Strengthening Connector cable *4 M12/Smartclick Connectors		OMPON	2	XS5W-T421-DMC-SS
Rugged RJ45 plugs type Wire Gauge and Number of Pairs: AWG22, 2-pair Cable		OMRON	3	XS5W-T421-EMC-SS
Cable color: Black			5	XS5W-T421-GMC-SS
			10	XS5W-T421-JMC-SS

^{*1.} Standard type cables length 0.2, 0.3, 0.5, 1, 1.5, 2, 3, 5, 7.5, 10, 15 and 20 m are available.

Rugged type cables length 0.3, 0.5, 1, 2, 3, 5, 10 and 15 m are available. For details, refer to the *XS5/XS6 Industrial Ethernet Connectors Datasheet* (Cat. No. G019).

^{*2.} The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.

^{*3.} Cables colors are available in blue, yellow, or Green.

^{*4.} For details, contact your OMRON representative.

Cables / Connectors Wire Gauge and Number of Pairs: AWG24, 4-pair Cable

Item	Appearance	Recommended manufacturer	Model
		Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5×4P *
Cables		Kuramo Electric Co.	KETH-SB *
		SWCC Showa Cable Systems Co.	FAE-5004 *
RJ45 Connectors		Panduit Corporation	MPS588-C *

^{*} We recommend you to use above cable and connector together.

Wire Gauge and Number of Pairs: AWG22, 2-pair Cable

Item	Appearance	Recommended manufacturer	Model	
Cables		Kuramo Electric Co.	KETH-PSB-OMR *	
Capies		JMACS Japan Co., Ltd.	PNET/B *	
RJ45 Assembly Connector			XS6G-T421-1 *	

Note: Connect both ends of cable shielded wires to the connector hoods.

* We recommend you to use above cable and connector together.

Optional Products/Maintenance Products/DIN Track Accessories

Product Name		Specification	Model	Standards
EtherCAT junction	3 ports. Power supply voltage: 20.4 to 28. Current consumption (A): 0.08	8 VDC (24 VDC -15 to +20%).	GX-JC03	CE. UC1
slaves *1	6 ports. Power supply voltage: 20.4 to 28. Current consumption (A): 0.17	8 VDC (24 VDC -15 to +20%).	GX-JC06	— CE, UC1
		3 ports. Current consumption (A): 0.22 Power supply connector included.	W4S1-03B	UC, CE
Industrial Switching Hubs for EtherNet/IP and	Quality of Service (QoS): EtherNet/IP control data priority Failure detection:	5 ports. Current consumption (A): 0.22 Power supply connector included.	W4S1-05B	OC, CE
Ethernet *2	Broadcast storm and LSI error detection 10/100BASE-TX, Auto-Negotiation	5 ports. Current consumption (A): 0.22 Failure detection Power supply connector and Connector for informing error included.	W4S1-05C	CE
Memory Cards	SD memory card, 2 GB	HMC-SD291	N, L, CE	
Memory Cards	SD memory card, 4 GB	HMC-SD491	CE	
Battery	The battery is not mounted when the product is shipped. To turn OFF the power supply to the equipment for a certain period of time by using the clock data for programming, event logs, etc., you need a separately-sold battery to retain the clock data. Refer to the <i>Battery</i> page for details.			
End Cover (For NX1P2 CPU Unit) *3	Must be connected to the right end of the One End Cover is provided with the CPU		NX-END02	
End Cover (For EtherCAT Coupler Unit) *3	One End Cover is provided with the Ether	CAT Coupler Unit.	NX-END01	
DIN Tracks	Length: 0.5 m; Height: 7.3 mm		PFP-50N	
DIN HACKS	Length: 1 m; Height: 7.3 mm		PFP-100N	
End Plate	There are 2 stoppers provided with CPU Units and I/O Interface Units as standard accessories to secure the Units on the DIN Track.			
Unit/Terminal Block Coding Pins	For 10 Units (Terminal Block: 30 pins, Unit: 30 pins)			
DIN Track Insulation Spacers	A Spacer to insulate the control panel from To insulate the EtherCAT Slave Terminal	n the DIN Track. from the control panel, use Din Track Insulation Spacers.	NX-AUX01	

			Specification			
Product Name	No. of terminals	Terminal number indications	Ground terminal mark	Terminal current capacity	Model	Standards
8 A/B				NX-TBA082		
	12	A/B			NX-TBA122	
	16	A/B	None		NX-TBA162	
Terminal Blocks	12	C/D		10 A	NX-TBB122	
	16	C/D			NX-TBB162	
	8	A/B	Provided		NX-TBC082	
	16	A/B	Flovided		NX-TBC162	

^{*1.} EtherCAT junction slaves cannot be used for EtherNet/IP and Ethernet.

*2. Industrial switching hubs cannot be used for EtherCAT.

*3. Use the NX-END02 End Cover only for the CPU Unit and the NX-END01 End Cover only for the EtherCAT Coupler Unit.

Electrical and Mechanical Specifications

	ltem		Specification	
Model		NX1P2-1□40DT□	NX1P2-9024DT□	
Enclosure		Mounted in a panel		
Dimensions (mm) *1		154 × 100 × 71 mm (W×H×D)	130 × 100 × 71 mm (W×H×D)	
Weight *2		NX1P2-1□40DT: 650 g NX1P2-1□40DT1: 660 g	NX1P2-9024DT: 590 g NX1P2-9024DT1: 590 g	
	Power supply voltage	24 VDC (20.4 to 28.8 VDC)		
	Unit power consumption *3	NX1P2-1□40DT: 7.05 W NX1P2-1□40DT1: 6.85 W	NX1P2-9024DT: 6.70 W NX1P2-9024DT1: 6.40 W	
	Inrush current *4	For cold start at room temperature: 10 A max./0.1 ms max. and 2.5 A max./150 ms max.		
	Current capacity of power supply terminal *5	4 A max.		
	Isolation method	No isolation: between the Unit power supply terminal and internal circuit		
	NX Unit power supply capacity	10 W max.		
Power supply to the NX Unit power supply	NX Unit power supply efficiency	80 %		
роме: зарріу	Isolation method	No isolation: between the Unit power supply terminal and NX Unit power supply		
I/O Power Supply to NX Units		Not provided *6		
	Communication connector	RJ45 for EtherNet/IP Communications RJ45 for EtherCAT Communications		
	Screwless clamping terminal block	For Unit power supply input, groundin For output signal: 1 (Removable)	g, and input signal: 1 (Removable)	
External connection terminals	Output terminal (service supply)	Not provided		
	RUN output terminal	Not provided		
	NX bus connector	8 NX Units can be connected		
	Option board slot	2 1		

^{*1.} Includes the End Cover, and does not include projecting parts.

General Specifications

	Item	Specification	
Enclosure		Mounted in a panel	
Grounding method		Ground to less than 100 Ω .	
	Ambient operating temperature	0 to 55°C	
	Ambient operating humidity	10% to 95% (with no condensation)	
	Atmosphere	Must be free from corrosive gases.	
	Ambient storage temperature	-25 to 70°C (excluding battery)	
Operating environment	Altitude	2,000 m max.	
	Pollution degree	2 or less: Conforms to JIS B 3502 and IEC 61131-2.	
	Noise immunity	2 kV on power supply line (Conforms to IEC 61000-4-4.)	
	Overvoltage category	Category II: Conforms to JIS B 3502 and IEC 61131-2.	
	EMC immunity level	Zone B	
	Vibration resistance	Conforms to IEC 60068-2-6. 5 to 8.4 Hz with 3.5-mm amplitude, 8.4 to 150 Hz, acceleration of 9.8 m/s² 100 min each in X, Y, and Z directions (10 sweeps of 10 min each = 100 min total)	
	Shock resistance	Conforms to IEC 60068-2-27. 147 m/s², 3 times in X, Y, and Z directions	
Battery	Life	5 years (Power ON time rate 0% (power OFF))	
Jailei y	Model	CJ1W-BAT01 (sold separately)	
	EU Directives	EN 61131-2	
Annliechle etenderde *	cULus	Listed UL 61010-2-201 and ANSI/ISA 12.12.01	
Applicable standards *	Shipbuilding Standards		
	Other than the above.	KC	

^{*} Refer to the OMRON website (http://www.ia.omron.com/) or consult your OMRON representative for the most recent applicable standards for each model.

^{*2.} Includes the End Cover. The weight of the End Cover is 82 g.

^{*3.} Includes the SD Memory Card and Option Board. The NX Unit power consumption to NX Units is not included.

^{*4.} The inrush current may vary depending on the operating condition and other conditions. Therefore, select fuses, breakers, and external power supply devices that have enough margin in characteristic and capacity, considering the condition under which the devices are used.

^{*5.} The amount of current that can be passed constantly through the terminal. Do no exceed this current value when you use a through-wiring for the Unit power supply.

^{*6.} When the type of the I/O power supply to NX Units you use is the supply from NX bus, an Additional I/O Power Supply Unit is required. The maximum I/O power supply current from an Additional I/O Power Supply Unit is 4 A. Refer to the NX-series NX1P2 CPU Unit Hardware User's Manual (Cat. No. W578) for details.

Machine Automation Controller NX1P

Performance Specifications

					NX1P2-		
		Item		11□□□□/ 11□□□□1	10□□□□/ 10□□□□1	90□□□/ 90□□□□1	
Processing	Instruction	LD instruction		3.3 ns	*		
ime	execution times	Math instruction	ns (for long real data)	70 ns or more			
	_	Size		1.5 MB			
	Program capacity *1	Quantity	Number of POU definitions	450			
	•	Quantity	Number of POU Instances	1,800			
	Memory capacity	Retain	Size	32 kB			
		attributes	Number of variables	5,000			
	for variables *2	No Retain	Size	2 MB			
Programming		attributes	Number of variables	90,000			
	Data types	Number of data	types	1,000			
	Memory for CJ-	CIO Area		0 to 6,144 channel (0	to 6,143) *3		
	series Units (Can	Work Area		0 to 512 channel (W0	to W511) *3		
	be specified with	Holding Area		0 to 1,536 channel (H	I0 to H1,535) *4		
	AT specifications for variables.)	DM Area		0 to 16,000 channel (D0 to F15,999) *4		
	·	EM Area	EM Area		1	1	
	Number of controlled axes *5	Maximum numb	er of controlled axes	12 axes	10 axes	4 axes	
			Motion control axes*	8 axes	6 axes		
			Single-axis position control ⁺	4 axes	4 axes	4 axes	
		Maximum numb	er of used real axes	8 axes	6 axes	4 axes	
			Motion control axes	4 axes	2 axes		
			Single-axis position control	4 axes	4 axes	4 axes	
		Maximum number of axes for linear interpolation axis control		4 axes per axes group			
Motion control		Number of axes for circular interpolation axis control		2 axes per axes group			
	Maximum number o	Maximum number of axes groups					
	Motion control perio	od		Same as the period for	or primary periodic tasl	k	
		Number of cam	Maximum points per cam table	65,535 points			
	Cams	data points	Maximum points for all cam tables	262,140 points			
		Maximum numb	er of cam tables	80 tables			
	Position units	•		Pulse, mm, μm, nm, degree, and inch			
	Override factors			0.00% or 0.01% to 500.00%			
	Number of ports			1			
	Physical layer			10BASE-T, 100BASE-TX			
uilt-in	Frame length			1,514 bytes max.			
uilt-in therNet/IP	Media access metho	od		CSMA/CD			
ort	Modulation			Baseband			
	Topology			Star			
	Baud rate			100 Mbps/s (100BAS	E-TX)		
	Transmission media	1		STP (shielded, twiste higher	d-pair) cable of Ethern	et category 5, 5e or	
	Maximum transmiss	sion distance betw	veen Ethernet switch and node	100 m			
	Maximum number o	f cascade connec	etions	There are no restriction	ons if an Ethernet switc	ch is used.	

- *1. Execution objects and variable tables (including variable names)
- *2. Memory used for CJ-series Units is included.
- *3. The value can be set in 1 ch increments. The value is included in the total size of variables without a Retain attribute.
 *4. The value can be set in 1 ch increments. The value is included in the total size of variables with a Retain attribute.
- *5. Refer to the NJ/NX-series CPU Unit Motion Control User's Manual (Cat. No. W507) for the description of this term.
 - "+": Motion Control Axes includes:
 - Point to point positioning
 - Synchronized motion (gearing/camming)
 - Multi-Axes coordinated motion (circular/linear interpolation)
 - Axes grouping

Single-axis position control includes:

- Only point-to-point positioning
- No Synchronized motion (gearing/camming)
- No Multi-Axes coordinated motion (circular/linear interpolation)
- No Axes grouping

					NX1P2-		
		Item		11□□□□/ 11□□□□1	10□□□□/ 10□□□□1	90□□□/ 90□□□□1	
		Maximum numb	er of connections	32	•	•	
		Packet interval *			Can be set for each connection. 2 to 10,000 ms in 1-ms increments		
		Permissible com	nmunications band	3,000 pps *7 (including	ng heartbeat)		
		Maximum number of tag sets					
		Tag types		Network variables CIO/WR/HR/DM			
Built-in	CIP service: Tag	Number of tags	per connection (i.e., per tag set)	8 (7 tags if Controller	status is included in th	e tag set.)	
EtherNet/IP	data links (cyclic	Maximum numb	er of tags	256			
oort	communications)	Maximum link da	ata size per node tags)	19,200 bytes			
		+	ize per connection	600 bytes			
			er of registrable tag sets	32	a a th		
		Maximum tag se	t size	(1 connection = 1 tag 600 bytes	,		
				-	if Controller status is in	cluded in the tag set	
		Multi-cast packe	t filter *8	Supported.			
		Class 3 (number	r of connections)	32 (clients plus server)			
	CIP message service:	UСММ	Maximum number of clients that can communicate at one time	32			
Explicit messages		(non-connection type)	Maximum number of servers that can communicate at one time	32			
	Number of TCP soc				30		
	Communications st	andard		IEC 61158 Type12			
EtherCAT master sp Physical layer		erCAT master specifications			k Motion Control comp	oliant)	
		er		100BASE-TX			
	Modulation			Baseband			
	Baud rate			100 Mbps (100BASE-TX)			
	Duplex mode			Auto			
	Topology			Line, daisy chain, and	d branching		
Built-in	Transmission media	a			Twisted-pair cable of category 5 or higher (double-shielded straight cable with aluminum tape and braiding)		
EtherCAT port	Maximum transmiss	ion distance between nodes		100 m			
	Maximum number o	slaves		16			
	Range of node addr	esses that can be	set	1 to 192			
	Maximum process of	data size		Input: 1,434 bytes Output: 1,434 bytes However, the maximum number of process data frames is 1.			
	Maximum process of	data size per slave	,	Input: 1,434 bytes Output: 1,434 bytes			
	Communications cy	rcle		2,000 μs to 8,000 μs in 250-μs increments			
	Sync jitter			1 μs max.			
	Communications m	ethod		half duplex			
Serial Communications	Synchronization			Start-stop			
Serial	Baud rate			1.2/2.4/4.8/9.6/19.2/3	8.4/57.6/115.2 kbps		
Communications Option Board)	Transmission distar	nce		Depends on Option Board.			
,	Supported protocol			Host link, Modbus-R7	ΓU master, and no-prot	tocol	
	Maximum number	Maximum numb mounted to the	er of NX Units that can be CPU Unit	8			
Unit configuration	of connectable Units	Maximum numb	er of NX Units for entire controller	24 On CPU Rack: 8 On EtherCAT Slave Terminals: 16			
		Model			supply for DC input is	built into the CPU Ur	
	Power supply	Power OFF detection time		2 to 8 ms	-		
Option Board	Number of slots			2	2	1	
			ts	24	24	14	
Built-in I/O		Number of point	ts	16	16	10	
Dant III I/O	Output	Load short-circu	uit protection		9024DT: Not provided (1/9024DT1: Provided (
Internal clock	Accuracy			At ambient temperatu At ambient temperatu	ure of 55°C: -3.5 to 0.5 ure of 25°C: -1.5 to 1.5 ure of 0°C: -3 to 1 min	min error per month min error per month	
				1			

^{*6.} Data will be refreshed at the set interval, regardless of the number of nodes.

*7. "pps" means packets per second, i.e., the number of communications packets that can be sent or received in one second.

*8. As the EtherNet/IP port implements the IGMP client, unnecessary multi-cast packets can be filtered by using an Ethernet switch that supports IGMP Snooping.

Function Specifications

		Item		NX1P2
	Function			I/O refresh and the user program are executed in units that are called tasks. Tasks are used to specify execution conditions and execution priority.
		Periodically Executed Tasks	Maximum Number of Primary Periodic Tasks	1
Tasks		Lieuteu Tasks	Maximum Number of Periodic Tasks	2
		Conditionally	Maximum Number of Event Tasks	32
		Executed Tasks	Execution Condition	When Activate Event Task instruction is executed or when condition expression for variable is met
	Setup	System Service Monitoring Settings		Not supported
		Programs		POUs that are assigned to tasks.
	POUs (programorganization	Function Blocks		POUs that are used to create objects with specific conditions.
	units)	Functions		POUs that are used to create an object that determine unique outputs for the inputs, such as for data processing.
	Programming Languages	Types		Ladder diagrams * and structured text (ST)
	Namespaces			Namespaces are used to create named groups of POU definitions.
	Variables	External Access of variables	Network Variables	The function which allows access from the HMI, host computers, or other Controllers
			Boolean	BOOL
			Bit Strings	BYTE, WORD, DWORD, LWORD
			Integers	INT, SINT, DINT, LINT, UINT, USINT, UDINT, ULINT
			Real Numbers	REAL and LREAL
		Data types	Durations	TIME
			Dates	DATE
			Times of Day	TIME_OF_DAY
			Date and Time	DATE_AND_TIME
			Text Strings	STRING
		Derivative Data Typ	es	Structures, Unions, and Enumerations
			Function	A derivative data type that groups together data with different data types.
Programming	Data Types		Maximum Number of Members	2048
. rogramming		Structures	Nesting Maximum Levels	8
			Member Data Types	Basic data types, structures, unions, enumerations, array variables
			Specifying Member Offsets	You can use member offsets to place structure members at any memory locations.
			Function	A derivative data type that enables access to the same data with different data types.
		Union	Maximum Number of Members	4
			Member Data Types	BOOL, BYTE, WORD, DWORD, and LWORD
		Enumeration	Function	A derivative data type that uses text strings called enumerators to express variable values.
			Function	An array is a group of elements with the same data type. You specify the number (subscript) of the element from the first element to specify the element.
		Array	Maximum Number of Dimensions	3
Da	Data Type Attributes	Specifications	Maximum Number of Elements	65535
			Array Specifications for FB Instances	Supported
		Range Specifications		You can specify a range for a data type in advance. The data type can take only values that are in the specified range.
		Libraries		You can use user libraries.
	Control Modes			Position control, Velocity control, and Torque control
Motion Control	Axis Types			Servo axes, Virtual servo axes, Encoder axes, and Virtual encoder axes
	Positions that can be	managed		Command positions and actual positions

		Item		NX1P2
				Positioning is performed for a target position that is specified with an absolute value.
		0	Relative Positioning	Positioning is performed for a specified travel distance from the command current position.
		Single-axis Position Control	Interrupt Feeding	Positioning is performed for a specified travel distance from the position where an interrupt input was received from an external input.
			Cyclic Synchronous Absolute Positioning	A positioning command is output each control period in Position Control Mode.
		Single-axis	Velocity Control	Velocity control is performed in Position Control Mode.
		Velocity Control	Cyclic Synchronous Velocity Control	A velocity command is output each control period in Velocity Control Mode.
		Single-axis Torque Control	Torque Control	The torque of the motor is controlled.
			Starting Cam Operation	A cam motion is performed using the specified cam table.
			Ending Cam Operation	The cam motion for the axis that is specified with the input parameter is ended.
			Starting Gear Operation	A gear motion with the specified gear ratio is performed between a master axis and slave axis.
		Single-axis	Positioning Gear Operation	A gear motion with the specified gear ratio and sync position is performed between a master axis and slave axis.
		Synchronized Control	Ending Gear Operation	The specified gear motion or positioning gear motion is ended.
			Synchronous Positioning	Positioning is performed in sync with a specified master axis.
			Master Axis Phase Shift	The phase of a master axis in synchronized control is shifted.
			Combining Axes	The command positions of two axes are added or subtracted and the result is output as the command position.
		Single-axis	Powering the Servo	The Servo in the Servo Drive is turned ON to enable axis motion.
Motion	Single Axes	Manual Operation	Jogging	An axis is jogged at a specified target velocity.
Control	Siligie Axes		Resetting Axis Errors	Axes errors are cleared.
			Homing	A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.
			Homing with specified parameters	The parameters are specified, the motor is operated, and the limit signals, home proximity signal, and home signal are used to define home.
			High-speed Homing	Positioning is performed for an absolute target position of 0 to return to home.
			Stopping	An axis is decelerated to a stop.
			Immediately Stopping	An axis is stopped immediately.
			Setting Override Factors	The target velocity of an axis can be changed.
		Auxiliary	Changing the Current Position	The command current position or actual current position of an axis can be changed to any position.
		Functions for Single-axis	Enabling External Latches	The position of an axis is recorded when a trigger occurs.
		Control	Disabling External Latches	The current latch is disabled.
			Zone Monitoring	You can monitor the command position or actual position of an axis to see when it is within a specified range (zone).
			Enabling Digital Cam Switches	You can turn a digital output ON and OFF according to the position of an axis
			Monitoring Axis Following Error	You can monitor whether the difference between the command positions or actual positions of two specified axes exceeds a threshold value.
			Resetting the Following Error	The error between the command current position and actual current position is set to 0.
			Torque Limit	The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.
			Command Position Compensation	The function which compensate the position for the axis in operation.
			Start Velocity	You can set the initial velocity when axis motion starts.

		Item		NX1P2
			Absolute Linear Interpolation	Linear interpolation is performed to a specified absolute position.
			Relative Linear Interpolation	Linear interpolation is performed to a specified relative position.
		Multi-axes Coordinated Control	Circular 2D Interpolation	Circular interpolation is performed for two axes.
		Someon	Axes Group Cyclic Synchronous Absolute Positioning	A positioning command is output each control period in Position Control Mode.
			Resetting Axes Group Errors	Axes group errors and axis errors are cleared.
	Axes Groups		Enabling Axes Groups	Motion of an axes group is enabled.
			Disabling Axes Groups	Motion of an axes group is disabled.
		Auxiliary Functions for	Stopping Axes Groups	All axes in interpolated motion are decelerated to a stop.
		Multi-axes Coordinated Control	Immediately Stopping Axes Groups	All axes in interpolated motion are stopped immediately.
			Setting Axes Group Override Factors	The blended target velocity is changed during interpolated motion.
			Reading Axes Group Positions	The command current positions and actual current positions of an axes group can be read.
			Changing the Axes in an Axes Group	The Composition Axes parameter in the axes group parameters can be overwritten temporarily.
			Setting Cam Table Properties	The end point index of the cam table that is specified in the input parameter is changed.
		Cams	Saving Cam Tables	The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU Unit.
	Common Items		Generating Cam Tables	The cam table is generated from the cam property and cam node that is specified in input parameters.
		Parameters	Writing MC Settings	Some of the axis parameters or axes group parameters are overwritten temporarily.
Motion Control			Changing Axis Parameters	You can access and change the axis parameters from the user program.
Control		Count Modes		You can select either Linear Mode (finite length) or Rotary Mode (infinite length).
		Unit Conversions	Automatic	You can set the display unit for each axis according to the machine.
		Acceleration/ Deceleration Control	Acceleration/ Deceleration Control	Jerk is set for the acceleration/deceleration curve for an axis motion or axes group motion.
			Changing the Acceleration and Deceleration Rates	You can change the acceleration or deceleration rate even during acceleration or deceleration.
		In-Position Check		You can set an in-position range and in-position check time to confirm when positioning is completed.
		Stop Method		You can set the stop method to the immediate stop input signal or limit input signal.
		Re-execution of Mo Instructions	tion Control	You can change the input variables for a motion control instruction during execution and execute the instruction again to change the target values during operation.
		Multi-execution of Management Instructions (Buffer		You can specify when to start execution and how to connect the velocities between operations when another motion control instruction is executed during operation.
	Auxiliary Functions	Continuous Axes G (Transition Mode)	roup Motions	You can specify the Transition Mode for multi-execution of instructions for axes group operation.
		(**************************************	Software limits	The movement range of an axis is monitored.
			Following Error	The error between the command current value and the actual current value is monitored for each axis.
		Monitoring Functions	Velocity, Acceleration Rate, Deceleration Rate, Torque, Interpolation Velocity, Interpolation Acceleration Rate, and Interpolation Decleration Rate	You can set and monitor warning values for each axis and each axes group.
		Absolute Encoder S	Support	You can use an OMRON 1S-series Servomotor or G5-series Servomotor with an Absolute Encoder to eliminate the need to perform homing at startup.
		Input Signal Logic I	nversion	You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal, or home proximity input signal.

		Item		NX1P2
Motion Control	External Interface Sig	gnals		The Servo Drive input signals listed on the right are used. Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal, and interrupt input signal
Unit (I/O)	EtherCAT slaves	Maximum Number	of Slaves	16
Management	CJ-Series Units	Maximum Number	of Units	Not supported
	Peripheral USB Port			Not supported
		Communications P	rotocol	TCP/IP and UDP/IP
		CIP Communications	Tag Dta Links	Programless cyclic data exchange is performed with the devices on the EtherNet/IP network.
		Service	Message Communications	CIP commands are sent to or received from the devices on the EtherNet/IP network.
			Socket Services	Data is sent to and received from any node on Ethernet using the UDP or TCP protocol. Socket communications instructions are used.
	Built-in EtherNet/IP Port		FTP Client	Files are transferred via FTP from the CPU Unit to computers or Controllers at other Ethernet nodes. FTP client communications instructions are used.
		TCP/IP Applications	FTP Server	Files can be read from or written to the SD Memory Card in the CPU Unit from computers at other Ethernet nodes.
		Applications	Automatic Clock Adjustment	Clock information is read from the NTP server at the specified time or at a specified interval after the power supply to the CPU Unit is turned ON. The internal clock time in the CPU Unit is updated with the read time.
			SNMP Agent	Built-in EtherNet/IP port internal status information is provided to network management software that uses an SNMP manager.
		Supported Services	Process Data Communications	A communications method to exchange control information in cyclic communications between the EtherCAT master and slaves. This communications method is defined by CoE.
Communications			SDO Communications	A communications method to exchange control information in noncyclic event communications between EtherCAT master and slaves. This communications method is defined by CoE.
		Network Scanning		Information is read from connected slave devices and the slave configuration is automatically generated.
	EtherCAT Port	DC (Distributed Clo	ock)	Time is synchronized by sharing the EtherCAT system time among all EtherCAT devices (including the master).
				The frames that are sent by the master and the frames that are received by the master can be saved. The data that is saved can be viewed with WireShark or other applications.
		Enable/Disable Settings for Slaves		The slaves can be enabled or disabled as communications targets.
		Disconnecting/Connecting Slaves		Temporarily disconnects a slave from the EtherCAT network for maintenance such as for replacement of the slave, and then connects the slave again.
		Supported Application Protocol	СоЕ	SDO messages of the CAN application can be sent to slaves via EtherCAT
	Serial Communication	Protocol		Host link (FINS), no-protocol, and Modbus-RTU master (when connected to the Serial Communications Option Board)
	Communications Inst	tructions		FTP client instructions, CIP communications instructions, socket communications instructions, SDO message instructions, noprotocol communications instructions, and Modbus RTU protocol instructions
Operation Management	RUN Output Contacts	5		Not supported
	Event Logs	Function		Events are recorded in the logs
System	Mandan N	System Event Log		576 *2
Management	Maximum Number of Events	Access Event Log		528 *3
		User-defined Event	Log	512
	Online Editing	Single		Programs, function blocks, functions, and global variables can be changed online. More than one operators can change POUs individually via network.
	Forced Refreshing	eshing		The user can force specific variables to TRUE or FALSE.
	. J. Co. Homosimig		Device Variables for EtherCAT Slaves	64
Debugging		Maximum Number of Forced Variables	Device Variables for CJ-series Units and Variables with AT Specifications	Not supported
	MC Test Run			Motor operation and wiring can be checked from the Sysmac Studio.
	Synchronizing			The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online.
	Differentiation Monito	oring		You can monitor when a variable changes to TRUE or changes to FALSE.

		Item		NX1P2
			Single Triggered Trace	When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically.
		Types	Continuous Trace	Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
		Maximum Number Traces	of Simultaneous Data	2
		Maximum Number	of Records	10000
		Maximum Number	of Sampled Variables	48 variables
Debugging	Data Tracing	Timing of Sampling	3	Sampling is performed for the specified task period, at the specified time, or when a sampling instruction is executed.
		Triggered Traces		Trigger conditions are set to record data before and after an event.
			Trigger Conditions	When BOOL variable changes to TRUE or FALSE Comparison of non-BOOL variable with a constant Comparison Method: Equals (=), Greater than (>), Greater than or equals (≥), Less Than (<), Less than or equals (≤), Not equal (≠)
			Delay	Trigger position setting: A slider is used to set the percentage of sampling before and after the trigger condition is met.
	Simulation			The operation of the CPU Unit is emulated in the Sysmac Studio.
			Levels	Major faults, partial faults, minor faults, observation, and information
		Controller Errors	Maximum number of message languages	9 (Sysmac Studio) 2 (NS-series PT)
Reliability functions	Self-Diagnosis	Heav defined	Function	User-defined errors are registered in advance and then records are created by executing instructions.
		User-defined Errors	Levels	8
			Maximum number of message languages	9
	Protecting Software Assets and Preventing Operating Mistakes	CPU Unit Names and Serial IDs		When going online to a CPU Unit from the Sysmac Studio, the CPU Unit name in the project is compared to the name of the CPU Unit being connected to.
			User Program Transfer with no Restoration Information	You can prevent reading data in the CPU Unit from the Sysmac Studio.
		Protection	CPU Unit Write Protection	You can prevent writing data to the CPU Unit from the Sysmac Studio or SD Memory Card.
Security			Overall Project File Protection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio.
			Data Protection	You can use passwords to protect POUs on the Sysmac Studio.
		Verification of Operation Authority		Online operations can be restricted by operation rights to prevent damage to equipment or injuries that may be caused by operating mistakes.
			Number of Groups	5
		Verification of User Program Execution ID		The user program cannot be executed without entering a user program execution ID from the Sysmac Studio for the specific hardware (CPU Unit).
	Storage Type			SD Memory Card, SDHC Memory Card
		Automatic Transfer Card	r from SD Memory	When the power supply to the Controller is turned ON, the data that is stored in the autoload directory of the SD Memory Card is transferred to the Controller.
SD Memory Card functions		Program transfer fr	rom SD Memory Card	With the specification of the system-defined variable, you can transfer a program that is stored in the SD Memory Card to the Controller.
	Application	SD Memory Card O	peration Instructions	You can access SD Memory Cards from instructions in the user program.
		File Operations fro	m the Sysmac Studio	You can perform file operations for Controller files in the SD Memory Card and read/write general-purpose document files on the computer.
		SD Memory Card L Detection	ife Expiration	Notification of the expiration of the life of the SD Memory Card is provided in a system-defined variable and event log.
			CPU Unit front panel DIP switch	Backup, verification, and restoration operations are performed by manipulating the front-panel DIP switch on the CPU Unit.
		Operating	Specification with system-defined variables	Backup and verification operations are performed by manipulating system-defined variables.
Backing up data	SD Memory Card backups	methods	SD Memory Card Window in Sysmac Studio	Backup and verification operations are performed from the SD Memory Card Window of the Sysmac Studio.
			Special instruction	The special instruction is used to backup data.
		Protection	Disabling backups to SD Memory Cards	Backing up data to a SD Memory Card is prohibited.
	Sysmac Studio Conti	roller backups		The Sysmac Studio is used to backup, restore, or verify Controller data.


^{*1.} Inline ST is supported. (Inline ST is ST that is written as an element in a ladder diagram.)
*2. This is the total of 512 events for the CPU Unit and 64 events for the NX Unit.
*3. This is the total of 512 events for the CPU Unit and 16 events for the NX Unit.

Input Terminal Block

Terminal Arrangement


The description is given for each CPU Unit model.

NX1P2-1□40DT□

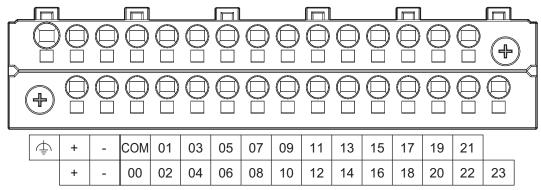

Symbol	Terminal name	Description	Reference	
<u> </u>	Functional ground terminal	The functional ground terminal. Connect the ground wire to the terminal.	Refer to the <i>NX-series NX1P2</i>	
+/-	Unit power supply terminals	These terminals are connected to the Unit power supply. The + terminals and - terminals are internally connected to each other.	CPU Unit Hardware User's Manual (Cat. No. W578) for details.	
COM	Common terminal	Common terminal for the input circuits		
00 to 15	Input terminals	General-purpose input A	Refer to the <i>Input Specifications</i> page.	
16 to 23	Input terminals	General-purpose input B	page.	

NX1P2-9024DT□

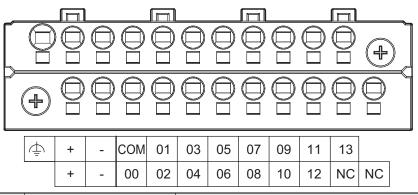

Symbol	Terminal name	Terminal name Description			
<u></u>	Functional ground terminal	The functional ground terminal. Connect the ground wire to the terminal.	Refer to the <i>NX-series NX1P2</i>		
+/-	Unit power supply terminals	These terminals are connected to the Unit power supply. The + terminals and - terminals are internally connected to each other.	CPU Unit Hardware User's Manual (Cat. No. W578) for details.		
COM	Common terminal	Common terminal for the input circuits	Refer to the Input Specifications		
00 to 13	Input terminals	General-purpose input A	page.		
NC	NC	Do not connect anything.			

Input Specifications

The specifications depends on the input terminal numbers of the model.

Item	Specif	fication			
Input type	General-purpose input A	General-purpose input B			
Input terminal number	NX1P2-1□40DT□: 00 to 15 NX1P2-9024DT□: 00 to 13	NX1P2-1□40DT□: 16 to 23 NX1P2-9024DT□: None			
Internal I/O common	For both NPN/PNP				
Input voltage	24 VDC (15 to 28.8 VDC)				
Connected sensor	Two-wire or three-wire sensors				
Input impedance	4.0 kΩ	4.3 kΩ			
Input current	5.8 mA typical	5.3 mA typical			
ON voltage	15 VDC min.				
OFF voltage/current	5 VDC max./1 mA max.				
ON response time *1	2.5 µs max.	1 ms max.			
OFF response time *1	2.5 µs max.	1 ms max.			
ON/OFF filter time *2	No filter, 0.25 ms, 0.5 ms, 1 ms (default), 2 ms, 4 n	ms, 8 ms, 16 ms, 32 ms, 64 ms, 128 ms, 256 ms			
Circuit configuration	Input indicator 15 (13) 4.0 kΩ Isolation circuits COM	Input indicator 23 4.3 kΩ 16 COM Internal circuits			


^{*1.} These values are the fixed response time needed by the hardware. A value from 0 to 32 ms (default: 1 ms) that is set on the Support Software is added to these values.
*2. Set the filter time for every 4 points.

Output Terminal Block

Terminal Arrangement

The description is given for each CPU Unit model.

NX1P2-1□40DT

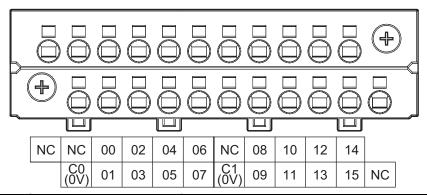

Symbol	Terminal name	Description	Reference
C0 (0V), C1 (0V)	Common terminal	Connected to the 0-V side of the I/O power supply. C0 (0V) and C1 (0V) are independent from each other inside the CPU Unit.	Refer to the <i>Output Specifications</i> page.
00 to 15	Output terminals	NPN (sinking) type output	
NC	NC	Do not connect anything.	

NX1P2-1□40DT1

The appearance of the terminal block is the same as NX1P2-1 \square 40DT.

NC	C0 (+V)	00	02	04	06	C1 (+V)	08	10	12	14	
	0V0	01	03	05	07	0V1	09	11	13	15	NC

Symbol	Terminal name	Description	Reference
C0 (+V), C1 (+V)	Common terminal	Connected to the 24-V side of the I/O power supply. C0 (+V) and C1 (+V) are independent from each other inside the CPU Unit.	
0V0, 0V1	0 V terminal	Supplies 0 V for the internal circuits for driving. 0V0 and 0V1 are independent from each other inside the CPU Unit.	Refer to the <i>Output Specifications</i> page.
00 to 15	Output terminals	PNP (sourcing) type output with the load short-circuit protection function	
NC	NC	Do not connect anything.	

NX1P2-9024DT

The appearance of the terminal block is the same as NX1P2-1 \square 40DT.

NC	NC	00	02	04	06	08	NC	NC	NC	NC	
	(0V)	01	03	05	07	09	NC	NC	NC	NC	NC

Symbol	Terminal name	Description	Reference
C0 (0V)	Common terminal	Connected to the 0-V side of the I/O power supply.	Refer to the Output Specifications
00 to 09	Output terminals	NPN (sinking) type output	page.
NC	NC	Do not connect anything.	

NX1P2-9024DT1

The appearance of the terminal block is the same as NX1P2-1□40DT.

NC	(+V)	00	02	04	06	08	NC	NC	NC	NC	
	0V0	01	03	05	07	09	NC	NC	NC	NC	NC

Symbol	Terminal name	Description	Reference
C0 (+V)	Common terminal	Connected to the 24-V side of the I/O power supply.	
0V0	0 V terminal	Refer to the Output Specifications	
00 to 09	Output terminals	PNP (sourcing) type output with the load short-circuit protection function	page.
NC	NC	Do not connect anything.	

Output Specifications

The models of the CPU Units are divided according to the following two output types: the NPN (sinking) type and PNP (sourcing) type. There is no difference in specifications between the models with different output terminal numbers.

H	Speci	ication		
Item	NX1P2-□□□□DT	NX1P2-□□□□DT1		
Internal I/O common	NPN (sinking)	PNP (sourcing)		
	12 to 24 VDC (10.2 to 28.8 VDC), 300 mA per point	24 VDC (15 to 28.8 VDC), 300 mA per point		
Maximum switching capacity	NX1P2-1□40DT□: 1.8 A/common (3.6 A/Unit) NX1P2-9024DT□: 2.4 A/common (2.4 A/Unit)			
Minimum switching capacity	12 to 24 VDC (10.2 to 28.8 VDC), 1 mA	24 VDC (15 to 28.8 VDC), 1 mA		
Leakage current	0.1 mA max.			
Residual voltage	1.5 V max.	_		
ON response time	0.1 ms max.	0.5 ms max.		
OFF response time	0.8 ms max.	1.0 ms max.		
Current consumption from I/O power supply *1		NX1P2-1□40DT1: 40 mA/common NX1P2-9024DT1: 50 mA/common		
Load short-circuit protection	Not provided	Provided *2		
Circuit configuration	Output indicator Output indicator 15 Outp	NX1P2-1 40DT1 Output indicator OUT Output indicator OUT OUT OUT OUT OUT OUT OUT OU		
	Output indicator Output indic	NX1P2-9024DT1 Output indicator C0 (+V) O00 NX1P2-9024DT1 Output indicator O00 O00 O00 O00 O00 O00 O00 O		

^{*1.} The internally consumed current from I/O power supply. The current flows from the common terminal Cn (+V) to the 0Vn terminal. The current consumption of any external load is excluded.

^{*2.} The load short-circuit protection is provided for each point of the PNP (sourcing) type output terminal. It protects the output circuits when a load short circuit occurs.

Part Names and Functions

(K) (I) (J)

(E) (F)

(G)(H)

(M) and (N) details


CPU Unit

 
(A)(B)(C)


(P)(O)(N)(M) (L)

The following two models have the different numbers of the option board slots and built-in I/O points, but the names and functions of their parts are the same. Refer to the *Ordering Information* page for the CPU Unit models and specifications such as the number of built-in I/O points.



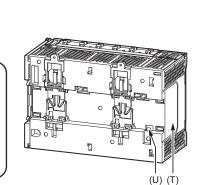



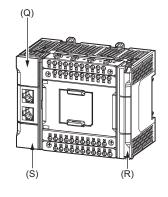

Letter	Name	Function
Α	SD Memory Card connector	Connects the SD Memory Card to the CPU Unit.
В	DIP switch	Used in Safe Mode *1 or when backing up data *2. Normally, turn OFF all of the pins.
С	SD Memory Card power supply switch	Turns OFF the power supply so that you can remove the SD Memory Card.
D	DIN Track mounting hook	These hooks are used to mount the Unit to a DIN Track.
E	Input terminal block	This terminal block is used for wiring for the Unit power supply, grounding, and built-in input.
F	Input indicator	Shows the operation status of the built-in input.
G	Unit hookup guides	These guides are used to mount an NX Unit or End Cover.
Н	NX bus connector	This connector is used to connect the CPU Unit to the NX Unit on the right of the CPU Unit.
I	Option board slot 1 (left), Option board slot 2 (right)	Remove the covers of the slots and mount Option Boards. For the models with 24 built-in I/O points, only one slot is provided. Keep the removed covers in a safe place.
J	Output indicator	Shows the operation status of the built-in output.
K	Output terminal block	This terminal block is used to wire the built-in output.
L	CPU Unit operation status indicator	Shows the operation status of the CPU Unit.
М	Battery connector	Connector to mount the backup battery that is sold separately.
N	Battery slot	Used to mount the backup battery that is sold separately.
0	Built-in EtherCAT port (port 2)	Connects the built-in EtherCAT with an Ethernet cable.
Р	Built-in EtherNet/IP port (port 1)	Connects the built-in EtherNet/IP with an Ethernet cable.
Q	SD Memory Card cover	Cover for the SD Memory Card and DIP switch. The cover swings upward.
R	End Cover	Cover to protect the CPU Unit and NX Units. One End Cover is provided with the CPU Unit.
S	Battery cover	Cover for the battery slot. Remove this cover when you mount/remove the battery.
Т	ID information indication	Shows the ID information of the CPU Unit.
U	DIN Track contact plate	This plate is connected internally to the functional ground terminal on the terminal block.


^{*1.} To use Safe Mode, set the DIP switch as shown below and then turn ON the power supply to the Controller.



If the power supply to the Controller is turned ON with the CPU Unit in Safe Mode, the CPU Unit will start in PROGRAM mode. Use the Safe Mode if you do not want to execute the user program when the power supply is turned ON or if it is difficult to connect the Sysmac Studio. For information on Safe Mode, refer to the *NJ/NX-series Troubleshooting Manual* (Cat. No. W503).

^{*2.} Refer to the NJ/NX-series CPU Unit Software User's Manual (Cat. No. W501) for details on backing up data.

Option Board

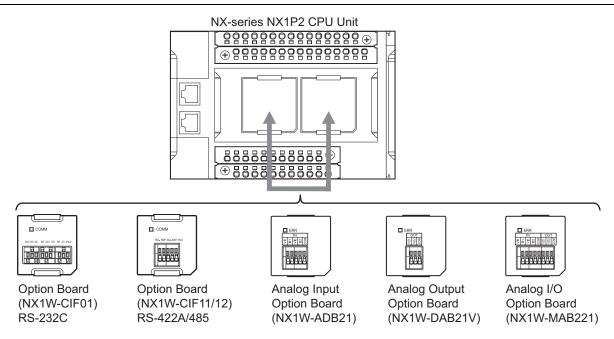


Specifications of Serial Communications Option Board


Item		Specification		
Model	NX1W-CIF01	NX1W-CIF11	NX1W-CIF12	
Communications port	One RS-232C port	One RS-422A/485 port	One RS-422A/485 port (isolated)	
Communications method	Half-duplex			
Synchronization method	Start-stop synchronization	Start-stop synchronization		
Baud rate	1.2/2.4/4.8/9.6/19.2/38.4/57.6/115.	5.2 kbps		
Transmission distance	15 m	50 m	500 m	
Supported protocol	Host link, Modbus-RTU master, an	Modbus-RTU master, and no-protocol		
Connection type	Screwless clamping terminal block (9 terminals)	k Screwless clamping terminal block (5 terminals)		
Applicable wire size	AWG28 to 20	AWG24 to 20		
Dimensions (mm) *1	35.9 × 35.9 × 13.5 (W×H×D)			
Weight	16 g	13 g	14 g	
Power consumption		Included in the CPU Unit power consumption. The Option Board power consumption is included in the definition of the CPU Unit power consumption.		
Isolation method	No isolation		Isolation *2	

^{*1.} Projecting parts such as a terminal block is not included. When the Option Board is mounted to the CPU Unit, it protrudes through the CPU Unit surface. Refer to the NX-series NX1P2 CPU Unit Hardware User's Manual (Cat. No. W578) for details.

RS-232C Option Board (NX1W-CIF01)

 Communications status indicator

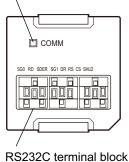



Abbreviation	Signal name	1/0
SG0	Signal grounding	
RD	Receive data	Input
SD	Send data	Output
ER	Data terminal ready	Output
SG1	Signal grounding	
DR	Data set ready	Input
RS	Send request	Output
CS	Data can be sent	Input
SHLD Shield		

Note: 1. As the Option Board does not have a 5 V power supply terminal, it cannot be connected to external converters such as an CJ1W-CIF11 and NT-AL001, or an NV3W-M□20L Programmable Terminal.

2. The terminal block is not removable.

^{*2.} The terminals are isolated from the internal circuits of the CPU Unit.


RS-422A/485 Option Board (NX1W-CIF11/NX1W-CIF12)

Front Back (CIF11) Back (CIF12)


Communications status indicator



RS-422A/485 terminal block

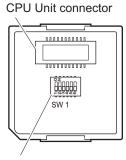

Operation setting DIP switch (SW1)

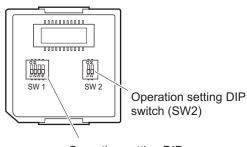


Operation setting DIP switch (SW1)

Note: All pins are turned OFF by default.

Use a narrow-tipped tool such as a flat-blade screwdriver to change the settings of the DIP switches.

RS-422A/485 Terminal Block

RDA- RDB+ SDA- SDB+ SHLD

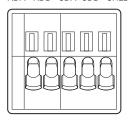

Abbreviation	Four-wire type selected		Two-wire type selected		
Abbreviation	Signal name	I/O	Signal name	I/O	
RDA-	Reception data -	Innut	Communication data -	I/O *	
RDB+	Reception data +	Input	Communication data +		
SDA-	Transmission data -	Outro	Communication data -	I/O *	
SDB+	Transmission data +	Output	Communication data +	1/0	
SHLD	Shield				

^{*} For two-wire connection, either the RDA-/RDB+ pair or SDA-/SDB+ pair can be used.


Specifications of Analog I/O Option Board

	Item			Sp	ecification			
Model		NX1W-ADB21		NX1W-DAB21V		NX1W-MAB221		
1/0		Analog input		Analog output	Analog output		Analog I/O	
					0 to 10 V	O words total		
	Current input	0 to 20 mA				0 to 20 mA	2 words total	
	Voltage output			0 to 10 V	2 words	0 to 10 V	2 words	
Connection type		Screwless clamping terminal block (5 terminals)		Screwless clamping terminal block (3 terminals)		Screwless clamping terminal block (8 terminals)		
F	Applicable wire size	AWG24 to 20						
	Dimensions (mm) *	$35.9 \times 35.9 \times 2$	28.2 (W×H×D)					
Weight		24 g	24 g		26 g			
Power consumption		Included in the CPU Unit power consumption. The Option Board power consumption is included in the definition of the CPU Unit power consumption.			consumption.			
Isolation method		No isolation						

^{*} Projecting parts such as a terminal block is not included. When the Option Board is mounted to the CPU Unit, it protrudes through the CPU Unit surface. Refer to the NX-series NX1P2 CPU Unit Hardware User's Manual (Cat. No. W578) for details.

Analog Input Option Board (NX1W-ADB21)

Status indicator

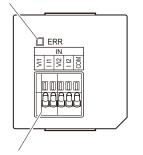

Analog Input Terminal Array

	IN				
MI	111	V12	12	M 00	

Abbreviation	Signal name	
V I1	Voltage input 1	
I I1	Current input 1	
V I2	Voltage input 2	
I I2	Current input 2	
COM	Input common	

Note: When you use the current input, be sure to short-circuit V I1 with I I1, and short-circuit V I2 with I I2.

Analog input terminal block


Analog Input Specifications

14-		Specif	fication	
Item		Voltage input	Current input	
Input method	t l	Single-ended input	Single-ended input	
Input range		0 to 10 V	0 to 20 mA	
Input conver	sion range	0 to 10.24 V	0 to 30 mA	
Absolute ma rating	ximum	-1 to 15 V	-4 to 30 mA	
Input impeda	ance	200 kΩ min.	Approx. 250 Ω	
Resolution		1/4,000 (full scale)	1/2,000 (full scale)	
Overall	25°C	±0.5% (full scale)	±0.6% (full scale)	
accuracy	0 to 55°C	±1.0% (full scale)	±1.2% (full scale)	
Averaging pi	rocessing	Not provided		
Conversion t	time	Internal sampling time: 2 ms per point *		

^{*} Refer to the NX-series NX1P2 CPU Unit Built-in I/O and Option Board User's Manual (Cat. No. W579) for information on refresh time.

Analog Output Option Board (NX1W-DAB21V)

Status indicator

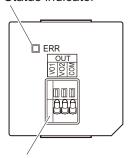

Analog output terminal block

Analog Output Terminal Array



Abbreviation	Signal name
VO1	Voltage output 1
VO2	Voltage output 1
COM	Output common


Analog Output Specifications

Item		Specification		
		Voltage output	Current output	
Output range		0 to 10 V		
Output conversion range		0 to 10.24 V		
Allowable loa	d resistance	2 kΩ min.		
Output imped	lance	$0.5~\Omega$ max.		
Resolution		1/4,000 (full scale: 4,000)		
Overall	25°C	5°C ±0.5% (full scale)		
accuracy	0 to 55°C	±1.0% (full scale)		
Conversion time		Internal sampling time: 2 ms per po	int *	

Refer to the *NX-series NX1P2 CPU Unit Built-in I/O and Option Board User's Manual* (Cat. No. W579) for information on refresh time.

Analog I/O Option Board (NX1W-MAB221)

Status indicator

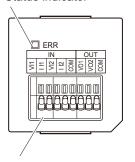

Analog output terminal block

Analog I/O Terminal Array

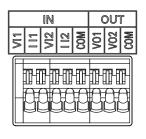


Abb	reviation	Signal name
	VI1	Voltage output 1
	II1	Current input 1
IN	VI2	Voltage input 2
	II2	Current input 2
	СОМ	Input common
	VO1	Voltage output 1
OUT	VO2	Voltage output 2
	СОМ	Output common

Note: When you use the current input, be sure to short-circuit VI1 with II1, and short-circuit VI2 with II2.

Analog I/O Specifications


	Item		Specification	
item			Voltage I/O	Current I/O
	Input meth	od	Single-ended input	Single-ended input
	Input range	•	0 to 10 V	0 to 20 mA
	Input conve	ersion range	0 to 10.24 V	0 to 30 mA
Analog	Absolute maximum rating		-1 to 15 V	-4 to 30 mA
input section	Input impedance		200 kΩ min.	Approx. 250 Ω
300000	Resolution		1/4,000 (full scale)	1/2,000 (full scale)
	Overall	25°C	±0.5% (full scale)	±0.6% (full scale)
	accuracy	0 to 55°C	±1.0% (full scale)	±1.2% (full scale)
	Averaging processing		Not provided	
	Output range		0 to 10 V	
	Output conversion range		0 to 10.24 V	
Analog	Allowable load resistance		$2 \text{ k}\Omega$ min.	
output	Output impedance		$0.5~\Omega$ max.	
section	Resolution		1/4,000 (full scale)	
	Overall	25°C	±0.5% (full scale)	
	accuracy	0 to 55°C	±1.0% (full scale)	
Conversion	n time		Internal conversion time: 6 ms	(Total of 4 channels) *

^{*} Refer to the *NX-series NX1P2 CPU Unit Built-in I/O and Option Board User's Manual* (Cat. No. W579) for information on refresh time.

NX Unit Configuration

CPU Rack

The CPU Rack consists of an NX-series NX1P2 CPU Unit, NX Units, and an End Cover. Up to eight NX Units can be connected.

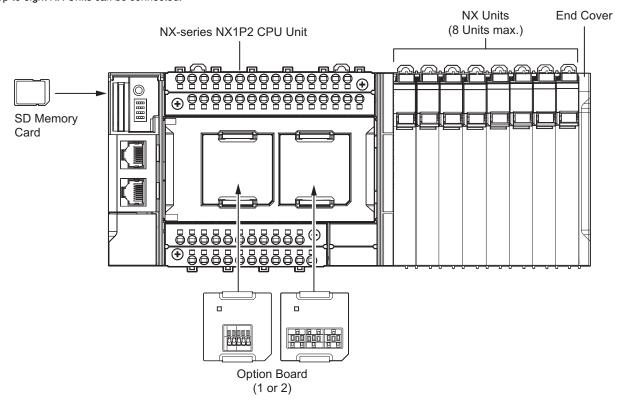

Configuration		Remarks	
NX-series NX1P2 CPU Unit		One required for every CPU Rack.	
End Cover		Must be connected to the right end of the CPU Rack. One End Cover is provided with the CPU Unit.	
NX Unit	Digital I/O Unit	Up to eight Units can be mounted to each Expansion Rack.	
	Analog I/O Unit	 For the NX Units connectable to the CPU Unit, refer to the Ordering Information page. You cannot mount NX-series Safety Control Units on the CPU Unit and use them. Use NX-series Safety Control Units as a subsystem on EtherCAT. 	
	System Unit		
	Position Interface Unit		
	Communication Interface Unit	Refer to the NX-series Data Reference Manual (Cat. No. W525. Revision 11 or later)	
	Load Cell Input Unit	for information such as restrictions on the NX Units.	
Option Board	Serial Communications Option Board	One or two Option Boards can be connected to the CPU Unit.	
	Analog I/O Option Board		
SD Memory Card		Install as required.	

NX Unit Power Supply System

Refer to the NX-series NX1P2 CPU Unit Hardware User's Manual (Cat. No. W578) for the NX Unit power supply system.

Battery

The battery is not mounted when the product is shipped.

To turn OFF the power supply to the equipment for a certain period of time by using the clock data for programming, event logs, etc., you need a separately-sold battery to retain the clock data.

The following describes the purpose of the battery mounting, the battery model, and the battery-related error detection and clock data settings.

Purpose of the Battery Mounting

The battery is used to retain the clock data while the power is not supplied to the CPU Unit. The clock data is retained by the built-in capacitor whether the battery is mounted or not, but the retention period depends on the continuous power-ON time of the CPU Unit, as shown below.

Continuous power-ON time of CPU Unit *	Retention period during no power supply at an ambient temperature of 40°C	
100 hours	Approx. 10 days	
8 hours	Approx. 8 days	
1 hour	Approx. 7 days	

^{*} This is equivalent to the time to charge a built-in capacitor in which no electric charge is accumulated.

When you use the clock data for programming, use a battery if you cannot ensure the continuous power-ON time shown above or the power-OFF time is longer than the above power-ON time.

The following data (other than the clock data) is retained in the built-in non-volatile memory, so they are not lost even if the battery and built-in capacitor are fully discharged.

- User program
- Set values
- · Variables retained during power interruption
- Event logs

Battery Model

The table below shows the model and specifications of the battery that can be used.

Model	Appearance	Specification
CJ1W-BAT01		Service life: 5 years Refer to the <i>NX-series NX1P2 CPU Unit Hardware User's Manual</i> (Cat. No. W578) for details. The clock information is retained during power interruptions.

Machine Automation Controller NX1P

Sysmac Studio


The Sysmac Studio is a Support Software package that provides an integrated development environment to design, program, debug, and maintain Sysmac NJ/NX-series Controllers.

Configuration


With an NX1P2 CPU Unit, you can connect the Sysmac Studio online in the following ways.

Connection with EtherNet/IP

• 1:1 Connection

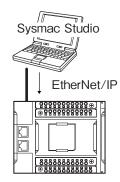

- A direct connection is made from the Sysmac Studio. The IP address and connection device do not need to be specified.
- You can make the connection whether or not a switching hub is used.
- Support for Auto-MDI enables the use of cross cables or straight cables if a direct connection is made

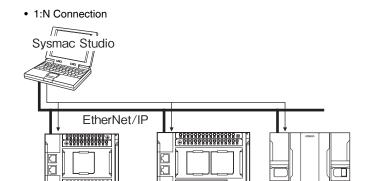

- · Directly specify the IP address of the remote device or
- · select the remote device from the node list.

Version Information

Unit Versions and Corresponding Sysmac Studio Versions

This following table gives the relationship between the unit versions of NX-series NX1P2 CPU Units and Option Boards and the corresponding Sysmac Studio versions.


Unit version of CPU Unit	Unit version of Option Board	Corresponding version of Sysmac Studio
Ver.1.13 *	Ver.1.00	Ver.1.17

^{*} There is no NX1P2 CPU Unit with unit version 1.12 or earlier.

Dimensions (Unit: mm)


NX-series NX1P2 CPU Units


NX1P2-1□40□□□

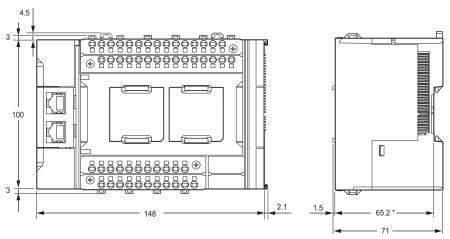

* The dimension from the attachment surface of the DIN Track to the front surface of the CPU Unit.

NX1P2-9024□□□

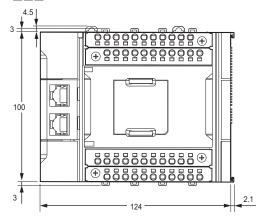


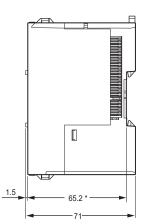

* The dimension from the attachment surface of the DIN Track to the front surface of the CPU Unit.

End cover

NX-END02

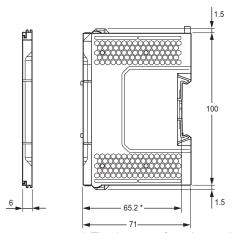

* The dimension from the attachment surface of the DIN Track to the front surface of the CPU Unit.

Machine Automation Controller NX1P

Related Manuals

Manual name	Cat. No.	Model numbers	Application	Description
NX-series NX1P2 CPU Unit Hardware User's Manual	W578	NX1P2-□□□	Learning the basic specifications of the NX-series NX1P2 CPU Units, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NX1P2 CPU Unit system is provided along with the following information on the NX1P2 CPU Unit. • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection
NX-series NX1P2 CPU Unit Built-in I/O and Option Board User's Manual	W579	NX1P2-□□□	Learning about the details of functions only for an NX-series NX1P2 CPU Unit and an introduction of functions for an NJ/ NX-series CPU Unit.	Of the functions for an NX1P2 CPU Unit, the following information is provided. • Built-in I/O • Serial Communication Option Boards • Analog I/O Option Boards An introduction of following functions for an NJ/NX-series CPU Unit is also provided. • Motion control functions • EtherNet/IP communications functions • EtherCAT communications functions
NJ/NX-series CPU Unit Software User's Manual	W501	NX701	Learning how to program and set up an NJ/NX-series CPU Unit. Mainly software information is provided.	The following information is provided on a Controller built with an NJ/NX-series CPU Unit. • CPU Unit operation • CPU Unit features • Initial settings • Programming based on IEC 61131-3 language specifications
NJ/NX-series Instructions Reference Manual	W502	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□ NX1P2-□□□□	Learning detailed specifications on the basic instructions of an NJ/NX- series CPU Unit.	The instructions in the instruction set (IEC 61131-3 specifications) are described.
NJ/NX-series CPU Unit Motion Control User's Manual	W507	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□ NX1P2-□□□□	Learning about motion control settings and programming concepts.	The settings and operation of the CPU Unit and programming concepts for motion control are described.
NJ/NX-series Motion Control Instructions Reference Manual	W508	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□ NX1P2-□□□□	Learning about the specifications of the motion control instructions.	The motion control instructions are described.
NJ/NX-series CPU Unit Built-in EtherCAT® Port User's Manual	W505	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□ NX1P2-□□□□	Using the built-in EtherCAT port on an NJ/NX-series CPU Unit.	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup.
NJ/NX-series CPU Unit Built-in EtherNet/IP™ port User's Manual	W506	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□ NX1P2-□□□□	Using the built-in EtherNet/IP port on an NJ/NX-series CPU Unit.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features.
NJ/NX-series Troubleshooting Manual	W503	NX701-□□□□ NJ501-□□□□ NJ301-□□□□ NJ101-□□□□ NX1P2-□□□□	Learning about the errors that may be detected in an NJ/NX-series Controller.	Describes concepts on managing errors that may be detected in an NJ/NX-series Controller and information on individual errors.
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC-SE2□□□	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
NX-series EtherCAT® Coupler Unit User's Manual	W519	NX-ECC20□	Leaning how to use an NX-series EtherCAT Coupler Unit and EtherCAT Slave Terminals	The following items are described: the overall system and configuration methods of an EtherCAT Slave Terminal (which consists of an NX-series EtherCAT Coupler Unit and NX Units), and information on hardware, setup, and functions to set up, control, and monitor NX Units through EtherCAT.
NX-series Data Reference Manual	W525	NX-□□□□	Referencing lists of the data that is required to configure systems with NX-series Units	Lists of the power consumptions, weights, and other NX Unit data that is required to configure systems with NX-series Units are provided.

Machine Automation Controller NX1P

Manual name	Cat. No.	Model numbers	Application	Description
	W521	NX-IDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDDD	Learning how to use NX Units.	Describe the hardware, setup methods, and functions of the NX Units. Manuals are available for the following Units. Digital I/O Units, Analog I/O Units, System Units, Position Interface Units, Communications Interface Units, Load Cell Input Unit, and IO-Link Master Unit
	W522	NX-AD		
NX-series	W566	NX-TS□□□□ NX-HB□□□□		
NX Units User's Manuals	W523	NX-PD1 □ □ □ NX-PF0 □ □ □ NX-PC0 □ □ □ NX-TBX01		
	W524	NX-ECO D NX-ECS D NX-PGO D		
	W540	NX-CIF□□□		
	W565	NX-RS□□□□		
	W567	NX-ILM□□□		
NX-series Safety Control Unit User's Manual	Z930	NX-SL□□□□ NX-SI□□□□ NX-SO□□□□	Learning how to use NX-series Safety Controls Units	The hardware, setup methods, and functions of the NX-series Safety Control Unit are described.
NA-series Programmable Terminal Software User's Manual	V118	NA5-□W□□□□	Learning about NA-series PT pages and object functions.	Describes the pages and object functions of the NA-series Programmable Terminals.
NS-series Programmable Terminals Programming Manual	V073	NS15-0000 NS12-0000 NS10-0000 NS8-0000	Learning how to use the NS-series Programmable Terminals.	Describes the setup methods, functions, etc. of the NS-series Programmable Terminals.

MEMO

Terms and Conditions of Sale

- Offer; Acceptance. These terms and conditions (these "Terms") are deemed part of all quotes, agreements, purchase orders, acknowledgments, price lists, catalogs, manuals, brochures and other documents, whether electronic or in catalogs, manuals, brochures and other documents, whether electronic or in writing, relating to the sale of products or services (collectively, the "Products") by Omron Electronics LLC and its subsidiary companies ("Omron"). Omron objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms. Prices: Payment Terms. All prices stated are current, subject to change without notice by Omron. Omron reserves the right to increase or decrease prices on any unshipped portions of outstanding orders. Payments for Products are due net 30 days unless otherwise stated in the invoice. Discounts. Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Omron's payment terms and (ii) Buyer has no past due amounts.

- and (ii) Buyer has no past due amounts.

 Interest. Omron, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the
- Orders. Omron will accept no order less than \$200 net billing.

 Governmental Approvals. Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Products.
- Taxes. All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Omron or required to be collected directly or indirectly by Omron for the manufacture, production, sale, delivery, importation, consumption or use of the Products sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Omron.

 Financial. If the financial position of Buyer at any time becomes unsatisfactory
- <u>Financial</u>. If the financial position of Buyer at any time becomes unsatisfactory to Omron, Omron reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Omron may (without liability and in addition to other remedies) cancel any unshipped portion of Products sold hereunder and stop any Products in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts. unpaid accounts
- Cancellation: Etc. Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Omron against all related costs or expenses.

 10. Force Majeure. Omron shall not be liable for any delay or failure in delivery
- resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.

 11. Shipping: Delivery. Unless otherwise expressly agreed in writing by Omron:
 a. Shipments shall be by a carrier selected by Omron; Omron will not drop ship
- - except in "break down" situations.
 b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall
 - constitute delivery to Buyer; c. All sales and shipments of Products shall be FOB shipping point (unless oth-
- c. All sales and shipments of Products shall be FOB shipping point (unless otherwise stated in writing by Omron), at which point title and risk of loss shall pass from Omron to Buyer; provided that Omron shall retain a security interest in the Products until the full purchase price is paid;
 d. Delivery and shipping dates are estimates only; and
 e. Omron will package Products as it deems proper for protection against normal handling and extra charges apply to special conditions.

 12. Claims. Any claim by Buyer against Omron for shortage or damage to the Products occurring before delivery to the carrier must be presented in writing to Omron within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Products. portation bill signed by the carrier noting that the carrier received the Products from Omron in the condition claimed.
- Warranties. (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

 (b) <u>Limitations</u>. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABIL-

- ITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by tion, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty. See http://www.omron247.com or contact your Omron representative for published information.
- lished information.

 Limitation on Liability: Etc. OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.
- Indemnities. Buyer shall indemnify and hold harmless Omron Companies and their employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Omron is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Products. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Omron and defend or settle any action brought against such Companies to the extent based on a claim that any Product made to Buyer specifications infringed intellectual property rights of another party.
- rights of another party.

 <u>Property: Confidentiality.</u> Any intellectual property in the Products is the exclusive property of Omron Companies and Buyer shall not attempt to duplicate it in any way without the written permission of Omron. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Omron. All information and materials supplied by Omron to Buyer relating to the Products are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
- prevent disclosure to any third party.

 <u>Export Controls.</u> Buyer shall comply with all applicable laws, regulations and licenses regarding (i) export of products or information; (iii) sale of products to "forbidden" or other proscribed persons; and (ii) disclosure to non-citizens of
- "forbidden" or other proscribed persons; and (ii) disclosure to non-citizens of regulated technology or information.

 Miscellaneous. (a) Waiver. No failure or delay by Omron in exercising any right and no course of dealing between Buyer and Omron shall operate as a waiver of rights by Omron. (b) Assignment. Buyer may not assign its rights hereunder without Omron's written consent. (c) Law. These Terms are governed by the law of the jurisdiction of the home office of the Omron company from which Buyer is purchasing the Products (without regard to conflict of law principles). (d) Amendment. These Terms constitute the entire agreement between Buyer and Omron relating to the Products, and no provision may be changed or waived unless in writing signed by the parties. (e) Severability If any provior waived unless in writing signed by the parties. (e) <u>Severability</u> If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. (f) Setoff. Buyer shall have no right to set off any amounts against the amount owing in respect of this invoice. (g) <u>Definitions</u>. As used herein, "<u>including</u>" means "including without limitation"; and "<u>Omron Companies</u>" (or similar words) mean Omron Corporation and any direct or indirect subsidiary or affiliate thereof.

Certain Precautions on Specifications and Use

- Suitability of Use. Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request. Omron will provide application of use of the Product. At Buyer's lequest, omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases but the following is a non-exhaustive list of applications for which particular attention must be given:

 (i) Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.

 (ii) Use in consumer products or any use in significant quantities.

 (iii) Energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject and industrial consumers and consumers are consumers and status of the consumers and consumers.
 - ment, and installations subject to separate industry or government regulations. (iv) Systems, machines and equipment that could present a risk to life or prop erty. Please know and observe all prohibitions of use applicable to this Prod-
 - NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO

- ADDRESS THE RISKS, AND THAT THE OMRON'S PRODUCT IS PROP-ERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.
- Programmable Products. Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof. Performance Data. Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requires ments. Actual performance is subject to the Omron's Warranty and Limitations
- Change in Specifications. Product specifications and accessories may be change in specifications. Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time
- to confirm actual specifications of purchased Product.

 <u>Errors and Omissions.</u> Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.



OMRON AUTOMATION AMERICAS HEADQUARTERS • Chicago, IL USA • 847.843.7900 • 800.556.6766 • www.omron247.com

OMRON CANADA, INC. • HEAD OFFICE

Toronto, ON, Canada • 416.286.6465 • 866.986.6766 • www.omron247.com

OMRON ELECTRONICS DE MEXICO • HEAD OFFICE

México DF • 52.55.59.01.43.00 • 01-800-226-6766 • mela@omron.com

OMRON ELECTRONICS DE MEXICO • SALES OFFICE

Apodaca, N.L. • 52.81.11.56.99.20 • 01-800-226-6766 • mela@omron.com

OMRON ELETRÔNICA DO BRASIL LTDA • HEAD OFFICE

São Paulo, SP, Brasil • 55.11.2101.6300 • www.omron.com.br

OMRON ARGENTINA • SALES OFFICE

Cono Sur • 54.11.4783.5300

OMRON CHILE • SALES OFFICE

Santiago • 56.9.9917.3920

OTHER OMRON LATIN AMERICA SALES

54.11.4783.5300

OMRON EUROPE B.V. • Wegalaan 67-69, NL-2132 JD, Hoofddorp, The Netherlands. • +31 (0) 23 568 13 00 • www.industrial.omron.eu

Authorized Distributor:

Controllers & I/O

- Machine Automation Controllers (MAC) Motion Controllers
- Programmable Logic Controllers (PLC) Temperature Controllers Remote I/O

Robotics

• Industrial Robots • Mobile Robots

Operator Interfaces

• Human Machine Interface (HMI)

Motion & Drives

- Machine Automation Controllers (MAC) Motion Controllers Servo Systems
- Frequency Inverters

Vision, Measurement & Identification

• Vision Sensors & Systems • Measurement Sensors • Auto Identification Systems

Sensina

- Photoelectric Sensors Fiber-Optic Sensors Proximity Sensors
- Rotary Encoders Ultrasonic Sensors

- Safety Light Curtains Safety Laser Scanners Programmable Safety Systems
- Safety Mats and Edges Safety Door Switches Emergency Stop Devices
- Safety Switches & Operator Controls Safety Monitoring/Force-guided Relays

Control Components

- Power Supplies Timers Counters Programmable Relays
- Digital Panel Meters Monitoring Products

Switches & Relays

- Limit Switches Pushbutton Switches Electromechanical Relays
- Solid State Relays

Software

• Programming & Configuration • Runtime

 $\ensuremath{\texttt{@}}$ 2016 Omron. All Rights Reserved.

