



**LAPP GROUP**

EPIC<sup>®</sup> CIRCON Crimp tool  
11148000

Instruction manual  
for EPIC<sup>®</sup> CIRCON LS1/M23



# Important details for the right use of the EPIC<sup>®</sup> CIRCON Crimp tool

## Using the instruction sheet:

Keep the instruction sheet constantly with the EPIC<sup>®</sup> CIRCON Crimp tool. Each person entrusted with the job of operating the EPIC<sup>®</sup> CIRCON Crimp tool must be familiar with the operating manual and strictly observe the instructions therein. The U.I. LAPP GmbH declines to accept any liability for damages that are incurred due to the fact that the instructions on the tool or in the operating manual have been disregarded. Observe existing national rules for accident prevention.

## Basic safety instructions:

The EPIC<sup>®</sup> CIRCON Crimp tool has been constructed according to state-of-the-art technology and the acknowledged technical safety regulations and is only to be used for the purpose which is mentioned in this instruction sheet.

## Note:

**Crimp tools are intended for occasional use and comparative little quantity. Different emergencies of overstress can be the consequence of an enduring use of the tool.**

## Responsibilities:

The EPIC<sup>®</sup> CIRCON Crimp tool may only be operated by trained and authorized personnel. The user must clearly define and observe the responsibilities of the personnel for operating, maintenance and service. Should the user make any changes to the hand tool without consulting the manufacturer or the supplier, the latter will not be liable for any damage that may result.

## Setting up and operating the EPIC<sup>®</sup> CIRCON Crimp tool:

The EPIC<sup>®</sup> CIRCON Crimp tool may only be set up and operated in perfect technical condition, observing all the safety regulation and considering any possible danger. The manufacturer and the suppliers will not be liable for any damages which may result due to the hand tool being used for other purposes than that for which it was intended.

This instruction manual describes the use and handling of the EPIC<sup>®</sup> CIRCON Crimp tool 11148000 as well as required maintenance work. The factory settings of the EPIC<sup>®</sup> CIRCON Crimp tool may not be changed. For information which is not included in this instruction manual, for technical support, repairs as well as questions for settings, please contact:

## U.I. Lapp GmbH


Schulze-Delitzsch Str. 25  
D-70565 Stuttgart  
Tel.: +49-711/78 38 - 01  
Fax: +49-711/78 38 - 26 40  
[www.lappgroup.com](http://www.lappgroup.com)

### Scope of delivery

The **EPIC® CIRCON** Crimp tool is delivered with a plug gauge Ø2, a hex wrench (2.5) and the instruction manual in a plastic case.

### Not included in the scope of delivery

**EPIC® CIRCON** locator with additional locator Material-No.: **11148300**

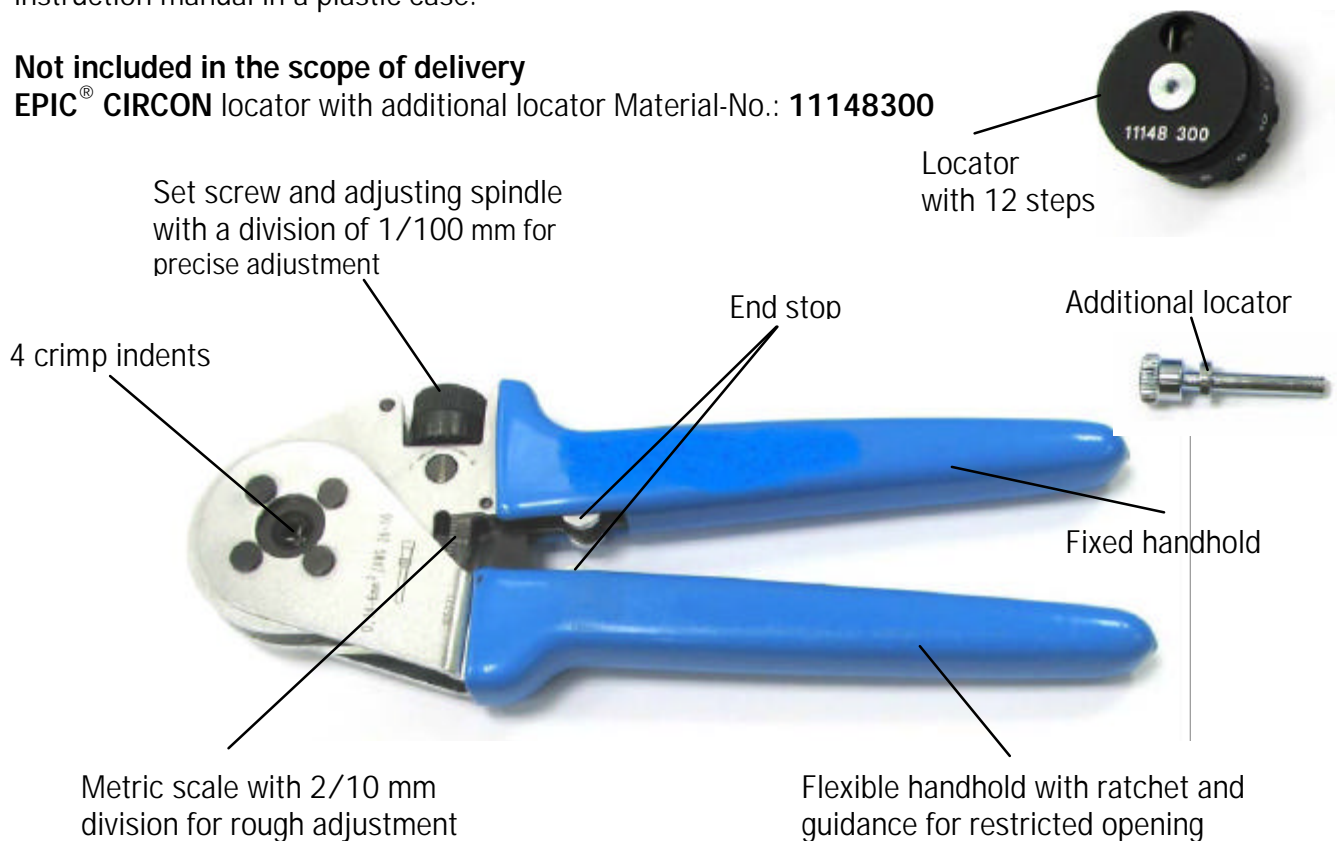

### Description

The **EPIC® CIRCON** Crimp tool consists of: one flexible handhold with a ratchet and guidance for restricted opening, as well as a fixed handhold with a metric scale (division of 2/10 mm), adjusting equipment with a hand wheel (division of 1/100 mm) and the 4 crimp mandrels.

The **EPIC® CIRCON** locator consists of:

a freely rotating locator with a snap-in-function for positioning (division into 12 steps) the contacts and an additional locator for crimping the female pins of 2 mm.

### Maintenance and inspection


After usage of the **EPIC SOLAR** Crimp tool the following steps have to be carried out: Remove dust, moisture and other contaminants from the **EPIC SOLAR** Crimp tool with a clean and soft brush, or a clean and soft lint-free cloth. Do not use hard or abrasive objects that could damage the tool.

All pins, pivot points, and bearing surfaces should be protected with a thin coat of any good sewing machine oil. Do not oil excessively. Take care that every bolts are secured with locking rings.




**For protection against an electric shock, all connections have to be disconnected from power supply when assembling the connector by yourself.**

## EPIC® CIRCON Crimp tool, locator and additional locator

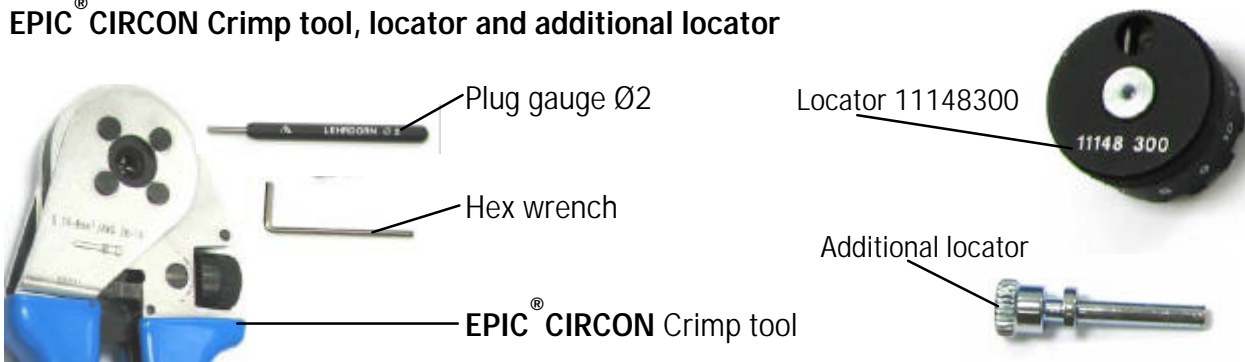

### Installation of the locator

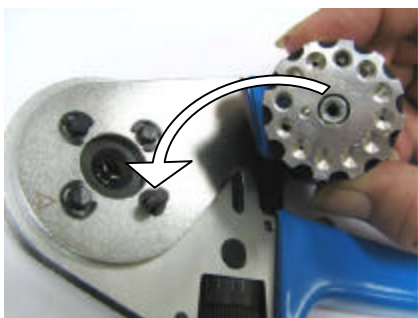


Put the locator on and spin until it snaps in.

Tighten it up a little by using the enclosed hex-wrench.



### Setting up and crimping:

Take the locator position and the crimp mass out of table 7 according to the contact which is going to be crimped.

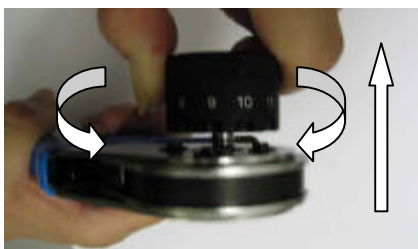

#### Setting up the locator:

Pull the locator to the top, spin it to the required position and let it snap in.



#### Setting up the crimp mass:


the crimp mass has to be set up by spinning the set screw when the EPIC® CIRCON Crimp tool is fully opened.

#### Process of crimping:

Bring the contact in the EPIC® CIRCON Crimp tool. By closing the tool to the first notch level the inserted contact will get adjusted and is safe from dropping out.

Bring the cable in the contact and close the EPIC® CIRCON Crimp tool. Press the handholds of the EPIC® CIRCON Crimp tool together until the end stop is reached otherwise the tool will not open up. When the end stop is reached the tool will open automatically and the process of crimping is done correctly.


### Installation of the additional locator (use only in locator position 3)

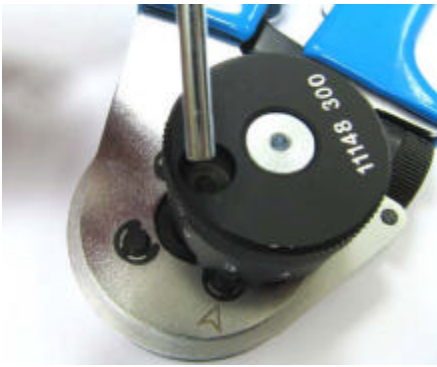

Place in the additional locator, straighten it and fix it by spinning.





Orientation of the additional locator

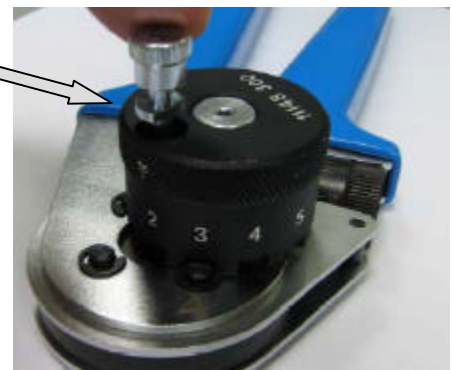

### Control of the crimp mass:

The **EPIC® CIRCON** Crimp tool is preset, though a control of the crimp mass should be carried out from time to time. This is to be done with the enclosed plug gauge as follows:

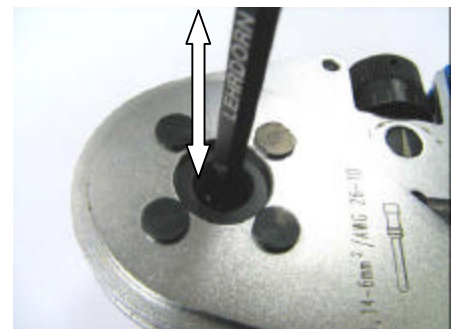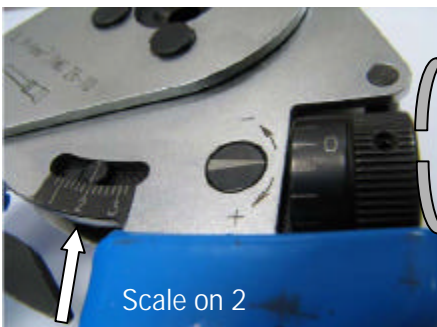

The **EPIC® CIRCON** Crimp tool is fully opened. Spin the hand wheel until the scale shows **2** and the hand wheel shows **0**. Then close the **EPIC® CIRCON** Crimp tool down to the end stop. In this set up the plug gauge Ø2 must be moveable with no scope between the crimp mandrels.

If this is not the case, the dimension deviation (+/-) can be detected with the precise adjusting of the hand wheel. Is the **EPIC® CIRCON** Crimp tool out of the required tolerance, you should contact the manufacturer / supplier.

Contact	included in EPIC® CIRCON connector	
	Mat.-No.:	Name
74033000 1mm male	19520027	EPIC KIT LS1 A1+D6 K 3+PE+4 (5)
	44420058	EPIC LS1 A3 5+PE K (5)
	76004000	EPIC LS1 A1 3+PE+4 K (5)
	76154000	EPIC LS1 G5 3+PE+4 K (5)
	76154100	EPIC LS1 G4 3+PE+4 K (5)
74033100 2mm male	19520026	EPIC KIT LS1 A1+D6 5+PE (5)
	19520027	EPIC KIT LS1 A1+D6 K 3+PE+4 (5)
	44420056	EPIC LS1 A3 3+PE+4 K (5)
	44420058	EPIC LS1 A3 5+PE K (5)
	76003000	EPIC LS1 A1 5+PE K (5)
	76004000	EPIC LS1 A1 3+PE+4 K (5)
	76153000	EPIC LS1 G5 5+PE K (5)
	76153100	EPIC LS1 G4 5+PE K (5)
	76154000	EPIC LS1 G5 3+PE+4 K (5)
76154100	EPIC LS1 G4 3+PE+4 K (5)	
74034000 1mm male	44420093	EPIC LS1 F6 3+PE+4 K 14-17 (5)
	73000008	EPIC LS1 F6 3+PE+4 K 8,5-11 (5)
	73000009	EPIC LS1 F6 3+PE+4 K 10,5-15,5 (5)
	73000016	EPIC LS1 F7 3+PE+4 K 8,5-11 (5)
	73000017	EPIC LS1 F7 3+PE+4 K 10,5-15,5 (5)
	76134000	EPIC LS1 F6 3+PE+4 K 7,5-15,5 (5)
	76144000	EPIC LS1 F7 3+PE+4 K 7,5-15,5 (5)
44420103 2mm male	44420093	EPIC LS1 F6 3+PE+4 K 14-17 (5)
	44420095	EPIC LS1 F6 5+PE K 14-17 (5)

Please take the length which is to be stripped from the instruction manual of the **EPIC® CIRCON** connectors.

Contact	included in EPIC® CIRCON connector	
	Mat.-No.:	Name
74034600 2mm female	19520026	EPIC KIT LS1 A1+D6 5+PE (5)
	19520027	EPIC KIT LS1 A1+D6 K 3+PE+4 (5)
	19520028	EPIC KIT LS1 F6+D6 5+PE (5)
	19520029	EPIC KIT LS1 F6+D6 3+PE+4 (5)
	73000000	EPIC LS1 D6 3+PE+4 K 8,5-11 (5)
	73000001	EPIC LS1 D6 3+PE+4 K 10,5-15,5 (5)
	73000004	EPIC LS1 D6 5+PE K 8,5-11 (5)
	73000005	EPIC LS1 D6 5+PE K 10,5-15,5 (5)
	73000024	EPIC LS1 D6 3+PE+4 K 8,5-11 S (5)
	73000026	EPIC LS1 D6 3+PE+4 K 8,5-11 S (20)
	73000028	EPIC LS1 D6 5+PE K 8,5-11 S (5)
	73000029	EPIC LS1 D6 5+PE K 10,5-15,5 S (5)
	76083000	EPIC LS1 A6 5+PE K (5)
	76084000	EPIC LS1 A6 3+PE+4 K (5)
	76123000	EPIC LS1 D6 5+PE K 7,5-15,5 (5)
	76123100	EPIC LS1 D6 5+PE K 7,5-15,5 S (5)
	76124000	EPIC LS1 D6 3+PE+4 K 7,5-15,5 (5)
	76124100	EPIC LS1 D6 3+PE+4 K 7,5-15,5 S (5)
	74200600 1 mm female	19520027
19520029		EPIC KIT LS1 F6+D6 3+PE+4 (5)
44420089		EPIC LS1 D6 3+PE+4 K 14-17 (5)
73000000		EPIC LS1 D6 3+PE+4 K 8,5-11 (5)
73000001		EPIC LS1 D6 3+PE+4 K 10,5-15,5 (5)
73000024		EPIC LS1 D6 3+PE+4 K 8,5-11 S (5)
73000026		EPIC LS1 D6 3+PE+4 8,5-11 S (20)
76084000		EPIC LS1 A6 3+PE+4 K (5)
76124000		EPIC LS1 D6 3+PE+4 K 7,5-15,5 (5)
76124100		EPIC LS1 D6 3+PE+4 K 7,5-15,5 S (5)
44420105 2 mm female	44420089	EPIC LS1 D6 3+PE+4 K 14-17 (5)
	44420091	EPIC LS1 D6 5+PE K 14-17 (5)

Contact		Settings			
Type	Mat-No.:	mm <sup>2</sup>	AWG	Hand wheel	Locator
<b>LS 1</b> 1 mm male	74033000 74033001	0.14	26	0.80	1
		0.34	24	0.90	
		0.50	22	1.15	
		0.75	20	1.15	
		1.00	18	1.20	
<b>LS1</b> 2 mm male	74033100 74033101	0.50	22	1.25	2
		0.75	20	1.25	
		1.00	18	1.30	
		1.50	16	1.50	
		2.50	14	1.60	
	44420103	4.00	12	1.55	
<b>LS1</b> 2 mm female 0.5 - 2.5 mm <sup>2</sup> wire spring	74034600 74034601	0.50	22	1.15	4
		0.75	20	1.20	
		1.00	18	1.30	
		1.50	16	1.50	
		2.50	14	1.65	
	44420105	4.00	12	1.55	
<b>LS1</b> 1 mm male	74034000 74034001	0.14	26	0.80	5
		0.34	24	0.90	
		0.50	22	1.15	
		0.75	20	1.15	
		1.00	18	1.20	
<b>LS1</b> 2 mm male	74034100 74034101	0.50	22	1.25	6
		0.75	20	1.30	
		1.00	18	1.30	
		1.50	16	1.50	
		2.50	14	1.65	
<b>LS1 / M 23</b> 1 mm female slot	74200600 74200601	0.14	26	0.80	3 *
		0.34	24	0.90	
		0.50	22	1.10	
		0.75	20	1.15	
		1.00	18	1.20	
<b>LS1 / M23</b> 1 mm female wire spring	74034500 74034501	0.14	26	0.80	3 *
		0.34	24	0.90	
		0.50	22	1.10	
		0.75	20	1.15	
		1.00	18	1.15	
<b>M 23</b> 2 mm female slot	72401600 72401601	1.00	18	1.45	8
		1.50	16	1.50	
		2.50	14	1.65	
<b>M 23</b> 2 mm male	72401000 72401001	1.00	18	1.45	7
		1.50	16	1.50	
		2.50	14	1.65	
<b>M 23</b> 1 mm male	72400000 72400001	0.14	26	0.80	9
		0.34	24	0.90	
		0.50	22	1.15	
		0.75	20	1.15	
		1.00	18	1.20	

\* Use additional locator (look at page 5)



**LAPP GROUP**

**U.I. Lapp GmbH**

D-70565 Stuttgart/Germany

[www.lappgroup.com](http://www.lappgroup.com)

A company of the Lapp Group