

## **Electro-Pneumatic Regulator/Electronic Vacuum Regulator**


## ITV Series

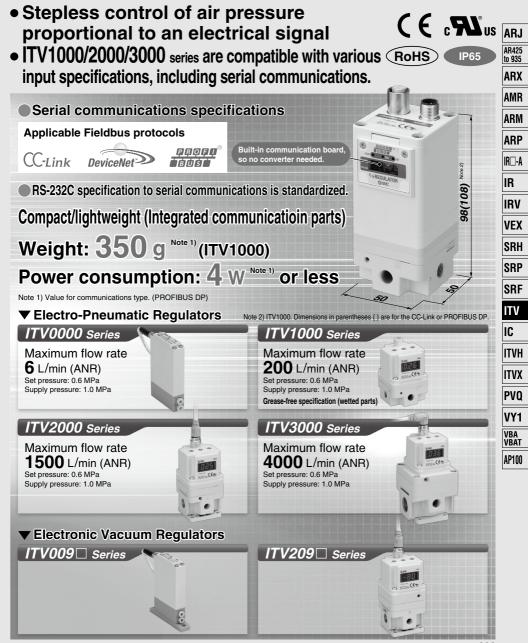

## Compact Electro-Pneumatic Regulator ITV0000 Series

Compact Vacuum Regulator ITV009 Series

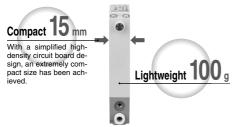

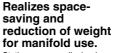

Stations can easily be increased or decreased due to DIN rail mount design.




Model	Pressure range	Power supply voltage	Input signal	Output signal	Option		
ITV001□	0.1 MPa		4 to 20 mA DC 0 to 20 mA DC		Cable connectors		
ITV003□	0.5 MPa				Straight type Right angle type		
ITV005□	0.9 MPa				0 to 5 VDC 0 to 10 VDC	1 to 5 VDC	Brackets     Flat bracket
ITV009□	-100 kPa		0 10 10 VDC		L-bracket		

- Equivalent to IP65
- Linearity: ±1% F.S. or less Hysteresis: 0.5% F.S. or less Repeatability: ±0.5% F.S. or less
- High-speed response time: 0.1 sec (Without load) Note) This is not a guaranteed value as it depends on the operating environment.
- High stability



#### Cable connectors

Straight type and right angle type are available

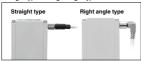

- Built-in One-touch fittinas
- With error indication **LED**
- Brackets

Flat and L-brackets are available



## Electro-Pneumatic Regulator ITV/1000/2000/3000 Series Electronic Vacuum Regulator ITV209 Series






Serial communications specifications to ITV1000/2000/3000 series are standardized.

Reduced wiring

**Applicable Fieldbus protocols** DeviceNet:


RS-232C specification to serial communications is standardized.


- Sensitivity: 0.2% F.S. or less
- Linearity: ±1% F.S. or less
- Hysteresis: 0.5% F.S. or less
- IP65
- Cable connections in 2 directions Straight type Right angle type

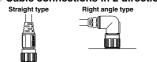

Grease-free specification (ITV1000 series)

## Application examples

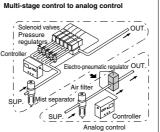

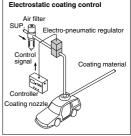

# Electro-Pneumatic Regulator Electronic Vacuum Regulator

Stepless control of air pressure proportional to an electrical signal.

Series Model Set pressure range Input signal Port size Page ARJ AR425 Current type: ITV0000 Series to 935 ITV001□ 0.001 to 0.1 MPa 4 to 20 mA DC (Sink type) ARX Built-in Current type: 0 to 20 mA DC One-touch fittings 896 ITV003□ 0.001 to 0.5 MPa Metric size: ø4 (Sink type) AMR Inch size: ø5/32 Voltage type: 0 to 5 VDC ARM ITV005□ 0.001 to 0.9 MPa Voltage type: 0 to 10 VDC ARP ITV1000 Series ITV101□ 0.005 to 0.1 MPa IR□-A Electro-Pneumatic Regulator IR 904 ITV103□ 0.005 to 0.5 MPa 1/8, 1/4 Current type: IRV 4 to 20 mA DC ITV105□ 0.005 to 0.9 MPa (Sink type) VEX Current type: 0 to 20 mA DC SRH ITV2000 Series (Sink type) ITV201□ 0.005 to 0.1 MPa Voltage type: SRP 0 to 5 VDC Voltage type: 904 ITV203□ 0.005 to 0.5 MPa 1/4, 3/8 SRF 0 to 10 VDC Preset input ITV (4 points/16 points) ITV205□ 0.005 to 0.9 MPa 10 bit digital input IC CC-Link compatible ITV3000 Series DeviceNet<sup>™</sup> compatible ITVH ITV301□ 0.005 to 0.1 MPa PROFIBUS DP compatible ITVX RS-232C communication 904 ITV303□ 0.005 to 0.5 MPa 1/4, 3/8, 1/2 PVQ ITV305□ 0.005 to 0.9 MPa VY1 VBA VBAT ITV009□ Series Current type: AP100 4 to 20 mA DC (Sink type) lectronic Vacuum Regulator Built-in Current type: One-touch fittings 0 to 20 mA DC (Sink type) ITV009□ 928 -1 to -100 kPa Metric size: ø4 Voltage type: 0 to 5 VDC Inch size: ø5/32 Voltage type: 0 to 10 VDC Current type: 4 to 20 mA DC (Sink type) ITV209

☐ Series Current type: 0 to 20 mA DC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC 935 ITV209□ -1.3 to -80 kPa Preset input 1/4 (4 points/16 points) 10 bit digital input CC-Link compatible T DeviceNet™ compatible PROFIBUS DP compatible RS-232C communication


ITV Series


# Compact Electro-Pneumatic Regulator

# ITV0000 Series



#### **How to Order**

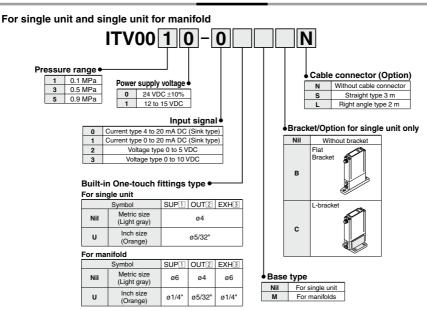

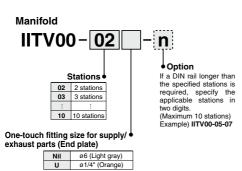

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

## How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


IITV00-03-----1 set (Manifold part no.)

\*ITV0030-3MS-----2 sets (Electro-pneumatic regulator part no. (1, 2 stations))
\*ITV0030-3ML-----1 set (Electro-pneumatic regulator part no. (3 stations))

Indicate part numbers in order starting from the first station on the D side.

Note)Combination with having different pressure ranges is not available due to common supply/exhaust features.

-The asterisk (\*) specifies mounting. Add an asterisk (\*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

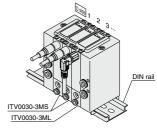



## Compact Electro-Pneumatic Regulator ITV0000 Series

## **Specifications**



Model		ITV001□	ITV003□	ITV005□		
Minimum supply p	ressure	Set pressure +0.1 MPa				
Maximum supply pressure		0.2 MPa	0.2 MPa 1.0 MPa			
Set pressure range	9	0.001 to 0.1 MPa	0.001 to 0.5 MPa	0.001 to 0.9 MPa		
	Voltage	24 V	DC ±10%, 12 to 15	VDC		
Power supply	Current	Power supply voltage 24 VDC type: 0.12 A or less				
	consumption	Power supply voltage 12 to 15 VDC type: 0.18 A or less				
Input signal	Voltage type	0	to 5 VDC, 0 to 10 VE	C		
input signai	Current type	4 to 20 mA	DC, 0 to 20 mA DC	(Sink type)		
Innuit immedence	Voltage type		Approx. 10 kΩ			
Input impedance	Current type		Approx. 250 Ω			
Output signal Note 4)	Amalan autaut	1 to 5 VDC (Output impedance: Approx. 1 kΩ)				
Output signal **** 7	Analog output	Output accuracy: ±6% F.S. or less				
Linearity			±1% F.S. or less			
Hysteresis		0.5% F.S. or less				
Repeatability			±0.5% F.S. or less			
Sensitivity			0.2% F.S. or less			
Temperature chara	acteristics	±0.12% F.S./°C or less				
Operating tempera	ture range	0 to 50°C (No condensation)				
Enclosure		Equivalent to IP65 *				
Connection type		Bu	ilt-in One-touch fittir	igs		
	For single unit	Metric size	Metric size 1, 2, 3: ø4			
Connection size	For single unit	Inch size	1, 2, 3	3: ø5/32"		
Connection size	Manifold	Metric size	1, 3: ø	6, 2: ø4		
		Inch size	1, 3: ø1/4	", 2: ø5/32"		
Weight Note 1)		100	g or less (without op	tion)		
Note 1) Indicates the	weight of a sing	le unit				

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

Note 3) When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.

Note 4) When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than

lote 4) When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less tha 100 kΩ, the analog output monitor accuracy of ±6% F.S. or less may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.

\* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 941.)

## **Accessories (Option)**

#### **Bracket**

Flat bracket assembly (includes 2 mounting screws) P39800022



L-bracket assembly (includes 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

#### Cable connector



Right angle type P398000-501-2



ARJ AR425 to 935

ARX AMR ARM

ARP IR□-A

IR

IRV VEX

SRH

SRP SRF

ITV

IC

ITVH

ITVX

PVQ

VY1

VBA VBAT AP100

897




## ITV0000 Series


## **Working Principle**

When the input signal rises, the air supply soloenoid valve ① turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve ① and changes to output pressure. This output pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

#### **Working Principle Diagram**

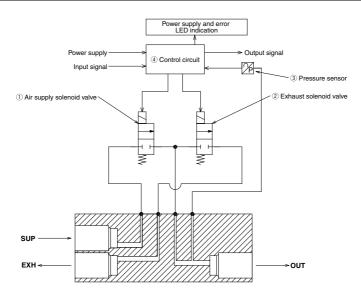



#### **Block Diagram**

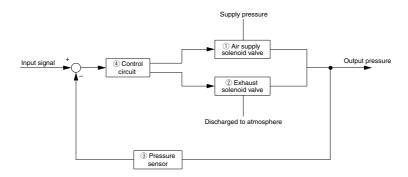

## Compact Electro-Pneumatic Regulator ITV0000 Series

## ITV001□ Series

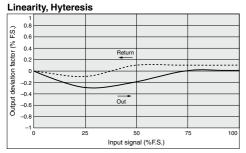

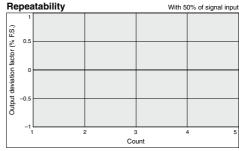

ARJ

AR425 to 935 ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

ITV IC


ITVH


ITVX

PVQ


VY1


AP100

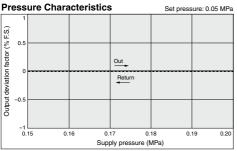


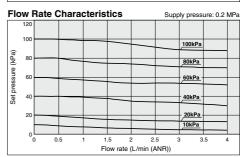


## ITV003□ Series

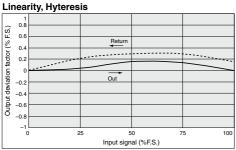

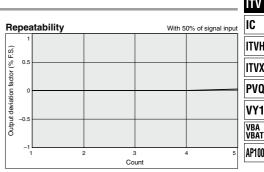


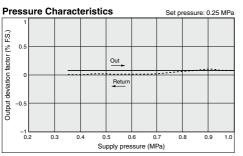


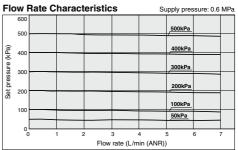



## ITV0000 Series

## ITV005□ Series

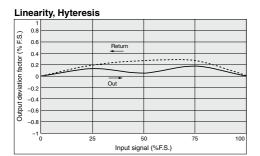

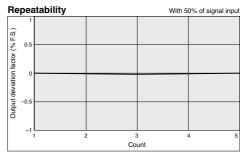


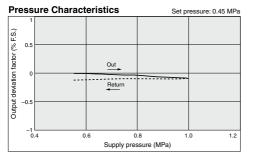

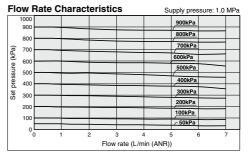

## Compact Electro-Pneumatic Regulator ITV0000 Series

## **Dimensions**

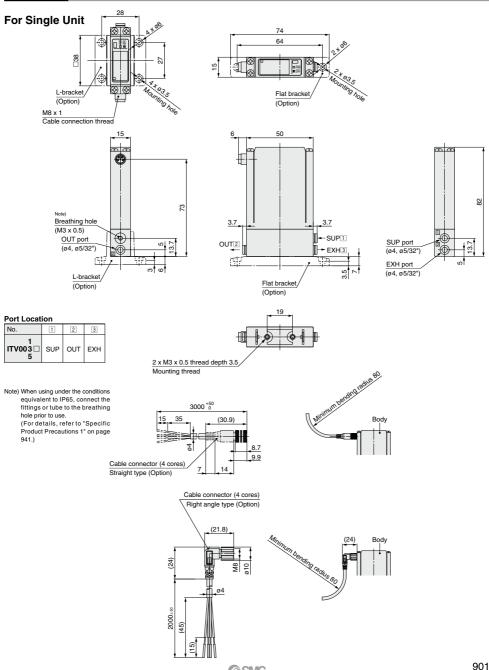

**SMC** 

ARJ

AR425 to 935

ARX

AMR

ARM ARP IR□-A

IR

IRV

VEX

SRH

SRP

SRF

ITV

IC

ITVH

ITVX


PVQ


VY1 VBA VBAT


AP100

## **Dimensions**

## Single unit for manifold

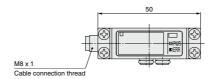


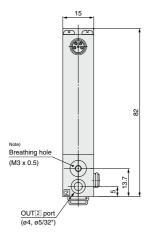

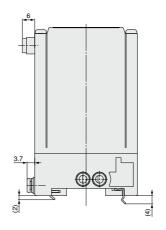



Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 941.)

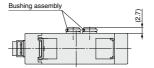


Note) For dimensions of the cable connector, refer to single unit on page 901.

## Compact Electro-Pneumatic Regulator ITV0000 Series


## **Dimensions**


#### Manifold

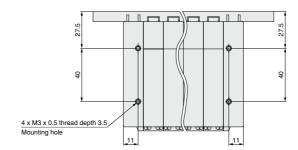


Port Location								
No.	1	2	3					
1								

Note) Stations are counted starting from the D side.

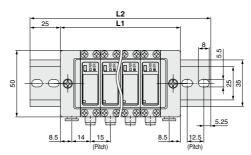

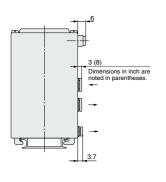

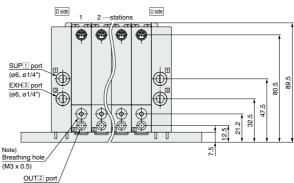

Note) For dimensions of the cable connector, refer to single unit on page 901.

									(mm)
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail (g)	20	22	27	29	31	34	36	41	43

Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use.

(For details, refer to "Specific Product Precautions 1" on page 941.)

ARX AMR

ARJ AR425 to 935

ARM

IR□-A

IRV

VEX

SRP

SRF

IC

ITVH

PVQ VY1

> VBA VBAT AP100

(ø4, ø5/32")


# **Electro-Pneumatic Regulator**

# ITV1000/2000/3000 Series

CE CRUSUS ROHS



#### **How to Order**

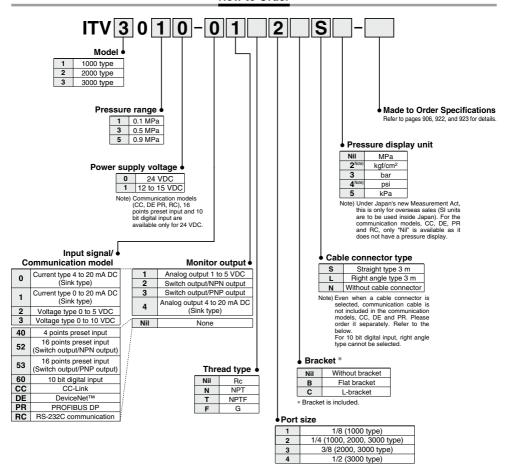

For communication cables, use the parts listed below (refer to M8/M12 connector in Best Pneumatics No.1-1 for details)

or order the product certified for the respective protocol (with M12 connector) separately.

Application	Communication cable part number	Note
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.
DeviceNet™	PCA-1557633 (Socket type)	T-branch connector not supplied.
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.
PROFIBUS DP	PCA-1557688 (Socket type)	T-branch connector not supplied.
compatibility	PCA-1557691 (Plug type)	1-branch connector not supplied.

Standard Specifications

# ITV1000 ITV2000

ITV3000

Symbol

Rated pressure

pressure Output pre (MPa)

0.005MPa

#### ITV101 Note 8) ITV103 Note 8) ITV105 Note 8) ITV201 ITV203 ITV205 Model ITV301 ITV303 ITV305 Minimum supply pressure Set pressure +0.1 MPa Maximum supply pressure 0.2 MPa 1.0 MPa Set pressure range Note 1) 0.005 to 0.1 MPa 0.005 to 0.5 MPa 0.005 to 0.9 MPa Voltage 24 VDC ± 10%, 12 to 15 VDC Power supply Power supply voltage 24 VDC type: 0.12 A or less Note 9) Current consumption Power supply voltage 12 to 15 VDC type: 0.18 A or less Current type Note 2 4 to 20 mA DC, 0 to 20 mA DC (Sink type) 0 to 5 VDC, 0 to 10 VDC Voltage type Input signal Preset input 4 points (Negative common), 16 points (No common polarity) 10 bit (Parallel) Digital input Current type 250 $\Omega$ or less Note 6 Voltage type Approx. 6.5 kΩ Input Power supply voltage 24 VDC type: Approx. 4.7 kΩ impedance Preset input Power supply voltage 12 VDC type: Approx. 2.0 k $\Omega$ Digital input Approx. 4.7 $k\Omega$ 1 to 5 VDC (Output impedance: Approx. 1 kΩ) Analog 4 to 20 mA DC (Sink type) (Output impedance: 250 $\Omega$ or less) Output signal output Output accuracy ± 6% F.S. or less (monitor Switch NPN open collector output: Max. 30 V, 80 mA output) PNP open collector output: Max. 80 mA output ± 1% F.S. or less Linearity Hysteresis 0.5% F.S. or less ± 0.5% F.S. or less Repeatability 0.2% F.S. or less Sensitivity ± 0.12% F.S./°C or less Temperature characteristics Output pressure Accuracy ± 2% F.S. ± 1 digit or less display Note 4) MPa: 0.001, kgf/cm<sup>2</sup>: 0.01, bar: 0.01, psi: 0.1 Note 5), kPa: 1 Minimum unit Ambient and fluid temperature 0 to 50°C (No condensation) IP65 Enclosure ITV10□□ Approx. 250 g (without options) Weight Note 10) ITV20□□ Approx. 350 g (without options)

Note 1) Please refer to Figure 1 for the relationship between set pressure and input. Because the maximum set pres-

Approx. 645 g (without options)

sure differs for each pressure display, refer to page 945.

Note 2) 2-wire type 4 to 20 mA DC is not available. Power supply voltage (24 VDC or 12 to 15 VDC) is required. Note 3) Select either analog output or switch output.

Further, when switch output is selected, select either NPN output or PNP output.

When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100  $k\Omega$ , the analog output monitor accuracy of within  $\pm 6\%$  (full span) may not be available. The product with the accuracy of

within ±6% is supplied upon your request. Output pressure remains unaffected.

Note 4) Adjustment of numerical values such as the zero/span adjustment or preset input type is set based on the minimum units for output pressure display (e.g. 0.001 to 0.500 MPa). Note that the unit cannot be changed. Note 5) The minimum unit for 0.9 MPa (130 psi) types is 1 psi.

Note 6) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input current. This is 350 Ω or less for an input current of 20 mA DC.

Note 7) The above characteristics are confined to the static state. When air is consumed on the output side, the pres-

Note 8) The ITV1000 series is a Grease-free specification (Wetted parts).

ITV30□□

Note 9) Refer to the table below for communication specifications.

Note 10) Add 50 g for digital input type, 70 g for 16 points preset input type respectively.

## Communication Specifications (CC, DE, PR, RC)

This range is outside

Input signal (%F.S.)

Figure 1. Input/output characteristics chart

f the control (output)

Serial-communications

model

Model	ITV□0□0-CC	ITV□0□0-DE	ITV□0□0-PR	ITV□0□0-RC			
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C			
Version Note 1)	Ver 1.10	Volume1 (Edition3.8), Volume3 (Edition1.5)	DP-V0	_			
Communication speed	156 k/625 k 2.5 M/5 M/10 M bps	125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	9.6 kbps			
Configulation file Not	2)	EDS	GSD	_			
I/O occupation ar (input/output data		16 bit/16 bit	16 bit/16 bit	_			
Communication data resolu	on 12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)			
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD			
Electric insulation No		Insulation	Insulation	Non-insulation			
Terminating resist		Not built into the product	Built into the product (Switch setting)	_			
Current consumpti	on 0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less			
ITV100	330	320	350	320			
Weight ITV200	430	420	450	420			
ITV300	730	720	750	720			

Note 1) Note that version information is subject to change.

Note 2) Configuration files can be downloaded from the operation manual page on SMC's website:http://www.smcworld.com Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Note 4) The insulation between the electrical signal of the communication system and ITV power supply

**ARJ** AR425 to 935

ARX AMR

ARM

ARP IR□-A

IR IRV

VEX

SRH SRP

SRF

ITV

IC

ITVH


ITVX


PVQ

VY1

VBA VBAT AP100

905

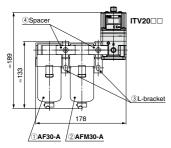

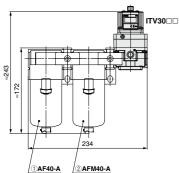

#### Made to Order

(Refer to pages 922 to 926 for details.)

Symbol	Specifications			
X102	Reverse type			
X224 High pressure type (SUP 1.2 MPa, OUT 1.0 MPa)				
X25 Set pressure range 1 to 100 kPa (Except ITV3000 series)				
X88 High speed response type (Except ITV3000 series)				
X26 For manifold mounting (Except ITV3000 series)				
X410 Linearity: ±0.5% F.S. or less				
X420	With alarm output			
Note 1) Ma	nifolds are compatible with 2 to 8 stations			

Consult with SMC for 9 stations or more.

Note 2) Products without symbols are also compatible. Consult with SMC separately.

Note 3) Compliant with CE marking

Model	Bracket tightening torque
ITV1000	0.76 ± 0.05 N·m
ITV2000/3000	1.5 ± 0.05 N·m

## **Modular Products and Accessory Combinations**

Applicable products and accessories	Applical	Applicable model		
Applicable products and accessories	ITV20□□	ITV30□□		
① Air filter	AF30-A	AF40-A		
② Mist separator	AFM30-A	AFM40-A		
③ L-bracket	B310L	B410L		
4 Spacer	Y30	Y40		
5 Spacer with L-bracket (3 + 4)	Y30L	Y40L		
6 Spacer with T-bracket	_	Y40T		

<sup>\*</sup> For ITV10 ., use a modular adapter (Refer to page 643 for details).

## Accessories (Option)/Part No.

[Bracket]

Applicable model	Description	Part No.
ITV10□□	Flat has also to a second by (in all all as a second in a second in a	P398010-600
ITV20□□, 30□□	Flat bracket assembly (including mounting screws)	P398020-600
ITV10□□	I hypothet comply (including mounting covery)	P398010-601
ITV20□□, 30□□	L-bracket assembly (including mounting screws)	P398020-601

[Cable connector]

[Cable connector]							
Applicable model	Descr	iption	Part No.				
Current type Voltage type	Cable connector (4 cores)	Straight type 3 m	P398020-500-3				
4 points preset input	Cable Connector (4 cores)	Right angle type 3 m					
	Power cable (4 cores)	Straight type 3 m	P398020-500-3				
16 mainte musest immut	rower cable (4 cores)	Right angle type 3 m	P398020-501-3				
16 points preset input	Signal cable (5 cores)	Straight type 3 m	P398020-502-3				
	Signal cable (5 cores)	Right angle type 3 m	P398020-503-3				
10 bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59				
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3				
DeviceNet™		Right angle type 3 m	P398020-501-3				
	Dower cable (4 cares)	Straight type 3 m	P398020-500-3				
RS-232C	Power cable (4 cores)	Right angle type 3 m	P398020-501-3				
HS-232C	Communication cables	Straight type 3 m	P398020-502-3				
	connector (5 cores)	Right angle type 3 m	P398020-503-3				

Note 1) For the 10-bit digital type, there is no right angle type cable connector.


Note 2) Even when "with cable connector" is selected the communication cable is not included in the communication model (CC, DE, PR). Please order separately.


[Bus adapter]

Applicable model	Description	Part No.
CC-Link	Bus adapter (Bus adapter supplied with the product.)	EX9-ACY00-MJ


#### **Dimensions**

## Flat bracket

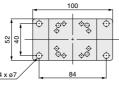

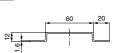

## L-bracket

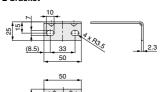




## **Working Principles**

When the input signal rises, the air supply solenoid valve ① turns ON, and the exhaust solenoid valve ② turns OFF. Therefore, supply pressure passes through the air supply solenoid valve ① and is applied to the pilot chamber ③. The pressure in the pilot chamber ③ increases and operates on the upper surface of the diaphragm ④.

As a result, the air supply valve (5) linked to the diaphragm (4) opens, and a portion of the supply pressure becomes output pressure.

This output pressure feeds back to the control circuit ® via the pressure sensor D. Here, a correct operation functions until the output pressure is proportional to the input signal, making it possible to always obtain output pressure proportional to the input

#### Working Principle Diagram Pressure display ® Control Output signal Power supply Input signal circuit 7 Pressure sensor Pressure display ② Exhaust Air supply solenoid solenoid Power supply Output signal (8) Control valve valve circuit Input signal (7) Pressure sensor **EXH** 1 Air supply 2 Exhaust solenoid solenoid valve valve 4 Diaphragm 3 Pilot chamber EXH 6 Exhaust valve (4) Diaphragm Supply 3 Pilot chamber **EXH** valve Supply valve OUT SUP OUT SUP **EXH** 6 Exhaust valve ITV1000 ITV2000, 3000

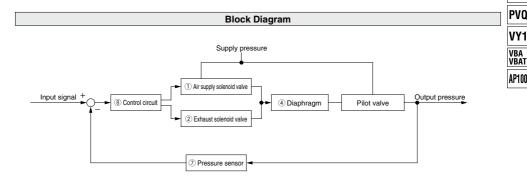

907

ARJ

AR425

to 935 ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

ITV


IC

ITVH ITVX PVQ


VY1


## ITV101□ Series



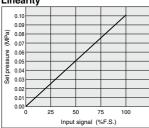


#### Hysteresis

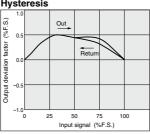


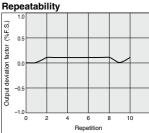


Pressure characteristics Set pressure: 0.05 MPa

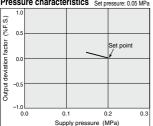


Flow rate characteristics Supply pressure: 0.2 MPa

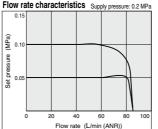


Relief flow characteristics

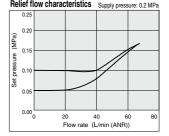


## ITV201□ Series

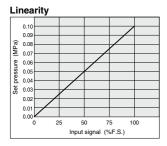


## Hysteresis

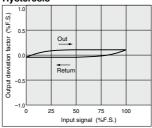


Repeatability

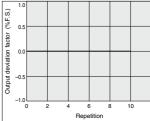


Pressure characteristics Set pressure: 0.05 MPa

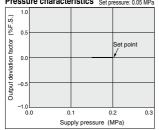

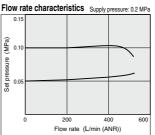


Relief flow characteristics Supply pressure: 0.2 MPa

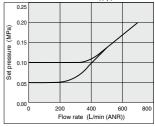



## ITV301□ Series



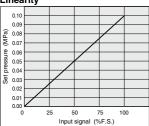

#### Hysteresis

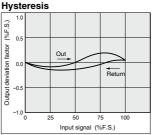

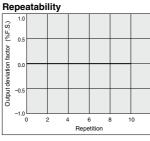


ARM ARP

ARJ


AR425 to 935

ARX


AMR

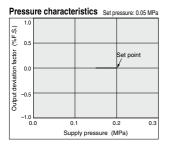

## Flow rate characteristics Supply pressure: 0.2 MPa

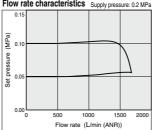

#### Relief flow characteristics Supply pressure: 0.2 MPa

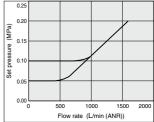

IR□-A IR

IRV VEX

> SRH SRP

SRF

ITV

IC

ITVH


ITVX PVQ

VY1


VBA VBAT AP100

## ITV103□ Series




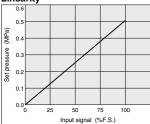


#### Hysteresis

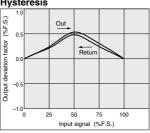


#### Repeatability

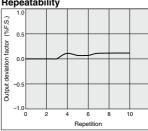


Pressure characteristics Set pressure: 0.2 MPa

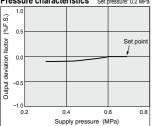

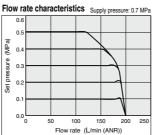


## Relief flow characteristics

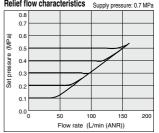


## ITV203□ Series


## Linearity

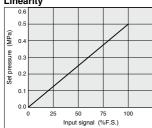


#### Hysteresis

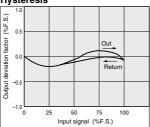


Repeatability

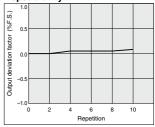


Pressure characteristics Set pressure: 0.2 MPa

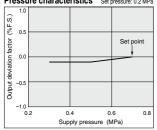

Flow rate characteristics Supply pressure: 0.7 MPa

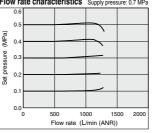


Relief flow characteristics Supply pressure: 0.7 MPa

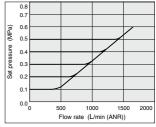



## ITV303□ Series



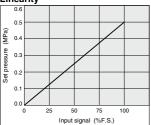

#### Hysteresis

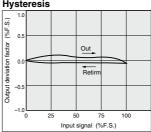

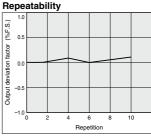


## ARM ARP

ARJ


AR425 to 935

ARX


AMR

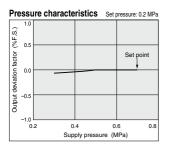

## Flow rate characteristics Supply pressure: 0.7 MPa

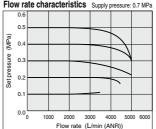

## Relief flow characteristics Supply pressure: 0.7 MPa

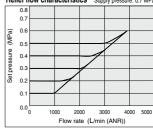

IR□-A IR

IRV

VEX

SRH

SRP

SRF

ITV

IC

ITVH


ITVX

PVQ VY1


VBA VBAT AP100

## ITV105□ Series


#### Linearity

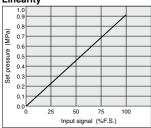


#### Hysteresis

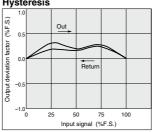


#### Repeatability

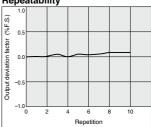


Pressure characteristics

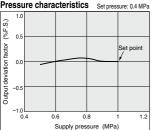

## Flow rate characteristics Supply pressure: 1.0 MPa

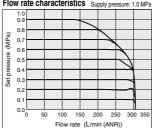


Relief flow characteristics Supply pressure: 1.0 MPa

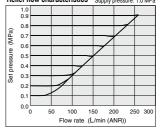


## ITV205□ Series


#### Linearity

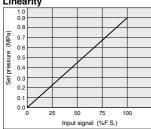


#### **Hysteresis**

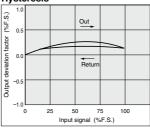


Repeatability

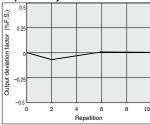


Pressure characteristics Set pressure: 0.4 MPa

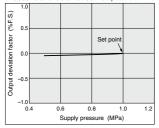


Flow rate characteristics Supply pressure: 1.0 MPa

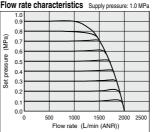



Relief flow characteristics Supply pressure: 1.0 MPa

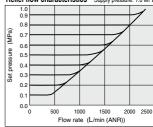



## ITV305□ Series

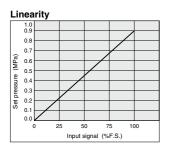


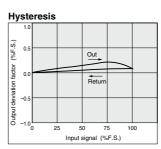

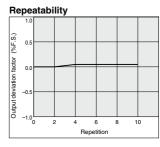

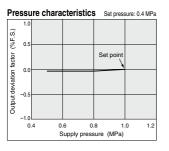

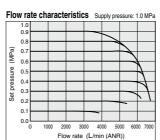

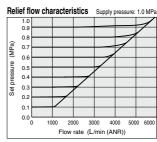

5000 6000

ARP IR□-A

ARJ

AR425 to 935

ARX

AMR

ARM

IR IRV

VEX SRH

SRP

SRF

ITV

IC

ITVH ITVX


PVQ

VY1 VBA VBAT

AP100

## Construction

## ITV1000

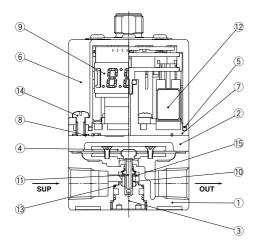


#### **Main Component Parts**

	No.	Description	Material			
•	1	Body	Aluminum alloy			
	2 Cover		Aluminum alloy			
•	3	Valve guide	Aluminum alloy			
			Aluminum alloy			
•	4	Diaphragm assembly	Weather resistant NBR			
			Steel			
	5	Seal	NBR			
	_	Bowl assembly	Resin			
	6	Bowl assembly	Silicone rubber			
	7	Sub-plate	Resin			
- 8		Seal	NBR			
	9	Control circuit assembly	_			
♦ 10		Bumper	NBR			
		Valve	Stainless steel			
•	11	vaive	HNBR			
	12	Solenoid valve	_			
•	13	O-ring	NBR			
	14	Round head Phillips screw	Steel			
•	15	Flat washer	Stainless steel			

<sup>\*</sup> Parts in contact with fluid are indicated with a mark .

## ITV2000

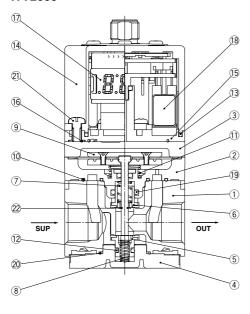

#### Main Component Parts


	Main Component Parts					
	No.	Description	Material			
•	1	Body	Aluminum alloy			
•	2 Intermediate body		Aluminum alloy			
	3	Cover	Aluminum alloy			
•	4	Valve guide	Aluminum alloy			
•	5	Valve (Supply valve)	HNBR/Brass			
•	6	Valve (Exhaust valve)	HNBR/Brass			
•	7	Valve spring	Stainless steel			
•	8	Valve spring	Stainless steel			
			Stainless steel			
	9	Dianhyaam accambly	Aluminum alloy			
•	9	Diaphragm assembly	Weather resistant NBR			
			Steel			
•	10	Seal	NBR			
•	11	Bias spring	Stainless steel			
•	12	O-ring	NBR			
	13	Seal	NBR			
	14	Bowl assembly	Resin			
	14	Bowl assembly	Silicone rubber			
	15	Sub-plate	Resin			
	16	Seal	NBR			
	17	Control circuit assembly	_			
	18	Solenoid valve	_			
•	19	O-ring	NBR			
	20	O-ring	NBR			
	21	Round head Phillips screw	Steel			
•	22	Retaining ring	Stainless steel			
-						

<sup>\*</sup> Parts in contact with fluid are indicated with a mark .



## Construction

## ITV3000

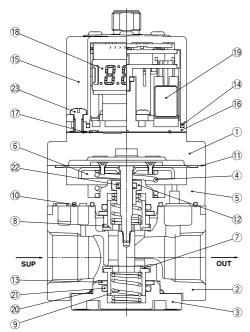

**Main Component Parts** 

	No.	Description	Material		
	1	Cover	Aluminum alloy		
•	2	Body	Aluminum alloy		
•	3 Valve guide		Aluminum alloy		
•	4	Bias spring	Stainless steel		
•	5	Intermediate body	Aluminum alloy		
			Weather resistant NBR		
			Rolled sheet steel		
•	6	Diaphragm assembly	Stainless steel		
			Aluminum alloy		
			Steel		
•	7	Valve (Supply valve)	HNBR/Brass		
•	8	Valve (Exhaust valve)	HNBR/Brass		
•	9	Valve spring	Stainless steel		
•	10	Seal	NBR		
	11	Seal	NBR		
•	12	Rod guide	Brass		
•	13	O-ring retainer	Aluminum alloy		
	14	Seal	NBR		
	15	Bowl assembly	Resin		
		Down assembly	Silicone rubber		
	16	Sub-plate	Resin		
	17	Seal	NBR		
	18	Control circuit assembly	_		
	19	Solenoid valve	_		
	20	O-ring	NBR		
•	21	O-ring	NBR		
•	22	O-ring	NBR		
	23	Round head Phillips screw	Steel		

<sup>\*</sup> Parts in contact with fluid are indicated with a mark ...

ARJ AR425 to 935

ARX AMR ARM

ARP IR□-A

IR IRV

VEX

SRH

SRF

ITV IC

ITVH

ITVX

PVQ VY1


VBA VBAT AP100


#### **Dimensions**


ITV10□□

Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

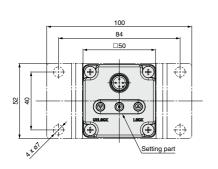


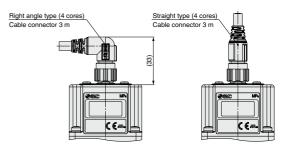

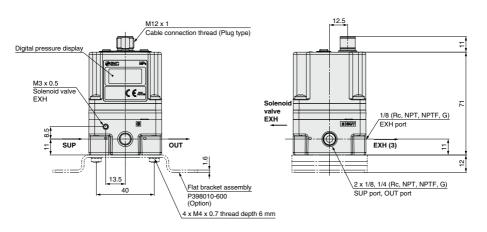


## L-bracket

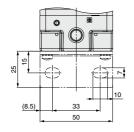

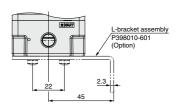


## Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

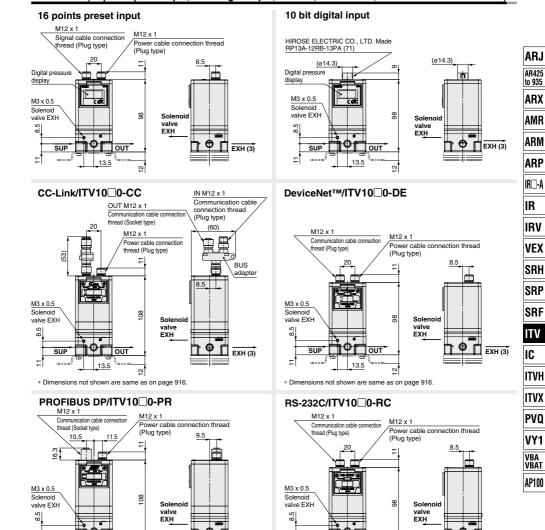

EXH (3)

**SMC** 

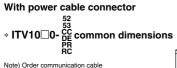

OUT

13.5


\* Dimensions not shown are same as on page 916

Note) Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 904.)

SUP



SUP

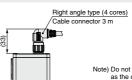

ď

OUT

13.5

\* Dimensions not shown are same as on page 916.

Note) Do not attempt to rotate, as the cable connector does not turn.


EXH (3)


#### **Dimensions**


ITV20□□

Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

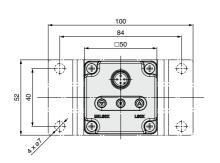


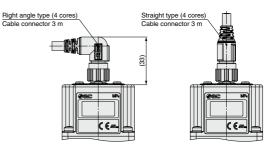

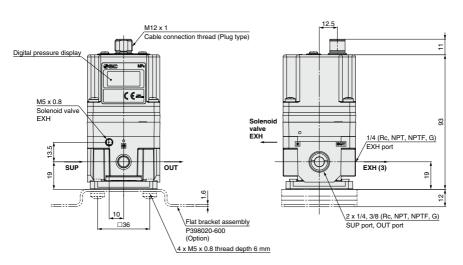


## L-bracket

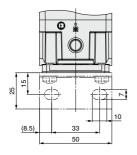

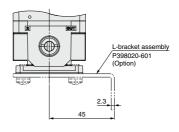

## Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

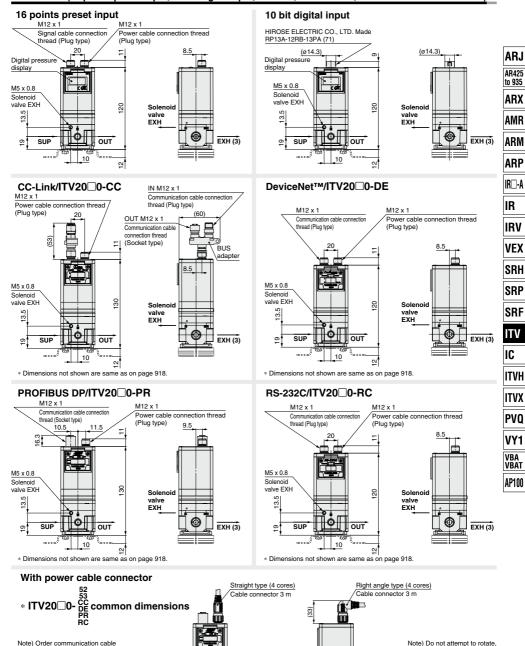

**ØSMC** 

(other than 16 points, RS-232C)

separately. (Refer to page 904.)

919

as the cable connector


does not turn.


## **Dimensions**


## ITV30□□

#### Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

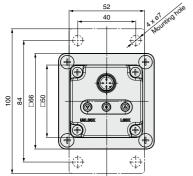


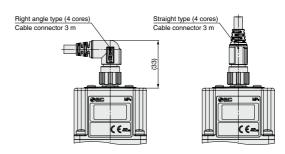

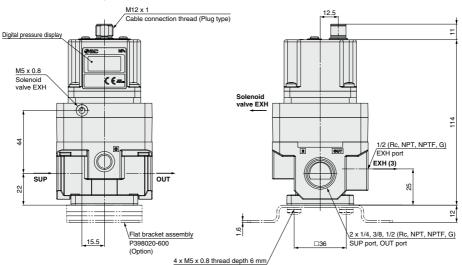


## L-bracket

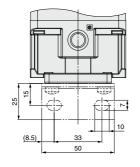

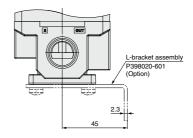

## Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

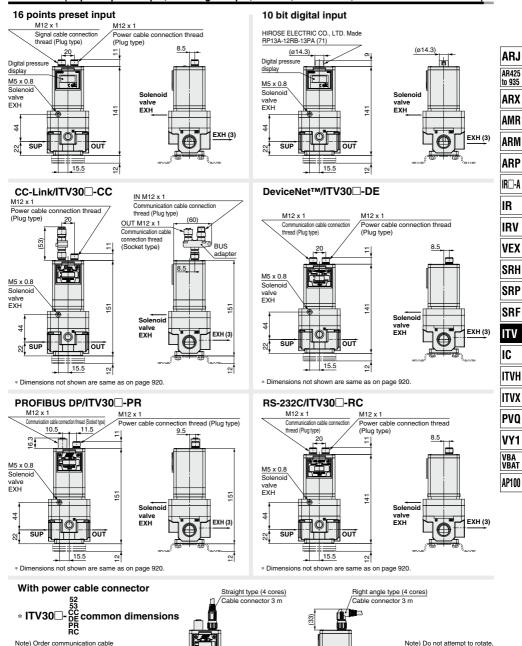

**SMC** 

(other than 16 points, RS-232C)

separately. (Refer to page 904.)

921


as the cable connector

does not turn.



Please contact SMC for detailed dimensions, specifications and lead times.




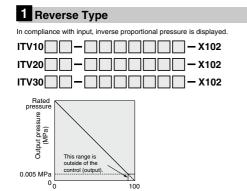

## Input signal (%F.S.) Input/output characteristics chart

Note 1)  $\square$  in part number is the same model no. for the standard products. Note 2) Except for preset input type and digital input type.

Note 3) For communication models, consult SMC for availability.

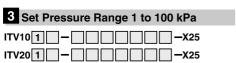

Note 1) For preset input type, digital input type and communication models, consult SMC for availability.

2 High Pressure Type (SUP 1.2 MPa, OUT 1.0 MPa)
ITV105 — X224
ITV205 — X224
ITV305 — X224

Note 1) For preset input type, digital input type and communication models, consult SMC for availability.

( E CAL US ROHS




Please contact SMC for detailed dimensions, specifications and lead times

## 4 High-Speed Response Time Type

Pressure response with no load is approx. 0.1 sec.

Note 1) This is not a guaranteed value as it depends on the operating environment.

Note 2) When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.

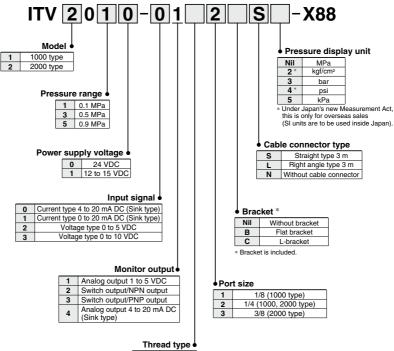

Nil	Rc		
N	NPT		
Т	NPTF		
F	G		

ARJ

AR425 to 935

ARX AMR

ARM

ARP IR□-A

IR

IRV

VEX

SRH SRP

SRF

ITV

IC

ITVH ITVX

PVQ

VY1 VBA VBAT

AP100

( E Rus Rohs


Please contact SMC for detailed dimensions, specifications and lead times.



## 5 Manifold Specifications (Except ITV3000 series)

2 through 8 station manifold.

#### How to Order Manifolds

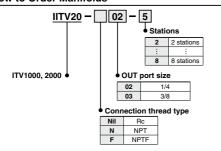

#### **How to Order for Manifold Mounted**



Note 1) 
in part number is the same model no. for the standard products.

Note 2) For communication models, consult SMC for availability.

Note 3) The thread type is Rc only.


Note 4) For ITV1000 series, the port size is 1/8 only.

Note 5) For ITV2000 series, the port size is 1/4 only.

Note 6) The bracket accessory can not be selected. Note 7) Not applicable to ITV3000 series

→ The \* is the symbol for mounting. Add the \* symbol at the beginning of part numbers for electro-pneumatic regulators, etc. to be mounted on the base.

#### **How to Order Manifold Assemblies**

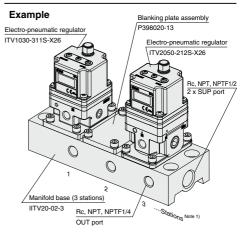

Note) Refer to the table below for possible mixed combination.

Model	ITV101□	ITV103□	ITV105□	ITV201□	ITV203□	ITV205
ITV101□	•	_	_	•	_	_
ITV103□	_	•	•	_	•	•
ITV105□	_	•	•	_	•	•
ITV201□	•	_	_	•	_	_
ITV203□	_	•	•	_	•	•
ITV205□	ı	•	•	_	•	•

Note 1) Electro-pneumatic regulators are counted starting from station 1 on the left side with the OUT ports in front.

Note 2) The port size for mounted electro-pneumatic regulators is Rc 1/8 (ITV1000), Rc 1/4 (ITV2000) only.

Note 3) When there is a large number of stations, use piping with the largest possible inside diameter for the supply side, such as steel piping.

Note 4) The use of the straight type cable connector is recommended. To mount right angle type, be certain to check that no possible interference occurs.

Note 5) When mounting a blanking plate and the regulator with different pressure set, please inform SMC of the order of a manifold station beside a purchase order.





( E CAL US ROHS



**ARJ** 

AR425

to 935

ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

ITV

IC

ITVH

ITVX


PVQ

VY1 VBA VBAT AP100

Please contact SMC for detailed dimensions, specifications, and lead times

## 6 Linearity: $\pm 0.5\%$ F.S. or Less

Application examples: Polishing equipment and peripheral equipment for wafers, LCD glasses, color filters, etc.

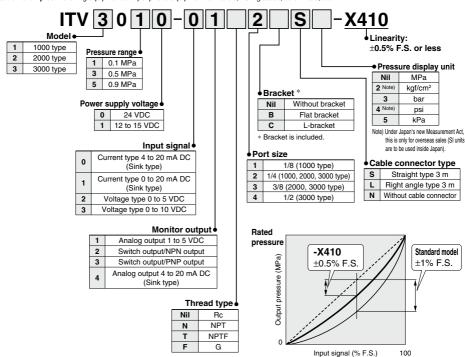

The graph shown above is a typical example. (This graph shows that the output pressure curve is in a negative range when compared to the ideal line.)

## Specifications

Fluid		Air						
Minimum supply	pressure	Set pressure +0.1 MPa						
Maximum supply	pressure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)						
Proof pressure	(Supply side)	1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)						
Proof pressure	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)						
Set pressure range	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa						
Power supply vo	Itage	0: 24 VDC ±10%, 1: 12 to 15 VDC						
Current concum	ation	0.12 A or less (24 VDC ±10% type)						
Current consump	Juon	0.18 A or less (12 to 15 VDC type)						
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC						
Input impedance		Voltage type: Approx. 6.5 kΩ, Current type: 250 $\Omega$ or less						
Output signal		Analog output: 1 to 5 VDC/4 to 20 mA DC, Switch output (NPN/PNP)						
Linearity		±0.5% F.S. or less						
Hysteresis		0.5% F.S. or less						
Repeatability		±0.5% F.S. or less						
Sensitivity		0.2% F.S. or less						
Temperature cha	racteristics	±0.12% F.S./°C or less						
0.44	Accuracy	±2% F.S. ±1 digit or less						
Output pressure display	Minimum unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1						
Ambient and fluid	temperature	0 to 50°C (No condensation)						
Enclosure		IP65						
Weight		ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (without brackets)						

The above characteristics (specifications) are confined to the static state. When air is consumed on the output side, the pressure may fluctuate.




C C C ROHS

Please contact SMC for detailed dimensions, specifications, and lead times



## 7 With Alarm Output

Alarm is output if the set pressure is not reached or maintained for 5 seconds or more. **Application examples:** Pressure management for thrust control, etc.

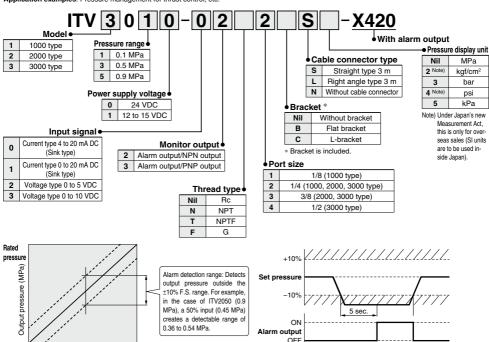

Input signal (% F.S.) 10 Figure 1. Alarm output range

**Specifications** 

100

#### Figure 2. Relationship between output pressure and alarm output

Fluid		Air			
Minimum supply	pressure	Set pressure +0.1 MPa			
Maximum supply	pressure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			
D	(Supply side)	1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)			
Proof pressure	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			
Set pressure range	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa			
Power supply vo	tage	0: 24 VDC ±10%, 1: 12 to 15 VDC			
0		0.12 A or less (24 VDC ±10% type)			
Current consump	tion	0.18 A or less (12 to 15 VDC type)			
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC			
Input impedance		Voltage type: Approx. 6.5 kΩ, Current type: 250 $\Omega$ or less			
Output signal		Alarm output (NPN/PNP)			
Linearity		±1.0% F.S. or less			
Hysteresis		0.5% F.S. or less			
Repeatability		±0.5% F.S. or less			
Sensitivity		0.2% F.S. or less			
Temperature cha	racteristics	±0.12% F.S./°C or less			
Outnut program display	Accuracy	±2% F.S. ±1 digit or less			
Output pressure display	Minimum unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1			
Ambient and fluid temperature		0 to 50°C (No condensation)			
Enclosure		IP65			
Weight		ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (without brackets)			


## Compact Vacuum Regulator

# $oxed{ITV009}$ $oxed{\Box}$ Series

( RoHS

## **How to Order**



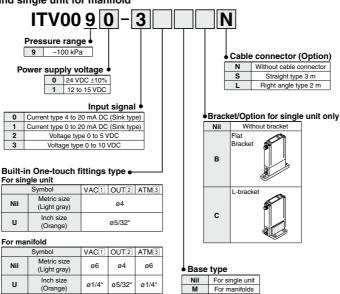

#### Manifold IITV00-02 Option Stations If a DIN rail longer than 02 2 stations the specified stations is 03 3 stations required, specify the applicable stations in 10 10 stations two digits. (Maximum 10 stations) Example) IITV00-05-07 One-touch fitting size for supply/

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

ø6 (Light gray) ø1/4" (Orange)

## How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators to be mounted below the manifold part number.

#### Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


IITV00-03······1 set (Manifold part no.)

\* ITV0090-3MS-----2 sets (Vacuum regulator part no. (1, 2 stations))

\* ITV0090-3ML-----1 set (Vacuum regulator part no. (3 stations))

Note)Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk (\*) specifies mounting. Add an asterisk (\*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

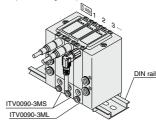



exhaust parts (End plate)

## Compact Vacuum Regulator ITV009 Series

## **Specifications**



Mode		ITV009□		
Minimum supply p	ressure	Set pressure –1 kPa		
Maximum supply p	ressure	-101 kPa		
Set pressure range	)	-1 to -100 kPa		
	Voltage	24 VDC ±10%, 12 to 15 VDC		
Power supply	Current consumption	Power supply voltage 24 VDC type: 0.12 A or less Power supply voltage 12 to 15 VDC type: 0.18 A or less		
Input signal	Voltage type		0 to 5 VDC, 0 to 10 VDC	
iliput sigilai	Current type	4 to 20	mA DC, 0 to 20 mA DC (Sink type)	
Input impedance	Voltage type		Approx. 10 kΩ	
input impedance	Current type		Approx. 250 Ω	
Output signal Note 4) Analog output		1 to 5 VDC (Output impedance: Approx. 1 kΩ) Output accuracy: ±6% F.S. or less		
Linearity	•	±1% F.S. or less		
Hysteresis		0.5% F.S. or less		
Repeatability		±0.5% F.S. or less		
Sensitivity		0.2% F.S. or less		
Temperature chara	cteristics	±0.12% F.S./°C or less		
Operating tempera	ture range	0 to 50°C (No condensation)		
Enclosure		IP65 equivalent *		
Connection type		Built-in One-touch fittings		
	For single	Metric size	1, 2, 3: ø4	
Connection size	unit	Inch size	1, 2, 3: ø5/32"	
Connection size	Manifold	Metric size	1, 3: ø6, 2: ø4	
		Inch size	1, 3: ø1/4", 2: ø5/32"	
Weight Note 1)		100 g or less (without option)		

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

Note 3) When the power is turned on, a noise may be generated. This noise is normal and does not indicate a fault.

Note 4) When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than

100  $k\Omega$ , the analog output monitor accuracy of  $\pm 6\%$  F.S. or less may not be available. The product with the accuracy of within  $\pm 5\%$  is supplied upon your request. Output pressure remains unaffected.

\* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 941.)

## Accessories (Option)

## Bracket

Flat bracket assembly (including 2 mounting screws) P39800022



L-bracket assembly (including 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

#### Cable connector



Right angle type P398000-501-2



ARJ AR425 to 935

ARX AMR

ARM ARP

IR□-A

IRV VEX

SRH

SRP SRF

ITV

IC

ITVH

ITVX PVQ

VY1

VBA VBAT


AP100




#### **Working Principle**

When the input signal rises, the vacuum pressure soloenoid valve ① turns ON. Due to this, part of the vacuum pressure (VAC.) passes through the vacuum pressure solenoid valve ① and changes to a vacuum pressure. This vacuum pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, the vacuum pressure soloenoid valve and the atmospheric pressure soloenoid valve work alternately to make continuous pressure corrections until vacuum pressure becomes proportional to the input signal, thus, supplying vacuum pressure that is consistently proportional to the input signal.

#### **Working Principle Diagram**

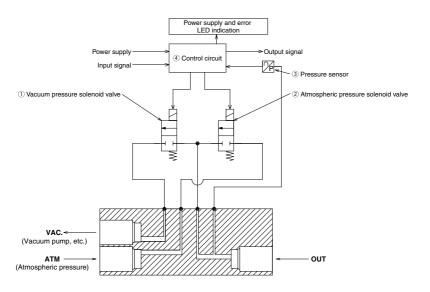



#### **Block Diagram**

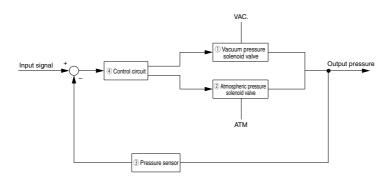



## Compact Vacuum Regulator $ITV009 \square$ Series

#### ITV009□ Series

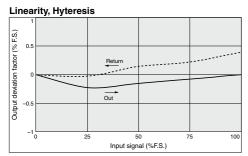

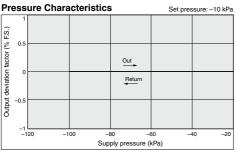

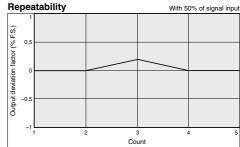

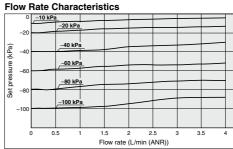

AR425 to 935

ARX

AMR

ARM

ARM

ARJ

IR□-A

IRV VEX

> SRH SRP

SRF

ITV

IC


ITVH

PVQ VY1

VBA VBAT AP100

## ITV009□ Series


#### **Dimensions**

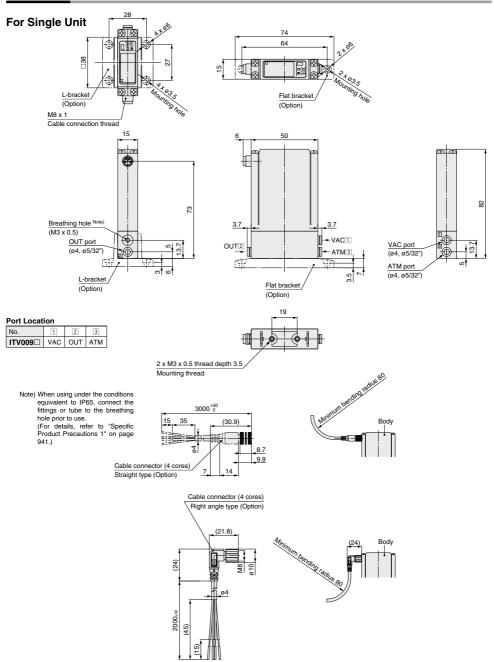



**SMC** 


#### **Dimensions**

#### Single unit for manifold

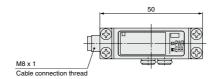

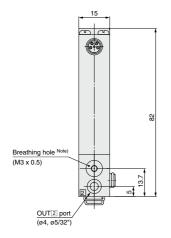


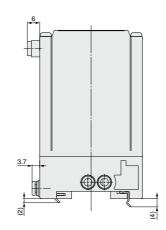

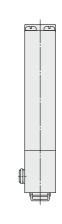

Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific

(For details, refer to "Specific Product Precautions 1" on page 941.)

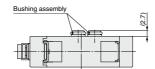

Note) For dimensions of the cable connector, refer to single unit on page 932.

ARJ AR425 to 935

ARX

AMR ARM

ARP

IR□-A IR

IRV

VEX SRH

SRP

SRF

ITV IC

ITVH

ITVX PVQ


VY1

AP100

## ITV009□ Series

#### **Dimensions**


#### Manifold

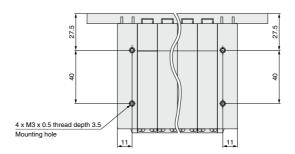



#### Port Location

No.	1	2	3
ITV009□	VAC	OUT	ATM

Note) Stations are counted starting from the D side.

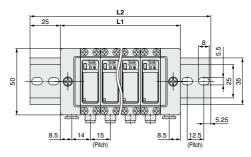

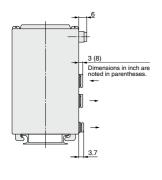

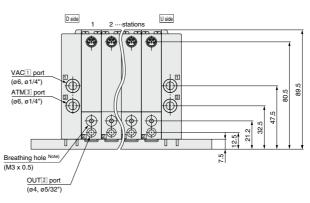

Note) For dimensions of the cable connector, refer to single unit on page 932.

									(mm)
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail (g)	20	22	27	29	31	34	36	41	43

Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use.

(For details, refer to "Specific Product Precautions 1" on page 941.)

## **Electronic Vacuum Regulator**

## ITV2090/2091 Series

C C CRUSUS ROHS



AR425

to 935 ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

IΤV

IC

ITVH

ITVX


PVQ

VY1

VBA VBAT

AP100

**How to Order** 

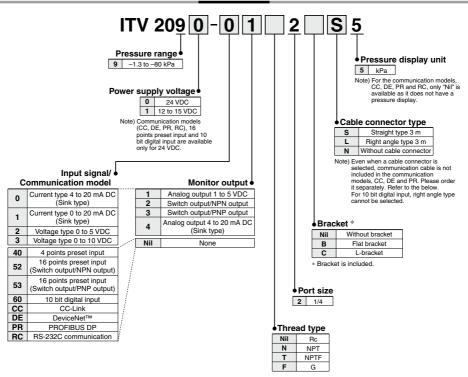

For communications cables, use the parts listed below (refer to M8/M12 connector in Best Pneumatics No.1-1 for details)


or order the product ce	or order the product certified for the respective protocol (with M12 conflector) separately.						
Application Communication cable part nu		Note					
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied					
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.					
DeviceNet™	PCA-1557633 (Socket type)	T-branch connector not supplied.					
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.					
PROFIBUS DP	PCA-1557688 (Socket type)	T-branch connector not supplied.					
compatibility	PCA-1557691 (Plug type)	1-branch connector not supplied.					

#### Stepless control of vacuum pressure proportional to an electrical signal





#### Piping/Wiring Diagram

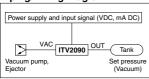

#### Standard Specifications

Model   ITV2090   ITV2091	Man	1-1	ITV2090	ITV2091		
Maximum supply vacuum pressure						
Set pressure range			· · · · · · · · · · · · · · · · · · ·			
Voltage		•		****		
Power supply   Current consumption   Current type   Notes   Current type   Notes   Power supply voltage 24 VDC type: 0.12 A or less   Notes   Power supply voltage 12 to 15 VDC (ype: 0.18 A or less   Power supply voltage 12 to 15 VDC (ype: 0.18 A or less   Power supply voltage   Power supply voltage   Power supply   Power supply voltage   Power supply	Set pressure rang					
Consumption   Power supply voltage 12 to 15 VDC type: 0.18 A or less						
Current type   Note 2    4 to 20 mA DC, 0 to 20 mA DC (Sink type)	Power supply					
Note   Preset input   Preset input   A points (Negative common), 16 points (No common polarity)			117			
Preset input   4 points (Negative common), 16 points (No common polarity)						
Preset input   4 points (Negative common), 1 points (No common polarity)	Innut signal Note 7)	· ,.				
Current type	input signal	Preset input	1 ( )	1 1 1		
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$		Digital input				
Preset input   Power supply voltage 24 VDC type: Approx. 4.7 kΩ   Power supply voltage 12 VDC type: Approx. 4.7 kΩ   Power supply voltage 12 VDC type: Approx. 2.0 kΩ   Approx. 4.7 kΩ   Appro		Current type	250 Ω or	less Note 3)		
		Voltage type	Approx.	6.5 kΩ		
1 to 5 VDC (Output impedance: Approx. 1 kΩ)		Preset input				
Output signal (Monitor output)         Analog output         4 to 20 mA DC (Sink type) (Output impedance: 250 Ω or less) Output accuracy ± 6% F.S. or less           Switch output         NPN open collector output: Max. 30 V, 80 mA PNP open collector output: Max. 80 mA           Linearity         ± 1% F.S. or less           Hysteresis         0.5% F.S. or less           Repeatability         ± 0.5% F.S. or less           Sensitivity         0.2% F.S. or less           Temperature characteristics         ± 0.12% F.S./°C or less           Output pressure display         Accuracy         ± 2% F.S. ± 1 digit or less           display         Accuracy         ± 2% F.S. ± 1 digit or less           Mabient and fluid temperature         0 to 50°C (No condensation)           Enclosure         IP65		Digital input	Approx. 4.7 kΩ			
Switch output   PNP open collector output: Max. 80 mA	Output signal	Analog output	4 to 20 mA DC (Sink type) (Ou	tput impedance: 250 $\Omega$ or less)		
Hysteresis	(Monitor output)	Switch output				
Repeatability	Linearity		± 1% F.S	S. or less		
Sensitivity         0.2% F.S. or less           Temperature characteristics         ± 0.12% F.S./°C or less           Output pressure display         Accuracy         ± 2% F.S. ± 1 digit or less           display         Units         kPa Note 5/M inimum display: 1           Ambient and fluid temperature         0 to 50 °C (No condensation)           Enclosure         IP65	Hysteresis		0.5% F.S	S. or less		
Temperature characteristics         ± 0.12% F.S./°C or less           Output pressure display         Accuracy         ± 2% F.S. ± 1 digit or less           display         Units         kPa Note 5) Minimum display: 1           Ambient and fluid temperature         0 to 50°C (No condensation)           Enclosure         IP65	Repeatability		± 0.5% F.	S. or less		
Output pressure display         Accuracy         ± 2% F.S. ± 1 digit or less           Units         kPa Note 5) Minimum display: 1           Ambient and fluid temperature         0 to 50°C (No condensation)           Enclosure         IP65	Sensitivity		0.2% F.S. or less			
display         Units         kPa Note 5) Minimum display: 1           Ambient and fluid temperature         0 to 50°C (No condensation)           Enclosure         IP65	Temperature characteristics		± 0.12% F.S	S./°C or less		
Ambient and fluid temperature 0 to 50°C (No condensation) Enclosure IP65	Output pressure	Accuracy	± 2% F.S. ± 1	digit or less		
Enclosure IP65	display	Units	kPa Note 5) Minimum display: 1			
	Ambient and fluid	l temperature	0 to 50°C (No condensation)			
Weight Note 7, 8) 390 q			IP65			
	Weight Note 7, 8)		390	0 g		

Note 1) The minimum supply vacuum pressure should be 13.3 kPa less than the maximum vacuum pressure setting value. Note 2) 4 to 20 mA DC is not possible with the 2-wire type. Power supply voltage (24 VDC or 12 to 15 VDC) is required. Note 3) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input power supply. This is 350  $\Omega$  or less

for an input current of 20 mA DC.

When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k $\Omega$ , the analog output monitor accuracy of within ±6% (full span) may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.

Note 4) Either analog output or switch output must be selected. Furthermore, when switch output is selected, either NPN output or PNP output must also be selected. Use caution that the preset input type is not equipped with an output signal function.

Note 5) Please contact SMC regarding indication with other units of pressure.

Note 6) The product characteristics are confined to the static state. Pressure may fluctuate when air is consumed at the output side.

Note 7) Refer to the table below for communication specifications.

Note 8) Add 50 g for digital input type, 70 g for 16 points preset input type respectively.

#### Communication Specifications (CC, DE, PR, RC)

Model	ITV□0□0-CC□□	ITV□0□0-DE□□	ITV□0□0-PR□□	ITV□0□0-RC□□
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)	Ver 1.10	Volume1 (Edition3.8), Volume3 (Edition1.5)	DP-V0	_
Communication speed	156 k/625 k 2.5 M/5 M/10 M bps	125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	9.6 kbps
Configulation file Note 2)	_	EDS	GSD	_
I/O occupation area (input/output data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communication data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Electric insulation Note 4)	Insulation	Insulation	Insulation	Non-insulation
Terminating resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)	_
Current consumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less
Weight ITV2090	470	460	490	460

Note 1) Note that version information is subject to change.

Note 2) Configuration files can be downloaded from the operation manual page on SMC's website: http://www.smcworld.com
Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Note 4) The insulation between the electrical signal of the communication system and ITV power supply 936

#### **Working Principle**


#### Pressure display Power supply 8 Control Output signal Input signal circuit M. (7) Pressure sensor 1 Vacuum pressure 2 Atmospheric pressure solenoid valve solenoid valve Atmospheric pressure 4 Diaphragm (3) Pilot chamber Vacuum pressure VAC valve (Vacuum pump, etc. ATM OUT. (Atmospheric pressure) (Set pressure) 6 Atmospheric pressure valve


#### **Working Principle**

When the input signal increases, the vacuum pressure solenoid valve (1) turns ON, and the atmospheric pressure solenoid valve ② turns OFF. Because of this, VAC. and the pilot chamber ③ are connected, the pressure in the pilot chamber 3 becomes negative and acts on the top of the diaphragm 4


As a result, the vacuum pressure valve (§) which is linked to the diaphragm (4) opens, VAC. and OUT. are connected, and the set pressure becomes negative.

This negative pressure feeds back to the control circuit ® via the pressure sensor ⑦. Then, a correct operation works until a vacuum pressure proportional to the input signal is reached, and a vacuum pressure is obtained which is always proportional to the input signal.

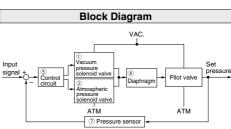


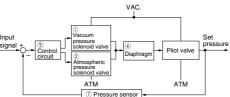


#### ITV209 ☐ Series

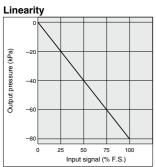




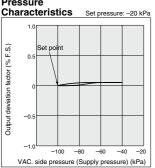




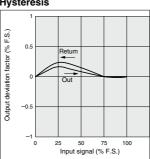

Flow Rate Supply vacuum pressure: -100 kPa Characteristics

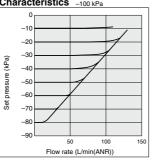

#### Repeatability

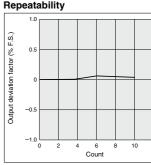

#### Flow rate characteristics measurement conditions

- · Exhaust flow rate of the vacuum pump
- used for measurement: 500 L/min (ANR)
- Inlet vacuum pressure: -100 kPa
- (When outlet flow rate is 0 L/min (ANR))
- Maximum flow rate: 132 L/min (ANR) (With inlet vacuum pressure at -39 kPa)

ARJ AR425

to 935 ARX

AMR

ARM ARP

IR□-A

IR

IRV

VEX SRH

SRP

SRF

ITV

IC ITVH

ITVX PVO

VY1

VBA VBAT AP100


## ITV209□ Series


#### **Dimensions**

#### ITV209□


#### Flat bracket


Note) Do not attempt to rotate the cable connector, as it does not turn.

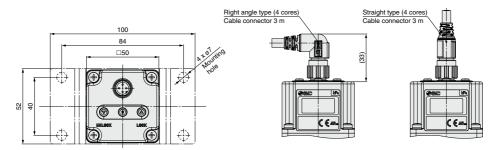

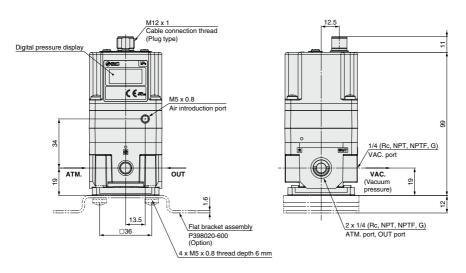


#### L-bracket

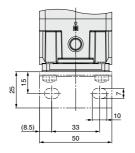

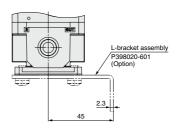

#### Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

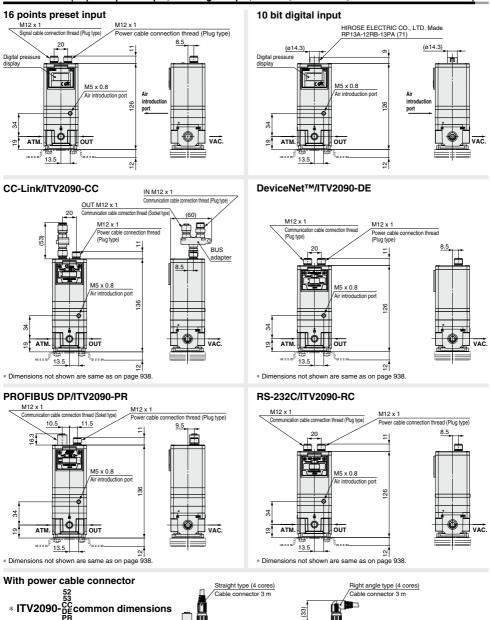

Note) Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 904.) Note) Do not attempt to rotate the cable

connector, as it does not turn.

ARJ

AR425 to 935

ARX

AMR ARM

ARP Ir□-A

IR

IRV

VEX

SRH

SRP

SRF

IΤV

IC

ITVH

ITVX

PVQ

VY1 VBA VBAT

AP100



#### Accessories (Option)/Part No.

[Bracket]

Description	Part No.
Flat bracket assembly (including mounting screws)	P398020-600
L-bracket assembly (including mounting screws)	P398020-601

[Cable connector]

[Gubic Goillicotor]					
Applicable model	Descrip	otion	Part No.		
Current type Voltage type	Cable connector (4 cores)	Straight type 3 m	P398020-500-3		
4 points preset input	Cable connector (4 cores)	Right angle type 3 m	P398020-501-3		
	Power cable (4 cores)	Straight type 3 m	P398020-500-3		
16 points preset input	rower capie (4 cores)	Right angle type 3 m	P398020-501-3		
16 points preset input	01	Straight type 3 m	P398020-502-3		
	Signal cable (5 cores)	Right angle type 3 m	P398020-503-3		
10 bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59		
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3		
DeviceNet™	rower cable (4 cores)	Right angle type 3 m	P398020-501-3		
	Downey ashle (4 serse)	Straight type 3 m	P398020-500-3		
RS-232C	Power cable (4 cores)	Right angle type 3 m	P398020-501-3		
no-2320	Communication cables	Straight type 3 m	P398020-502-3		
	connector (5 cores)	Right angle type 3 m	P398020-503-3		

Note 1) For the 10-bit digital type, there is no right angle type cable connector.


Note 2) Even when "with cable connector" is selected the communication cable is not included in the communication model (CC, DE, PR). Please order separately.

[Bus adapter]

[Dus adapter]		
Applicable model	Description	Part No.
CC-Link	Bus adapter (Bus adapter supplied with the product.)	EX9-ACY00-MJ


#### **Dimensions**



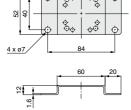

100

#### L-bracket

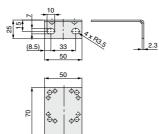

Model	Bracket tightening torque
ITV1000	0.76 ± 0.05 N·m
ITV2000/3000	1.5 ± 0.05 N·m



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

#### ITV0000/009 ☐ Series Precautions

#### Air Supply

#### 

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 µm or less.
- 2. Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- 3. If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction.

For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".

#### Wiring

### 

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage.

Further, use DC power with sufficient capacity and a low ripple.







4: (Black

3: (Blue)

Note) A right angle type cable is also available. The entry direction for the right angle type connector is to downwards (SUP port side).



#### Wiring Diagrams

2: (White)

1: (Brown)

#### **Current signal type**



Vs: Power Supply 24 VDC ±10% 12 to 15 VDC A : Input signals 4 to 20 mA DC


0 to 20 mA DC

#### Voltage signal type



Vs : Power Supply 24 VDC ±10% 12 to 15 VDC Vin: Input signals 0 to 5 VDC 0 to 10 VDC

#### Monitor output wiring diagram

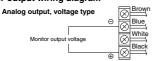

#### Handling

### **⚠** Caution

- 1. Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side.

However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.

- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated.

Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.

- 5. This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 6. The optional cable connector is a 4 wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 7. Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 8. Take the following steps to avoid malfunction due to noise.
  - 1) Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
  - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
- 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 9. The product characteristics are confined to the static state. When air is consumed on the output side, and especially used in the system with large leakage, pressure cannot approach the set pressure and the service life is drastically shortened with a humming noise of the solenoid valve.
- 10. For details on the handling of this product, refer to the operation manual which is included with the product.
- 11. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the breathing hole.

Mount a fitting and tube (M-3AU-3 fitting and TIU01m-mm tube recommended) onto the breathing hole and run the tube to a location not exposed to moisture or dust, etc.



12. If this product will be used in a sealed environment, such as inside an inspection box, a ventilation fan should be installed to ensure adequate ventilation as this product can generate heat in some operating conditions.

When the power is turned on, a noise may be generated as a means of checking the operating condition of the solenoid valve. This noise is normal and does not indicate a fault.

- 13. Each product needs to be powered by one power supply unit. The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.
- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.

**ARJ** AR425 to 935

ARX

AMR ARM

ARP

IR

VEX

SRH SRP

SRF

ITV IC

ITVH

ITVX PVQ

VY1 VBA

VBAT AP100



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

#### ITV1000/2000/3000/209 ☐ Series Precautions


#### **Piping**

## ⚠ Warning

 Screw piping together with the recommended proper torque while holding the side that has female threads.


Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive. Furthermore, if the side with the female threads is not held while tightening, excessive force will be applied directly to piping brackets, etc. causing damage or other problems.

Recommended proper torque: N-					
Connection thread 1/8 1/4 3/8 1/2					
Torque	3 to 5	8 to 12	15 to 20	20 to 25	

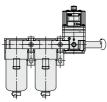

2. Do not allow twisting or bending moment to be applied other than the weight of the equipment itself.

Provide separate support for external piping, as damage may otherwise occur.

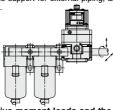

 Since excessive moment loads and the propagation of vibrations, etc. can easily result from inflexible piping made of materials such as steel, avoid these problems by using flexible tubing for intermediate connections.

#### 

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

If chips, sealing material or other debris enter into this product, the solenoid valve may buzz, or the outlet pressure may not be output normally.

2. Winding of sealant tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the piping.

Also, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



#### **Operating Environment**

## **⚠** Warning

- Do not operate in locations having an atmosphere of corrosive gases, chemicals, sea water, or where there will be contact with the same.
- Do not operate in locations where vibration or impact occurs.

#### **⚠** Caution

- In locations where the body is exposed to water, steam, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH (solenoid) ports, thereby causing problems.
- 2. To overcome this, simply install tubing to each port, using the fittings, and extend the tubing so that the other end is at a location where no water splash, etc. occurs. Make sure not to bend, or block the I.D. of the tubing as this will have a detrimental affect on the pressure control.
- Do not operate in locations where vibration or impact occurs.
- In locations which receive direct sunlight, provide a protective cover, etc.
- 5. In locations near heat sources, block off any radi-
- In locations where there is contact with spatter from water, oil or solder etc., implement suitable protective measures.

#### Air Supply

## **⚠** Warning

1. Type of fluids

Please consult with SMC when using the product in applications other than compressed air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause malfunction.

### **⚠** Caution

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5  $\mu$ m or less.
- Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction. For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

#### ITV1000/2000/3000/209 ☐ Series Precautions

#### Handling

#### 

- 1. Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side. However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. The setting side pressure cannot be completely released from this product in the range below 0.005 MPa (or -1.3 kPa for Vacuum models). In cases where the pressure needs to be reduced completely to 0 MPa, install a 3 port valve, etc. on the setting side to discharge the residual pressure.
- 6. This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 7. The optional cable connector is a 4-wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 8. When connecting the cable to this product, turn the lock ring of the cable. If a portion other than the lock ring of the cable is turned, it may damage the connector on the body. Turn the lock ring by hand without using a tool.
- 9. The right angle cable does not rotate and is limited to only one entry direction. If the right angle cable is rotated forcibly, the cable may be broken or damaged, or may damage the connector on the body.
- 10. Take the following steps to avoid malfunction due to noise.
  - 1) Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
  - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
  - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 11. Due to the large volume of the output side, a loud exhaust noise will be produced when being used for the purpose of a relief function. Therefore, install a silencer (SMC AN20 or AN40 series) on the exhaust port (EXH port). The port sizes are Rc 1/8, Rc 1/4 and Rc 1/2.
- 12. Specifications on pages 905 and 936 is in case of static environment. Pressure may fluctuate when air is consumed at the output side.

#### Handling

### **∕**∿ Caution

- 13. For details on the handling of this product, refer to the operation manual which is included with the product.
- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. The solenoid valves built into this product are consumables. Perform periodic maintenance in environments where the solenoid valves are operated at a high frequency. The parts can be replaced with a solenoid valve assembly. Please contact SMC for the part number.

#### **Design and Selection**


#### ∕!\ Caution

- 1. Use the following UL approved products for DC power supply combinations.
  - (1) Limited voltage current circuit in accordance with UL 508. A circuit in which power is supplied by the secondary coil of a transformer that meets the following conditions.
    - Maximum voltage (with no load): 30 Vrms (42.4 V peak) or less

    - Maximum current: (1) 8 A or less (including when short circuited)
      - (2) limited by circuit protector (such as fuse) with the following ratings.

No load voltage (V peak)	Max. current rating
0 to 20 [V]	5.0
Over 20 and 30 or less [V]	100
Over 20 and 30 or less [v]	Peak voltage

- (2) A circuit (class 2 circuit) with maximum 30 Vrms (42.4 V peak) or less, and a power supply consisting of a class 2 power supply unit confirming to UL1310, or a class 2 transformer confirming to UL1585
- 2. Operate these products only within the specified voltage. Using voltages beyond the specified levels could cause faults or malfunctions.
- 3. Use 0 V as the baseline for the power supplied to the unit for output, control and input.

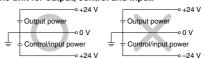

- 4. Each product needs to be powered by one power supply unit.
  - The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.
- 5. Consult SMC for the usage when the downstream side is released to atmosphere.

This product is a pressure controller. The downstream side being released to atmosphere makes the inlet valve full open, allowing a large amount of atmosphere flow into the body. Consult SMC for the appropriate usage when you use the product under such condition since the product may not meet the specification or the life of the product may be shortened.

**ARJ** 

AR425 to 935 ARX

AMR

ARM ARP

IR□-A

IR IRV

VEX

SRH SRP

SRF

ITV

IC ITVH

ITVX

PVQ

VY1 VBA VBAT

AP100




Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

#### ITV1000/2000/3000/209 ☐ Series Precautions

#### Wiring

### 

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage. Further, use DC power with sufficient capacity and a low ripple.

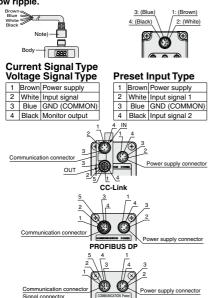

#### DeviceNet™, RS-232C, 16 points preset

		OUT commun			Signal connector		
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	16 points preset		
1	SLD [-]	DRAIN [-]	No connection	No connection	Input signal 1 [Brown]		
2	DB [White]	V+ [Red]	RxD/TxD-N [Green]	TxD [White]	Input signal 2 [White]		
3	DG [Yellow]	V- [Black]	No connection	RxD [Blue]	Input signal 3 [Blue]		
4	DA [Blue]	CAN_H [White]	RxD/TxD-P [Red]	GND [Black]	Input signal 4 [Black]		
5	No connection	CAN_L [Blue]	No connection	No connection	Common [Gray]		

	Power supply connector							
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	16 points preset			
1 [Brown]	Vcc	Vcc	Vcc Vcc		Vcc			
2 [White]	FG	Can not connect	FG	No connection	No connection			
3 [Blue]	GND	GND	GND	GND	GND			
4 [Black]	No connection	Can not connect	No connection	FG	Monitor output			

Note 1) The indicated wire colors are when a cable connector made by SMC is used. Note 2) The cable is also available in a right angle type. (Communication cable:

straight type only) A right angle type connector is attached facing left (towards the SUP port). On communication models, the connector faces backwards (towards the

EXH port). Do not attempt to rotate, as the connector does not turn. Note 3) Perform the wiring so that no electric potential difference occurs between GND of the power supply and GND of the communication section. If any electric potential difference occurs, this may cause the internal parts to burn out.

#### ■ Trademark Information

#### DeviceNet™ is a trademark of ODVA

#### Knock-down connectors \* Order separately.

Application	CC- compa	Link atibility		eviceNet <sup>1</sup> ompatibili		PROFIBUS DP compatibility		
Part number	Plug PCA-	Socket PCA-	Plug PCA- 1557659	Socket PCA-	Terminal Plug PCA- 1557675	Plug PCA-	Socket PCA-	Terminal Plug PCA-

#### Wiring diagram

#### Current signal type



Vs : Power supply 24 VDC 12 to 15 VDC

4 to 20 mA DC A : Input signal 0 to 20 mA DC

#### Voltage signal type




Vs : Power supply 24 VDC 12 to 15 VDC Vin: Input signal 0 to 5 VDC 0 to 10 VDC

#### 4 points preset input type



Vs : Power supply 24 VDC 12 to 15 VDC (Negative common)

#### 16 points preset input type

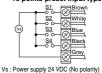

OFF ON ON ON ON ON ON ON

P15 P16

One of the preset pressures P1 through P4 is selected by the ON/OFF combination of S1 and S2.

S1	OFF	ON	OFF	ON	OFF	ON
S2	OFF	OFF	ON	ON	OFF	OFF
S3	OFF	OFF	OFF	OFF	ON	 ON
S4	OFF	OFF	OFF	OFF	OFF	ON
Preset pressure	P01	P02	P03	P04	P05	P14

- \* For safety reasons, it is recommended that one of the preset pressures be set to 0 MPa.
- \* Preset pressures are set based on the minimum unit for output display.

MPa	kgf/cm <sup>2</sup>	bar	psi	kPa
0.001	0.01	0.01	0.1	1

· Note that this is 1 psi for 130 psi types.

#### . . .. .. .. . . .

10 bit digital input t	ype
Wire color	Signal name
Pink-Black 2	Power supply (24 VDC)
Green-Black 2	Power supply (GND)
Blue	Signal Common (No Polarity)
Blue-Black 2	MSB 10 bit
Gray-Black 1	9 bit
Orange-Black 1	8 bit
Green-Black 1	7 bit
Pink-Black 1	6 bit
Blue-Black 1	5 bit
Gray	4 bit
Orange	3 bit
Green	2 bit
Pink	LSB 1 bit

Note) The wire color is shown for when an option cable





Load

## ITV0000/1000/2000/3000 Series **Specific Product Precautions 5**

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

#### ITV1000/2000/3000/209 ☐ Series Precautions Wiring Monitor output wiring diagram Analog output: Voltage type Analog output: Current type (Sink type) Monitor output voltage Monitor output voltage Switch output: NPN type Switch output: PNP type

Load

\*When 80 mA DC or more is applied, detecting device for overcurrentstarts activating and then emits an error signal. (Error number "5")

#### Set Pressure Range

The set pressure range, by unit of standard measured pressure, is shown in the table below.

Set pressure range, by unit of standard measured pressure

			, , , ,							
Unit		Set pressure range								
Unit	IT۱		01_	IT۱	ITV□03□			ITV□05□		ITV209□
MPa	0.005	i to	0.1	0.005	i to	0.5	0.005	to	0.9	_
kgf/cm <sup>2</sup>	0.05	to	1	0.05	to	5	0.05	to	9	_
bar	0.05	to	1	0.05	to	5	0.05	to	9	_
psi	0.7	to	15	0.7	to	70	0.7	to	130	_
kPa	5	to	100	5	to	500	5	to	900	-1.3 to -80

|--|

**ARJ** 

AR425

to 935

ARX AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

IC ITVH ITVX PVQ VY1

VBA

VBAT

AP100

• ITV0000 Series									
	Model	Ferrite core necessity	Recommended power supply cable						
	ITV0000-□□-Q	Unnecessary	M8-4DSX3MG4 (Straight type) P398000-501-2 (Right angle type)						

Note) Recommended power supply cable length is 3 m. (P398000-501-2 is 2 m.) If any other length is desired, please consult with SMC.

#### • ITV1000/2000/3000 Series

Model	Ferrite core necessity		Recommended power supply cable
ITV=====		-	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
ITV□□-52□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
ITV□□-53□		Signal	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)
ITV□□-60□		_	INI-398-0-59 (Straight type)
ITV		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 3)	Unnecessary	Communication	PCA-1567720 (Socket type) PCA-1567717 (Plug type)
ITV□□-DE□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 4)		Communication	PCA-1557633 (Socket type) PCA-1557646 (Plug type)
ITV□□-PR□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 4)		Communication	PCA-1557688 (Socket type) PCA-1557691 (Plug type)
ITV 🗆 - RC		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
III VUU-RCU		Communication	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)

Note 1) Recommended power supply cable length is 3 m. If any other length is desired, please consult with SMC.

Note 2) Even when the "with cable connector" type is selected, the communication connector is not included. Refer to the catalog [M8/M12 Connector] CAT.ES100-73 for the details of the communication cable.

Note 3) For CC-Link compatible products, a dedicated Bus adapter is included with the product.

Note 4) For DeviceNet™ compatible products, and PROFIBUS DP compatible products, a T-branch connector is not included with the product.

945

) SMC



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

#### ITV009□/209□ Series Precautions

#### Handling

## **⚠** Caution

- Connect the vacuum pump to the port, which is labeled "VAC".
- Pressure adjustment changes from "atmospheric pressure to vacuum pressure" when the input signal is increased, and from "vacuum pressure to atmospheric pressure" when the input signal is decreased.
- When adjusting the vacuum pressure, be careful not to block the atmospheric pressure inlet port labeled "ATM".
- Since this product is designed exclusively for use with negative pressure, be careful not to apply positive pressure in error.
- 5. In cases where the vacuum pump being used has a relatively small capacity, or the piping has a small inside diameter, etc., large variations in the set pressure (the range of pressure variation when changing from no flow to flow state) may appear. In this situation, the vacuum pump or the piping, etc. should be changed. In cases where it is not practical to change the vacuum pump, install a capacity tank (volume depending on the operating conditions) on the VAC side.
- 6. The vacuum pressure response time after a change in the input signal is influenced by the internal volume on the setting side (including piping). Since the capacity of the vacuum pump also influences the response time, give careful consideration to these points before operation.
- 7. If the electric power is shut off when in a control state, the pressure on the setting side will go into a holding condition. However, this setting side pressure will be held only temporarily and is not guaranteed. In addition, when atmospheric pressure is desired, shut off the power after reducing the set pressure, and then introduce atmospheric pressure by using a vacuum release valve, etc.
- 8. If the power for this product is cut off by a power failure, etc. when it is in a controlled state, the setting side pressure will be held temporarily. Further, if operated without sealing the setting side so that atmospheric air is sucked in, handle with care as air will continue to be sucked in.

- 9. If the VAC side pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and may cause a humming noise. Since this may shorten the life of the product, be sure to shut off the power when the VAC side pressure is shut off.
- 10. The setting side pressure cannot be completely released from this product in the range below -1.3 kPa. In cases where the pressure needs to be reduced completely to 0 kPa, install a 3 port valve, etc. on the setting side to discharge the residual pressure.
- 11. This product is adjusted for each specification at the factory before shipment. Avoid careless disassembly or removal of parts, as this can cause failure.
- 12. The optional cable connector is a 4-wire type. When the monitor output (analog output, switch output) is not being used, keep it from touching the other wires, as this can cause malfunction.
- 13. Use caution that the right angle cable does not rotate and is limited to only one entry direction.
- 14. Take the following steps to avoid malfunction due to noise.
  - Eliminate power supply noise during operation by installing a line filter, etc. in the AC power line.
     For avoiding the influence of noise or static electricity, install
  - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
  - Make sure to take protective measures against load surge for an induction load (solenoid valves, relays, etc.).
- Refer to the operation manual included with the product for details on its handling.



