

## RTE Series – Analog Timers

## Key features:

- 20 time ranges and 10 timing functions
- Time delays up to 600 hours
- Space-saving package
- High repeat accuracy of  $\pm 0.2\%$
- ON and timing OUT LED indicators
- Standard 8- or 11-pin and 11-blade termination
- 2 form C delayed output contacts
- 10A Contact Rating



Cert. No. E9950913332316 (EMC, RTE)  
Cert. No. BL960813332355 (LVD, RTE)



UL Listed  
File No. E66043



## General Specifications

Operation System	Solid state CMOS Circuit			
Operation Type	Multi-Mode			
Time Range	0.1sec to 600 hours			
Pollution Degree	2 (IE60664-1)			
Over voltage category	III (IE60664-1)			
Rated Operational Voltage	AF20	100-240V AC(50/60Hz)		
	AD24	24V AC(50/60Hz)/24V DC		
	D12	12V DC		
Voltage Tolerance	AF20	85-264V AC(50/60Hz)		
	AD24	20.4-26.4V AC(50/60Hz)/21.6-26.4V DC		
	D12	10.8-13.2V DC		
Input off Voltage	Rated Voltage x10% minimum			
Ambient Operating Temperature	-20 to +65°C (without freezing)			
Ambient Storage and Transport Temperature	-30 to +75°C (without freezing)			
Relative Humidity	35 to 85%RH (without condensation)			
Atmospheric Pressure	80kPa to 110kPa (Operating), 70kPa to 110kPa (Transport)			
Reset Time	100msec maximum			
Repeat Error	$\pm 0.2\%$ , $\pm 20\text{msec}^*$			
Voltage Error	$\pm 0.2\%$ , $\pm 20\text{msec}^*$			
Temperature Error	$\pm 0.5\%$ , $\pm 20\text{msec}^*$			
Setting Error	$\pm 10\%$ maximum			
Insulation Resistance	100M $\Omega$ minimum (500V DC)			
Dielectric Strength	Between power and output terminals: 2000V AC, 1 minute			
	Between contacts of different poles: 2000V AC, 1 minute			
	Between contacts of the same pole: 1000V AC, 1 minute			
Vibration Resistance	10 to 55Hz amplitude 0.5mm <sup>2</sup> hours in each of 3 axes			
Shock Resistance	Operating extremes: 98m/sec <sup>2</sup> (10G)			
	Damage limits: 490m/sec <sup>2</sup> (50G)			
Degree of Protection	3 times in each of 3 axes			
	IP40 (enclosure) (IEC60529)			
Power Consumption (Approx.)	TYPE	RTE-P1, -B1	RTE-P2, -B2	
		AF20	120V AC/60Hz 6.5VA	6.6VA
		240V AC/60Hz	11.6VA	11.6VA
		24V AC 60Hz/DC	3.4VA/1.7W	3.5VA/1.7W
	D12	1.6W	1.6W	
Mounting Position	Free			
Dimensions	RTE-P1, P2	40Hx 36W x 77.9D mm		
	RTE-B1, B2	40Hx 36W x 74.9D mm		
Weight (Approx.)	RTE-P1	RTE-P2	RTE-B1, -B2	
	87g	89g	85g	

## Contact Ratings

Contact Configuration	2 Form C, DPDT (Delay output)	
Allowable Voltage / Allowable Current	240V AC, 30V DC / 10A	
Maximum Permissible Operating Frequency	1800 cycles per hour	
Rated Load	Resistive	10A 240V AC, 30V DC
	Inductive	7A 240V AC, 30V DC
	Horse Power Rating	1/6 HP 120V AC, 1/3 HP 240V AC
Life	Electrical	500,000 op. minimum (Resistive)
	Mechanical	50,000,000 op. minimum




\*For the value of the error against a preset time, whichever the largest, applies.

## Part Numbering Guide

RTE series part numbers are composed of 4 part number codes. When ordering a RTE series part, select one code from each category.

Example: **RTE-P1AF20**

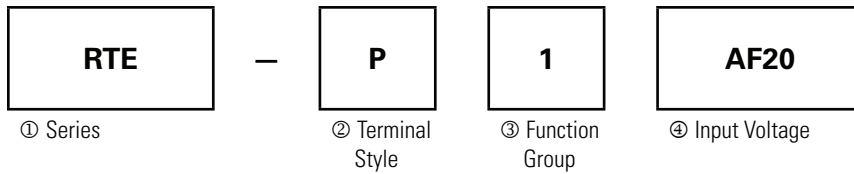

## Part Numbers: RTE Series

	Description	Part Number Code	Remarks
① Series	RTE series	RTE	For internal circuits, see next page.
② Terminal Style	Pin	P	Select one only.
	Blade	B	
③ Function Group	ON-delay, interval, cycle OFF, cycle ON	1	Each function group has different timing functions. See page 832.
	ON-delay, cycle OFF, cycle ON, signal ON/ OFF delay, OFF-delay, one-shot	2	
④ Input Voltage	100 to 240V AC(50/60Hz)	AF20	
	24V AC(50/60Hz)/24V DC	AD24	
	12V DC	D12	

## Part Numbers


Voltage	Power Triggered		Start Input Triggered	
	8-Pin	Blade	11-Pin	Blade
12V DC	RTE-P1D12	RTE-B1D12	RTE-P2D12	RTE-B2D12
24V AC/DC	RTE-P1AD24	RTE-B1AD24	RTE-P2AD24	RTE-B2AD24
100-240V AC	RTE-P1AF20	RTE-B1AF20	RTE-P2AF20	RTE-B2AF20

## Time Range Determined by Time Range Selector and Dial Selector

	Dial	0 - 1	0 - 3	0 - 10	0 - 30	0 - 60
Range	Second	0.1 sec - 1 sec	0.1 sec - 3 sec	0.2 sec - 10 sec	0.6 sec - 30 sec	1.2 sec - 60 sec
	Minute	1.2 sec - 1 min	3.6 sec - 3 min	12 sec - 10 min	36 sec - 30 min	1.2 min - 60 min
	Hour	1.2 min - 1 hr	3.6 min - 3 hr	12 min - 10 hr	36 min - 30 hr	1.2 hr - 60 hr
	10 Hours	12 min - 10 hr	36 min - 30 hr	2 hr - 100 hr	6 hr - 300 hr	12 hr - 600 hr

Timing Diagrams

RTE-P1, -B1

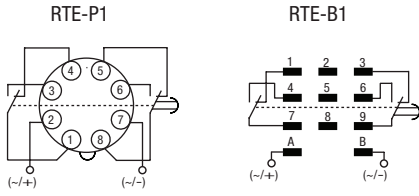

1. RTE-B1: Do not apply voltage to terminals #2, #5 & #8.
2. IDEC sockets are as follows: RTE-P1: SR2P-06\* pin type socket, RTE-B1: SR3B-05\* blade type socket, (\*-may be followed by suffix letter A,B,C or U).

A: ON-Delay 1 (power start)

Set timer for desired delay, apply power to coil. Contacts transfer after preset time has elapsed, and remain in transferred position until timer is reset. Reset occurs with removal of power.

Item	Terminal Number	Operation
Power	(1) 2 - 7 (2) A - B	[Green bar indicating power duration]
Delayed Contact	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9 (NC)	[Green bar indicating NC contact state]
	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9 (NO)	[Green bar indicating NO contact state]
Indicator	PWR	[Green bar indicating PWR indicator state]
	OUT	[Green bar indicating OUT indicator state]
Set Time		T

B: Interval (power start)

Set timer for desired delay, apply power to coil. Contacts transfer immediately, and return to original position after preset time has elapsed. Reset occurs with removal of power.

Item	Terminal Number	Operation
Power	(1) 2 - 7 (2) A - B	[Green bar indicating power duration]
Delayed Contact	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9 (NC)	[Green bar indicating NC contact state]
	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9 (NO)	[Green bar indicating NO contact state]
Indicator	PWR	[Green bar indicating PWR indicator state]
	OUT	[Green bar indicating OUT indicator state]
Set Time		T

C: Cycle 1 (power start, OFF first)

Set timer for desired delay, apply power to coil. First transfer of contacts occurs after preset delay has elapsed, after the next elapse of preset delay contacts return to original position. The timer now cycles between on and off as long as power is applied (duty ratio 1:1).

Item	Terminal Number	Operation
Power	(1) 2 - 7 (2) A - B	[Green bar indicating power duration]
Delayed Contact	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9 (NC)	[Green bar indicating NC contact state]
	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9 (NO)	[Green bar indicating NO contact state]
Indicator	PWR	[Green bar indicating PWR indicator state]
	OUT	[Green bar indicating OUT indicator state]
Set Time		T T

C: Cycle 3 (power start, ON first)

Functions in same manner as Mode C, with the exception that first transfer of contacts occurs as soon as power is applied. The ratio is 1:1. Time On = Time Off

Item	Terminal Number	Operation
Power	(1) 2 - 7 (2) A - B	[Green bar indicating power duration]
Delayed Contact	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9 (NC)	[Green bar indicating NC contact state]
	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9 (NO)	[Green bar indicating NO contact state]
Indicator	PWR	[Green bar indicating PWR indicator state]
	OUT	[Green bar indicating OUT indicator state]
Set Time		T T

Switches & Pilot Lights

Signaling Lights

Relays & Sockets

Timers


Contactors

Terminal Blocks

Circuit Breakers





### Temperature Derating Curves

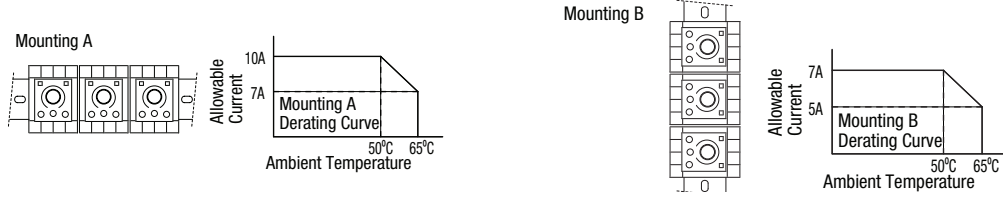


### Instructions

#### Installation of Hold-Down Springs DIN Rail Mount Socket

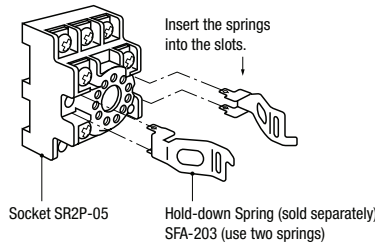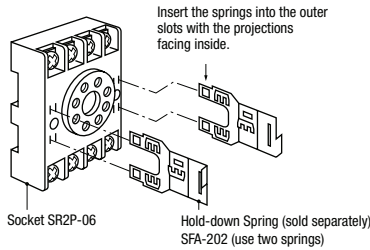

#### Switch Settings

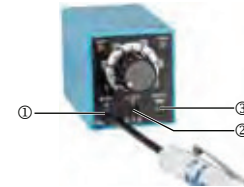

- ① Operator Mode Selector
- ② Scale Selector
- ③ Time Range Selector

1. Turn the selectors securely using a flat screwdriver 4mm wide (maximum). Note that incorrect setting may cause malfunction. Do not turn the selectors beyond their limits.
2. Since changing the setting during timer operation may cause malfunction, turn power off before changing.

### Safety Precautions

Special expertise is required to use Electronic Timers.

- All Electronic Timers are manufactured under IDEC's rigorous quality control system, but users must add a backup or fail safe provision to the control system when using the Electronic Timer in applications where heavy damage or personal injury may occur should the Electronic Timer fail.
- Install the Electronic Timer according to instructions described in this catalog.
- Make sure that the operating conditions are as described in the specifications. If you are uncertain about the specifications, contact IDEC in advance.
- In these directions, safety precautions are categorized in order of importance under Warning and Caution.

#### Warnings

Warning notices are used to emphasize that improper operation may cause severe personal injury or death.

- Turn power off to the Electronic timer before starting installation, removal, wiring, maintenance, and inspection on the Electronic Timer.
- Failure to turn power off may cause electrical shocks or fire hazard.

- Do not use the Electronic Timer for an **emergency stop circuit** or **interlocking circuit**. If the Electronic Timer should fail, a machine malfunction, breakdown, or accident may occur.

#### Caution

Caution notices are used where inattention might cause personal injury or damage to equipment.

- The Electronic Timer is designed for installation in equipment. Do not install the Electronic Timer outside equipment.
- Install the Electronic Timer in environments described in the specifications. If the Electronic Timer is used in places where it will be subjected to high-temperature, high-humidity, condensation, corrosive gases, excessive vibrations, or excessive shocks, then electrical shocks, fire hazard, or malfunction could result.
- Use an IEC60127-approved fuse and circuit breaker on the power and output line outside the Electronic Timer.
- Do not disassemble, repair, or modify the Electronic Timer.
- When disposing of the Electronic Timer, do so as industrial waste.

Accessories

DIN Rail Mounting Accessories

DIN Rail/Surface Mount Sockets and Hold-Down Springs

Style	DIN Rail Mount Socket			Applicable Hold-Down Springs	
	Appearance	Use with Timers	Part Number	Appearance	Part Number
11-Pin Screw Terminal (dual tier)		RTE-P2	SR3P-05		SFA-203
11-Pin FingerSafe Socket		RTE-P2	SR3P-05C		
8-Pin Screw Terminal		RTE-P1	SR2P-06		SFA-202
8-Pin Fingersafe Socket			SR2P-05C		
11-Blade Screw Terminal		RTE-B1 RTE-B2	SR3B-05		
DIN Mounting Rail Length 1000mm		—	BNDN1000		

Panel Mounting Accessories

Flush Panel Mount Adapter and Sockets that use an Adapter

Accessory	Description	Appearance	Use with	Part No.
Panel Mount Adapter	Adaptor for flush panel mounting RTE timers		All RTE timers	RTB-G01
Sockets for use with Panel Mount Adapter	8-pin screw terminal	 (Shown: SR6P-M08G Wiring Socket Adapter)	RTE-P1	SR6P-M08G
	11-pin screw terminal		RTE-P2	SR6P-M11G
	8-pin solder terminal		RTE-P1	SR6P-S08
	11-pin solder terminal		RTE-P2	SR6P-S11

Switches & Pilot Lights

Signaling Lights

Relays & Sockets


Timers

Contractors

Terminal Blocks


Circuit Breakers

Dimensions

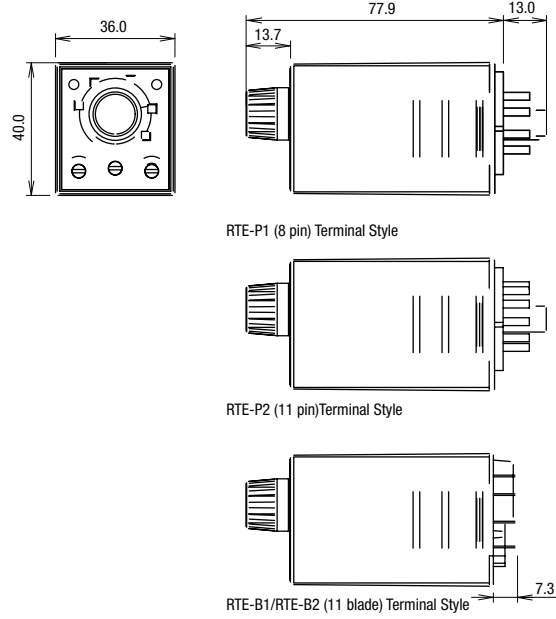


Panel Mount Adapter


RTE Timer, 8-Pin and 11-Pin with SR6P-S08 or SR6P-S11

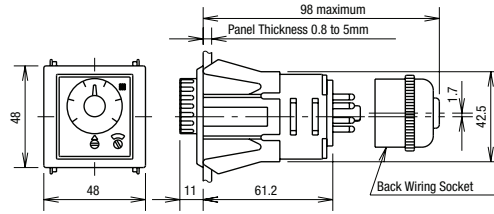

RTE Timer, 8-Pin with SR6P-M08G

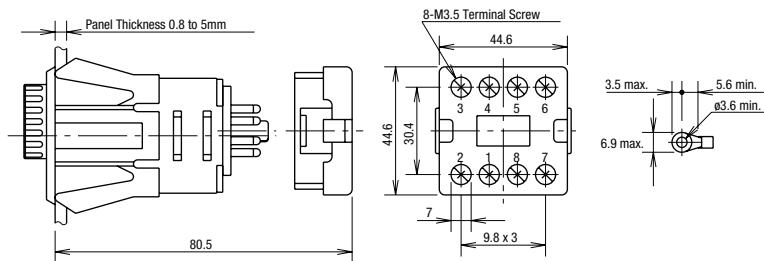

RTE Timer, 11-Pin with SR6P-M11G

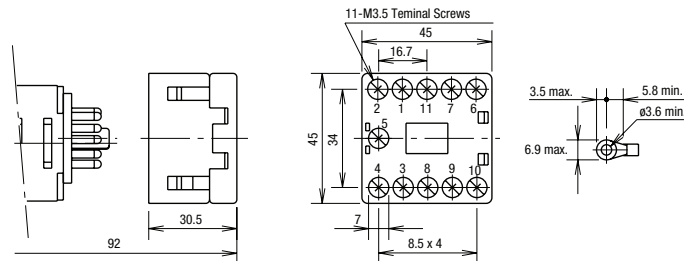

## General Instructions for All Timer Series

### Load Current

With inductive, capacitive, and incandescent lamp loads, inrush current more than 10 times the rated current may cause welded contacts and other undesired effects. The inrush current and steady-state current must be taken into consideration when specifying a timer.

### Contact Protection

Switching an inductive load generates a counter-electromotive force (back EMF) in the coil. The back EMF will cause arcing, which may shorten the contact life and cause imperfect contact. Application of a protection circuit is recommended to safeguard the contacts.

### Temperature and Humidity

Use the timer within the operating temperature and operating humidity ranges and prevent freezing or condensation. After the timer has been stored below its operating temperature, leave the timer at room temperature for a sufficient period of time to allow it to return to operating temperatures before use.

### Environment

Avoid contact between the timer and sulfurous or ammonia gases, organic solvents (alcohol, benzine, thinner, etc.), strong alkaline substances, or strong acids. Do not use the timer in an environment where such substances are prevalent. Do not allow water to run or splash on the timer.

### Vibration and Shock

Excessive vibration or shocks can cause the output contacts to bounce, the timer should be used only within the operating extremes for vibration and shock resistance. In applications with significant vibration or shock, use of hold down springs or clips is recommended to secure a timer to its socket.

### Time Setting

The time range is calibrated at its maximum time scale; so it is desirable to use the timer at a setting as close to its maximum time scale as possible. For a more accurate time delay, adjust the control knob by measuring the operating time with a watch before application.

### Input Contacts

Use mechanical contact switch or relay to supply power to the timer. When driving the timer with a solid-state output device (such as a two-wire proximity switch, photoelectric switch, or solid-state relay), malfunction may be caused by leakage current from the solid-state device. Since AC types comprise a capacitive load, the SSR dielectric strength should be two or more times the power voltage when switching the timer power using an SSR.

Generally, it is desirable to use mechanical contacts whenever possible to apply power to a timer or its signal inputs. When using solid state devices, be cautious of inrushes and back-EMF that may exceed the ratings on such devices. Some timers are specially designed so that signal inputs switch at a lower voltage than is used to power the timer (models designated as "B" type).

### Timing Accuracy Formulas

Timing accuracies are calculated from the following formulas:

$$\text{Repeat Error} = \pm \frac{1 \times \text{Maximum Measured Value} - \text{Minimum Measured Value}}{2 \text{ Maximum Scale Value}} \times 100\%$$

$$\text{Voltage Error} = \pm \frac{T_v - T_r}{T_r} \times 100\%$$

$T_v$ : Average of measured values at voltage V  
 $T_r$ : Average of measured values at the rated voltage

$$\text{Temperature Error} = \pm \frac{T_t - T_{20}}{T_{20}} \times 100\%$$

$T_t$ : Average of measured values at °C  
 $T_{20}$ : Average of measured values at 20°C

$$\text{Setting Error} = \pm \frac{\text{Average of Measured Values} - \text{Set Value}}{\text{Maximum Scale Value}} \times 100\%$$