Fieldbus System

(For Input/Output)

((RoHS) IP67

Supports digital inputs/outputs, analog inputs/outputs, and IO-Link masters



An **OID**-Link master compatible SI unit has been added (PROFINET).



<Compatible Protocols>

0000



IO-Link master unit

- 2 models (port class A and port class B)
- Master/device diagnosis function
- The data can be accessed from via PC (setting tool).
- Device parameter setting function, Automatic saving/writing
- ∗ For the integrated SI unit, only PROFINET or EtherNet/IP[™] can be selected.
- PROFINET: Up to 9 IO-Link master unit modules can be connected.
- EtherNet/IP™: Up to 4 IO-Link master unit modules can be connected. (Made to order)

Self-diagnosis function

Equipped with an input/output open/shortcircuit detection function and an input/output signal ON/OFF counter function

Web server function*1

Status checks and forced output are possible via web browser.

 Parameter setting is only for EtherNet/IP[™].

order)

Various connectors available

The following connectors are selectable for the input/output devices: M12 connectors, M8 connectors, D-sub connectors, and spring type terminal blocks.


Up to 9 units^{*1} can be connected.


Up to 9 units can be connected in any order. *1 Excludes SI units



EX600 Series

Can be connected with digital, analog, and IO-Link master units

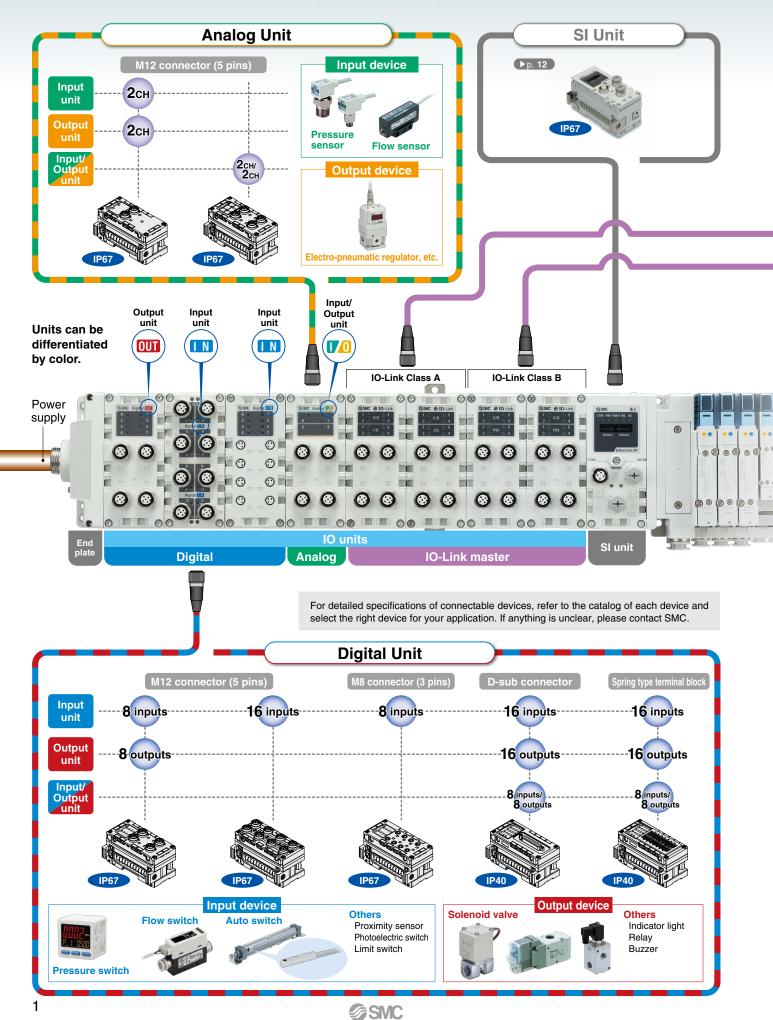

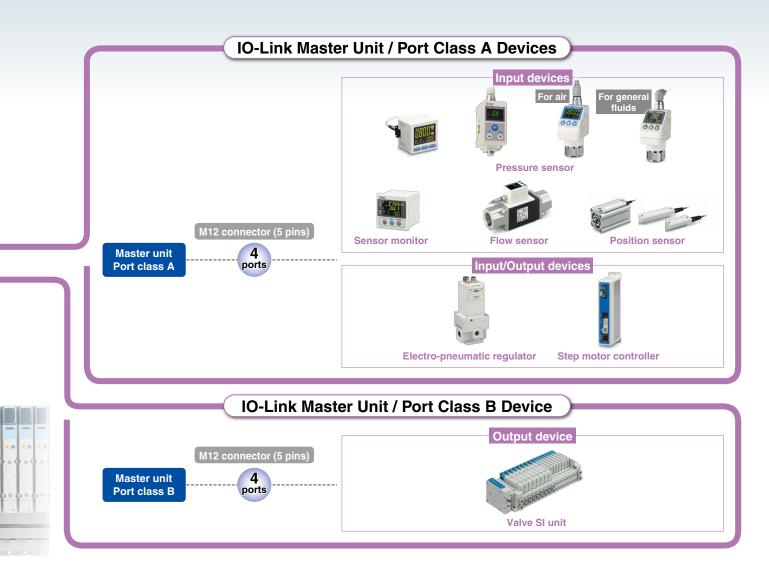

Connectable Solenoid Valve Series

Series		Flow rate characteristics	s (4/2 $ ightarrow$ 5/3)	Max. number	Power consumption	Applicable
Series		C [dm³/(s⋅bar)]	b	of solenoids	[W]	cylinder size
IP67 *1	SY3000	1.6	0.19			ø50
CE	SY5000	3.6	0.17	32	0.35 (Standard) 0.1 (With power-saving circuit)	ø63
c PU'us	SY7000	5.9	0.20			ø80
IP67 *1, *3	JSY1000	0.91	0.48		0.2 (With power-saving circuit)	ø40
CE	JSY3000	2.77	0.27	32	0.4 (Standard)	ø50
	JSY5000	6.59	0.22		0.1 (With power-saving circuit)	ø80
IP40 CE	S0700*2	0.37	0.39	32	0.35	ø25
(P67) *1	SV1000*2	1.1	0.35			ø40
	SV2000*2	2.4	0.18	32	0.6	ø63
c AL us	SV3000*2	4.3	0.21			ø80
IP67 *1	VQC1000	1.0	0.30	24	0.4 (Standard)	ø40
CE	VQC2000	3.2	0.30			ø63
	VQC4000	7.3	0.38		0.95 (Standard) 0.4 (Low-wattage type)	ø160
- 10 mar	VQC5000	17	0.31			ø180

*1 Units with a D-sub communication connector are IP40.

*2 There is no manifold part number setting for the EX600-SPN3/4. (Order it separately.)

*3 The JSY1000 is IP40.




OIO-Link

IO-Link is a communication technology for sensors and actuators that is an international standard, IEC 61131-9.


This technology is used to send/receive device information such as manufacturer, product part number, parameters, and diagnostic data, as well as the control data including ON/OFF signals and measured values of the sensor, by connecting the IO-Link master and sensor in a 1:1 configuration.

IO-Link enables condition monitoring and error detection of the sensor and equipment, and it can contribute to the reduction of startup labor and recovery time and the realization of preventive and predictive maintenance.

Reduced design and startup labor	 Batch setting of device parameters from the upper level Remote check of device information Detection and remote unified check of device misconnection/non-connection
Minimum recovery time due to error detection	 Early detection of location where problem is occurring via communication Early obtaining of information on problem phenomenon via communication Early recovery during product replacement (automatic setting of device parameters)
Preventive and predictive maintenance through condition monitoring	 Monitors changes in measured values of a sensor during signal ON/OFF Monitors the number of device operations and automatically notifies when the set number of operations has been exceeded Remote monitoring of device and equipment conditions via communication

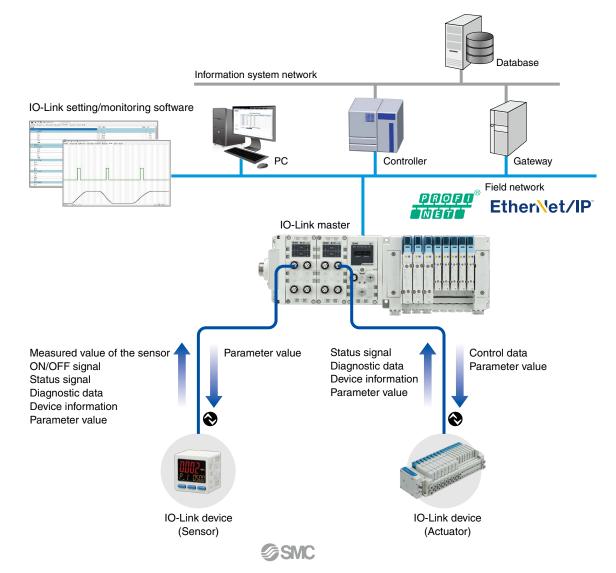

IO-Link System Configuration

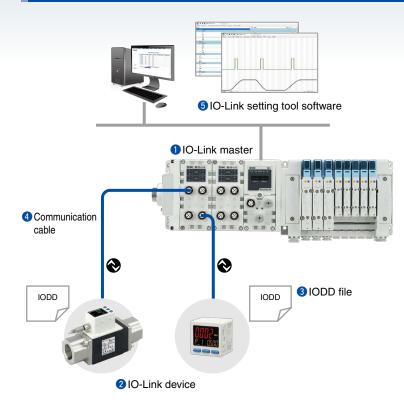

IO-Link master

Acts as a gateway between the IO-Link
 communication and the upper level communication

2 IO-Link device

• A sensor/actuator connecting to an IO-Link master in a 1:1 configuration

3 IODD file

- A file in which device properties and parameters are described
- Registered to the setting tool
- · Provided by the device manufacturer

4 Communication cable


- A 4-wire or 5-wire general-purpose cable that is the
- same as the existing sensor cable (Unshielded cable) • Max. cable length: 20 m

5 IO-Link setting tool software

- Software for the setting and monitoring of a master/ device
- Provided by the master manufacturer*1
- *1 A setting tool compatible with the masters of every manufacturer is used for the SMC EX600 series IO-Link master. (IO-Link Device Tool V5 manufactured by TMG Technologie und Engineering, Germany)


IO-Link Interface


The connecting part between the IO-Link master and the device is called a "port." Each port can be switched between "IO-Link mode" for digital communication and "standard I/O mode" for conventional contact input/ output.

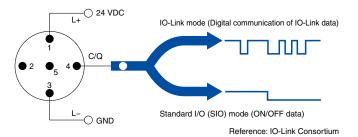


2 types of interfaces

There are two methods for power supply: one is for sensors, and the other is for actuators.

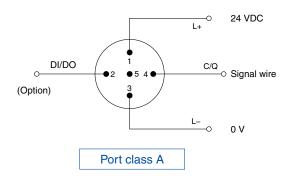

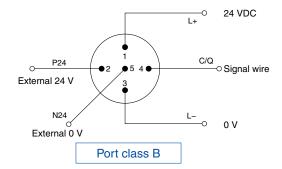

The control power supply wire and signal wire can be connected with one cable. (Mainly for sensors) $% \label{eq:constraint}$




IO-Link Master Unit

Can be connected with digital, analog, and IO-Link master units


PROFINET: Up to 9 IO-Link master units can be connected. (Total of 36 ports) EtherNet/IP[™]: Up to 4 IO-Link master units can be connected. (Total of 16 ports) Digital units, analog units, and IO-Link master units can be mixed, and up to 9 units can be connected in any order.



Supports both port class A and port class B

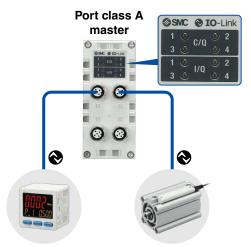



For connecting IO-Link sensors Pressure sensors, flow sensors, actuator position sensors, electro-pneumatic regulators, etc.

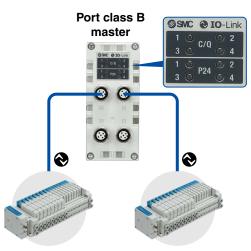

For connecting IO-Link compatible SI units (for valve driving)

The data can be accessed from via PC (setting tool).

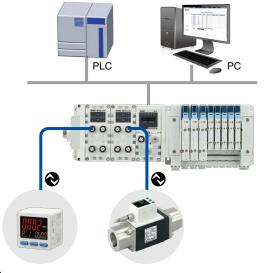

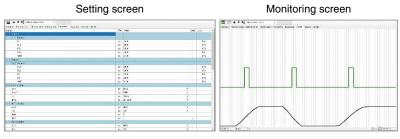

The setting and monitoring of the master and device are possible via PC, without using the PLC. • Process data

• Device parameters, Master parameters

Master information, Device information


• Port diagnosis, Device diagnosis



Diagnosis function

Diagnosis on a master and device is possible from the upper level communication.

Master (port) diagnostic information can be obtained via PLC program or PC (web browser). Device diagnostic information can be obtained via PC (setting tool).

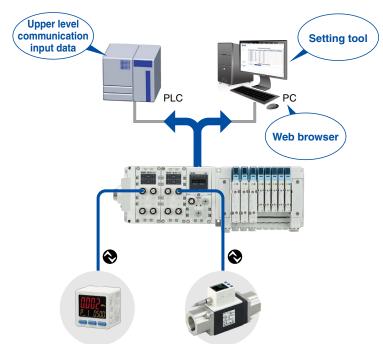


Items of master (port) diagnosis
Detection of port short-circuit
Detection of non-connected device
Detection of misconnected device (check error)
Notification of port misconfiguration (excessively large input/output data)
Conditions of diagnostic event (port, device)
Items of device diagnosis

Diagnostic results (problem phenomenon) received from devices are shown in event codes.

Device parameter setting function, Automatic saving/writing

The parameter setting of devices is possible from the upper level communication.


Parameter setting is possible via PC (setting tool). It is also possible to use output data or message data via PLC program.

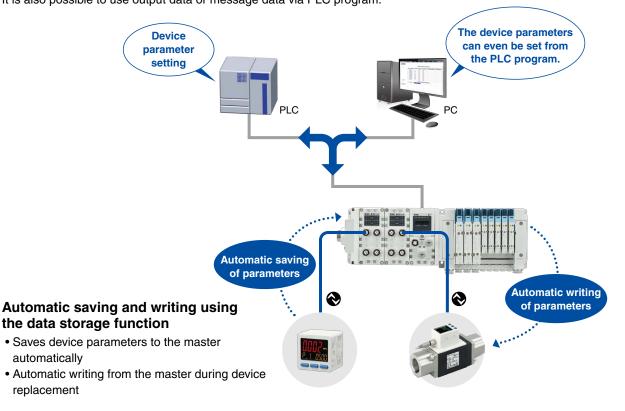

EtherNet Fieldbus Functions


PROFINET (EX600-SPN3/4) and EtherNet/IP[™] (EX600-SEN3/4) support the following functions.

Compatible topologies (Connection configuration)

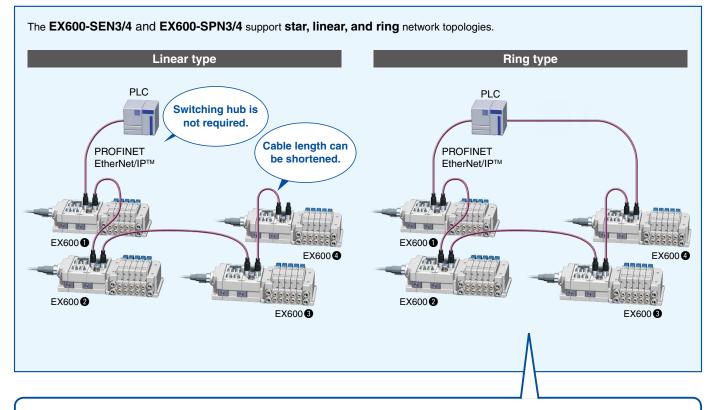

For ring networks, communication can be continued even if one of the communication cables in the network is disconnected or damaged. As the EX600-SEN3/4 supports Device Level Ring (DLR), and the EX600-SPN3/4 supports Media Redundancy Protocol (MRP), the disconnected point can be identified.

* In order to use DLR or MRP, the PLC must be able to support it.

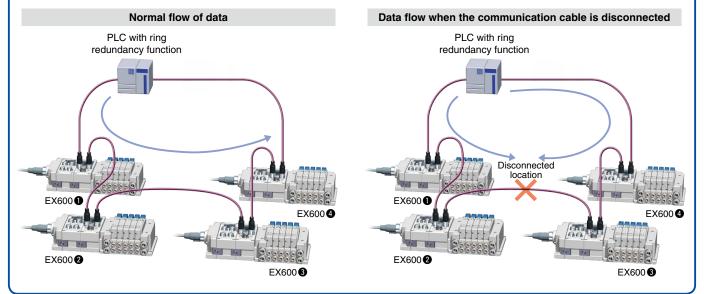

■ Supports the QuickConnect[™] function and the Fast Start Up function

Time from power ON Greatly reduces the communication to communication connection connection time Appro 10 s In the case of a tool changer, it takes about 10 seconds for communication to be connected in some products after Robot arm Tool 2 Tool 3 the power to the device installed on the EX600 tool is turned ON. As the EX600-SEN3/4 supports the QuickConnect[™] function, and the Tool 1 EX600-SPN3/4 supports the Fast Start EX600 EX600 Up function, communication connection in only approx. 0.5 s is possible. * In order to use the QuickConnect[™] function or the Fast Start Up function, the PLC must be able to support it. PLC Built-in web server function EX600 1 to 3 can be accessed via a The EX600-SEN3/4 and EX600web browser. SPN3/4 have a built-in web server function, which enables status checks. EX600-SEN3/4. EX600-SPN3/4

Switching hub

EX6001

EX600 **2** Connection example


parameter settings (EX600-SEN3/4 only), and forced output of the EX600 using general-purpose web browsers, such as Microsoft Edge. Start-up of the system and maintenance can be performed efficiently.

Latest PROFINET Technology

System Redundancy S2

As the EX600-SPN3/4 supports System Redundancy S2, it can continue communication using the backup controller when the primary controller malfunctions. This allows for the prevention of problems caused by unexpected communication interruption.

* In order to use System Redundancy S2, the PLC must be able to support this function.

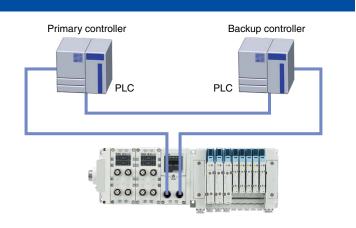

EX6003

Status check

· Parameter setting

Forced output, etc.

Fieldbus System EX600

D-sub connector


IP40

These units are capable of connection using a D-sub connector. There are three types of units: for digital input, output, and input/output. The digital output unit can be connected with an SMC manifold solenoid valve F kit (D-sub connector).

Manifold solenoid valves can be connected using a cable with a D-sub connector.			
 SY series 	 S0700 series 	 SJ series 	 SQ series
• SV series	 VQC series 	 VQ series 	 JSY series

 Please limit the number of valve connections to 16 stations for single and 8 stations for double. Refer to the catalog of each product for pin assignment details.


VVZS3000-21A-D-X192 (Non-waterproof cable example)

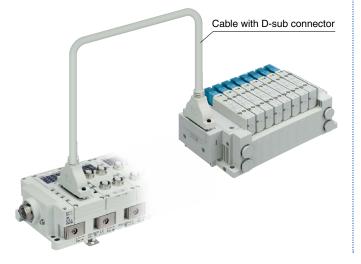

Spring type terminal block




These terminal block units are compatible with individual wiring configurations. There are three types of units: for digital input, output, and input/output. Wiring connection to a sensor connector box, etc., can be carried out easily using only a flat head screwdriver.

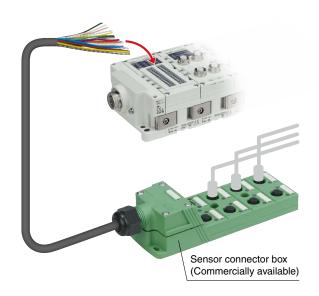

Digital input unit




This unit is for inputting a digital signal (ON/OFF signal). The signal of a 2-wire/3-wire auto switch attached to the actuator can be acquired to feedback a signal to the PLC. The control signal of an entire system can be managed by a Fieldbus system.

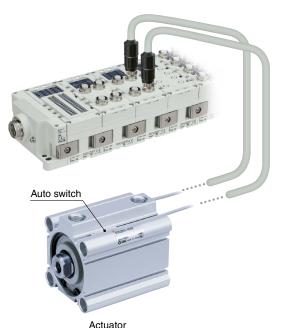

Analog input/output unit



These units are for inputting or outputting an analog signal (voltage/current). A single unit performs both input and output, allowing feedback control where analog signals are received from a pressure sensor and sent to a pressure controller. Installation space is minimized as well.

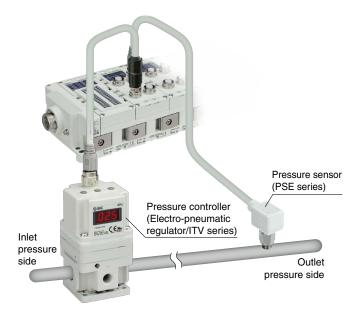

Self-diagnosis function

The following shows examples of the self-diagnosis function.

Short/Open-circuit detection

It is possible to detect short or open circuits of input devices such as electronic 2-wire switches and 3-wire switches and output devices such as solenoid valves. The location of the error can be identified by the indicator light and the network.



Counter function

It is possible to ascertain the maintenance period and identify the parts that require maintenance by an input and output signal ON/OFF counter function. When the counter function is enabled and a certain number of contact operations is reached, the display of the counter will flash in red.


* The counter function is not provided with analog units.

Individual units can be connected and removed one by one.

A unique clamping method is adopted to prevent screws from falling out. Units can be separated easily by loosening the joint bracket.

Up to 9 units can be connected in any order.

* Excludes SI units

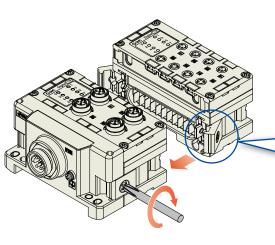




CONTENTS

Type 3 Integrated input-output type

Fieldbus System (For Input/Output) *EX600 Series*







20	SMC Digit ST 00 10 20 0 40 50 60 0 80 90 100 120 130 140	0 70 0 110

Parts Structure ······	…р. 12
How to Order	
SI Unit ······	
Digital Input Unit ·····	…р. 13
Digital Output Unit	…р. 13
Digital Input/Output Unit ·····	… р. 13
Analog Input Unit ······	…р. 13
Analog Output Unit ·····	•••р. 13
Analog Input/Output Unit ·····	···· p. 14
IO-Link Master Unit ······	…р. 14
End Plate (D side)	…р. 14
Handheld Terminal ·····	…р. 14
Specifications	
All Units Common ·····	
SI Unit ·····	
Digital Input Unit	…р. 18
Digital Output Unit	
Digital Input/Output Unit ·····	… р. 19
Analog Input Unit ······	…р. 20
Analog Output Unit ·····	
Analog Input/Output Unit ·····	···· p. 21
IO-Link Master Unit ······	
End Plate ······	… р. 22
Handheld Terminal ·····	
Dimensions	
Parts Description	···р. 27
LED Indicator ·····	···р. 29

Accessories

	5501165
0	End Plate Bracket ······p. 33
2	Valve Plate ······p. 33
8	End Plate (U side) ······ p. 34
4	Reinforcing Brace ······ p. 34
6	Seal Cap (10 pcs.) p. 34
6	Marker (1 sheet, 88 pcs.)
1	Power Supply Cable (7/8 inch connector) p. 35
8	Power Supply Field-wireable
	Connector (7/8 inch) p. 35
9	Power Supply Cable
	(M12 connector, For EX600-ED2) ·······p. 35
0	Power Supply Cable
	(M12 connector, For EX600-ED4/5)p. 36
0	Communication Cable p. 37
Ø	Field-wireable Communication Connector
B	I/O Cable with Connector, I/O Connector p. 43


Made to Order

① Ethernet POWERLINK compatible ······ p. 44
2 Modbus/TCP compatiblep. 44
③CC-Link IE Field compatiblep. 44
Communication Cable p. 45

Specific Product Precautions p. 46	5
------------------------------------	---




Parts Structure

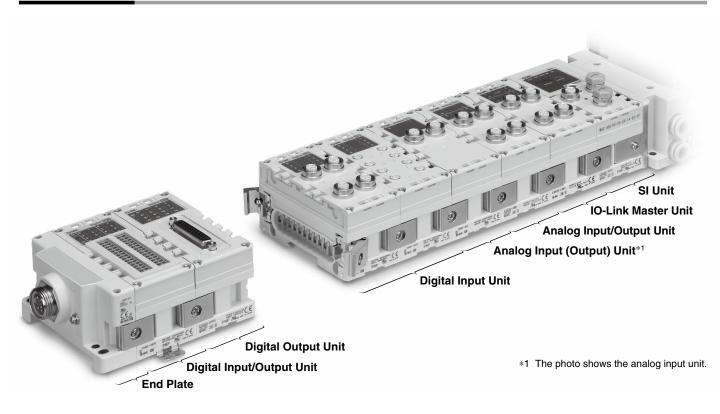

How to Order

SI Unit

EX600-SPR1A-[

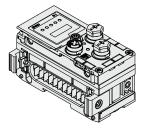


			Specifications
Symbol	Protocol	Output type	Note
PR1A	PROFIBUS DP	PNP (Negative common)	_
PR2A	FROFIDUS DF	NPN (Positive common)	—
DN1A	DeviceNet™	PNP (Negative common)	—
DN2A	Devicemet	NPN (Positive common)	—
MJ1	CC-Link	PNP (Negative common)	—
MJ2	CC-LINK	NPN (Positive common)	—
CF1-X60	CC-Link IE Field	PNP (Negative common)	(Made to order)
EN1		PNP (Negative common)	1 port
EN2	1	NPN (Positive common)	1 port
EN3	EtherNet/IP™	PNP (Negative common)	2 ports
EN4	EmerneviP	NPN(Positive common)	2 ports
EN3-X80		PNP (Negative common)	IO-Link master (Made to order)
EC1	EtherCAT	PNP (Negative common)	—
EC2	Elleloat	NPN (Positive common)	—
PN1		PNP (Negative common)	_
PN2	PROFINET	NPN (Positive common)	—
PN3	FNUFINEI	PNP (Negative common)	IO-Link master
PN4		NPN (Positive common)	IO-Link master

Made to order

(Refer to page 44.)		
Ethernet POWERLINK		
Modbus TCP		
CC-Link IE Field		
NPN (Positive common)		

	How to Order	
Digital Input Unit	EX600-DXP	D
	Input type Symbol Description P PNP N NPN	Number of inputs, open-circuit detection, and connectorSymbolNumber of inputsOpen-circuit detectionConnectorB8 inputsNoM12 connector (5 pins) 4 pcs.C8 inputsNoM8 connector (3 pins) 8 pcs.C18 inputsNoM12 connector (5 pins) 8 pcs.D16 inputsNoM12 connector (5 pins) 8 pcs.E16 inputsNoD-sub connector (25 pins)F16 inputsNoSpring type terminal block (32 pins)
Digital Output Unit	EX600-DY Output type Symbol Description P PNP N NPN	Symbol Number of outputs and connector Symbol Number of outputs Generation Connector B 8 outputs M12 connector (5 pins) 4 pcs. E 16 outputs D-sub connector (25 pins) F 16 outputs Spring type terminal block (32 pins)
Digital Input/Output Unit	EX600-DM Input/Output type	Symbol Number of inputs/outputs and connector Symbol Number of outputs Connector Connector E 8 inputs 8 outputs F 8 inputs 8 outputs Spring type terminal block (32 pins)
Analog Input Unit	EX600 – AX A Analog input	umber of input channels and connectorNumber of input channelsConnector2 channelsM12 connector (5 pins) 2 pcs.
Analog Output Unit	EX600 – AY A Analog output	umber of output channels and connectorNumber of output channelsConnector2 channelsM12 connector (5 pins) 2 pcs.

Fieldbus System For Input/Output **EX600 Series**

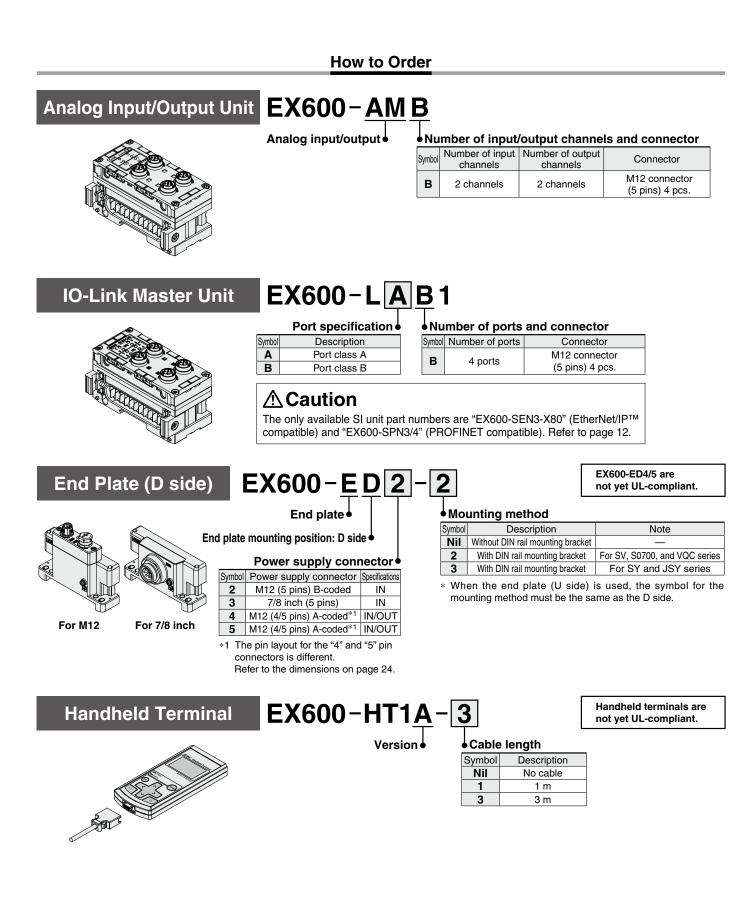

Specifications

All Units Common Specifications

Image: Second state Image: Second state Operating: -10 to 50°C, Stored: -20 to 60°C	
Operating humidity range 35 to 85% RH (No condensation)	
Withstand voltage ^{*1} 500 VAC for 1 minute between external terminals and FE	
Insulation resistance ^{*1} 500 VDC, 10 M Ω or more between external terminals and FE	

Environment *1 Except handheld terminals

SI Unit (EX600-SPR

<u> </u>							
	Model	EX600-SPR1A	EX600-SPR2A				
uo	Protocol	PROFIBUS DP (DP-V0)					
atio	Device type	PROFIBUS DP Slave					
j;	Communication speed	9.6/19.2/45.45/93.75/187.5/500 kbps 1.5/3/6/12 Mbps					
n	Configuration file	GSD	file*2				
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs)					
Те	rminating resistor	Internally in	nplemented				
Into (Pc	ernal current consumption wer supply for Control/Input)	80 mA or less					
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)				
+	Number of outputs	32 outputs (8/16/24/3	2 outputs selectable)				
Outpu	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)					
Ĕ	Power supply	24 VD	C, 2 A				
	Fail safe	HOLD/CLEAR/F	orced power ON				
	Protection	Short-circuit protection					
En	closure	IP67 (Manifold assembly)					
Standards		CE marking (EMC directive/RoHS directive), UL (CSA)					
W	eight	300	0 g				

*2 The configuration file can be downloaded from the SMC website: https://www.smcworld.com

SI Unit (EX600-SDN A)


<u> </u>							
	Model	EX600-SDN1A	EX600-SDN2A				
	Protocol	DeviceNet [™] : Volume 1 (Edition	on 2.1), Volume 3 (Edition 1.1)				
c	Device type	Group 2 O	nly Server				
₽	Communication speed	125/250/500 kbps					
ica –	Configuration file	EDS file*3					
ommunicatio	Occupation area (Number of inputs/outputs)	Max. (512 inpu	ts/512 outputs)				
Соп	Applicable messages	Duplicate MAC ID Check Message, Group 2 Only Unconnected Explicit Message Explicit Message (Group 2), Poll I/O Message (Predefined M/S Connection set)					
	Applicable function	QuickCo	nnect™				
De	viceNet™ power supply	11 to 25 VDC (Current consumption 50 mA or less)					
	ernal current consumption ower supply for Control/Input)	55 mA or less					
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)				
4	Number of outputs	32 outputs (8/16/24/3	2 outputs selectable)				
put	Load	Solenoid valve with surge voltage sup	pressor 24 VDC, 1.5 W or less (SMC)				
Out	Power supply	24 VD	C, 2 A				
0	Fail safe	HOLD/CLEAR/F	orced power ON				
	Protection	Short-circui	t protection				
Er	closure	IP67 (Manifold assembly)					
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)					
W	eight	300 g					
-							

*3 The configuration file can be downloaded from the SMC website: https://www.smcworld.com


SI Unit (EX600-SMJD)

<u> </u>						
	Model	EX600-SMJ1	EX600-SMJ2			
5	Protocol	CC-Link (Ver. 1.10, Ver. 2.00)				
atic	Station type	Remote Device Station				
li Li	Communication speed	156/625 kbps	2.5/5/10 Mbps			
n n	Configuration file	CSP+	file*4			
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs) 1/2/3/4 stations occupied				
	ernal current consumption wer supply for Control/Input)	75 mA or less				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)			
-	Number of outputs	32 outputs (8/16/24/32 outputs selectable)				
Output	Load	Solenoid valve with surge voltage sup	pressor 24 VDC, 1.5 W or less (SMC)			
f	Power supply	24 VD	C, 2 A			
0	Fail safe	HOLD/CLEAR/F	orced power ON			
	Protection	Short-circuit protection				
En	closure	IP67 (Manifold assembly)				
St	andards	CE marking (EMC directive	/RoHS directive), UL (CSA)			
W	eight	30	0 g			


*4 The configuration file can be downloaded from the SMC website: https://www.smcworld.com

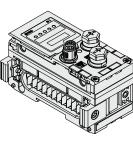

EX600-SPR

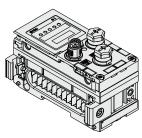


EX600-SDN

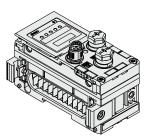

EX600-SMJ



Specifications

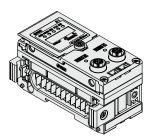

EX600-SCF1-X60

	Model	EX600-SCF1-X60*1
	Protocol	CC-Link IE Field
on	Station type	Intelligent Device Station
	Communication speed	1 Gbps
⊡	Allowable station number setting	1 to 120
ca	Allowable network number setting	1 to 239
n	Transmission method	Cyclic transmission
E	Configuration file	CSP+ file*2
Communication	Occupied input size	RX: 32 to 176 bits RWr: 32 to 608 words
	Occupied output size	RY: 32 to 176 bits RWw: 32 to 608 words
	ernal current consumption wer supply for Control/Input)	140 mA or less
	Output type	Source/PNP (Negative common)
	Number of outputs	32 outputs
Output	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.0 W or less (SMC)
5	Power supply	24 VDC, 2 A
	Fail safe	HOLD/CLEAR/Forced power ON
	Protection	Short-circuit protection
Er	nclosure	IP67 (Manifold assembly)
St	andards	CE marking (EMC directive/RoHS directive)
w	eight	300 g

*1 For details on this product, refer to the SMC website.

*2 The configuration file can be downloaded from the SMC website: https://www.smcworld.com


SI Unit (EX600-SEN□)

	Model	EX600-SEN1	EX600-SEN2	EX600-SEN3	EX600-SEN4	EX600-SEN3-X80	
	Number of communication ports	1 p	ort		2 ports		
	Protocol	EtherN	et/IP™		EtherNet/IP™		
	FIOLOCOI	(Conformance vers	sion: Composite 6)	(Conforma	nce version: Con	nposite 11)	
	Communication speed			10/100 Mbps			
	Communication method		Ful	l duplex/Half dup	lex		
ы	Configuration file		EDS file ^{*3}				
Communication	Occupation area (Number of inputs/outputs)		Max. (512 inputs/512 o	utputs)		
mmu	IP address setting range		SI Unit switch settings: 192.168.0 or 1.1 to 254 Through DHCP server: Optional address				
ပိ		Vendor ID: 7 (SI	MC Corporation)	Vendor	ID: 7 (SMC Corp	oration)	
	Device information	Device type: 12 (Communication Adapter)			12 (Communica		
		Product code: 126		Product code: 203		3	
	QuickConnect	—				•	
	DLR			• •		•	
	Web server function	—				•	
10	Link master		-	— •		●	
	ernal current consumption wer supply for Control/Input)	120 mA or less					
	Output type	Source/PNP	Sink/NPN	Source/PNP	Sink/NPN	Source/PNP	
	Output type	(Negative common)	(Positive common)	(Negative common)	(Positive common)	(Negative common)	
t.	Number of outputs	32 outputs (8/16/24/3	2 outputs selectable)) 32 outputs			
nd	Load		rge voltage suppressor				
Output	Luau	24 VDC, 1.5 W	or less (SMC)	24 VDC, 1.0 W or less (SMC)			
Ŭ	Power supply			24 VDC, 2 A			
	Fail safe		HOLD/C	LEAR/Forced po	ower ON		
	Protection	Short-circuit protection					
Enclosure				(Manifold assen			
_	andards	CE	marking (EMC	directive/RoHS d	lirective), UL (CS	SA)	
We	eight			300 g			

*3 The configuration file can be downloaded from the SMC website: https://www.smcworld.com




EX600-SEN1/2

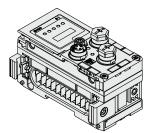

EX600-SEN3/4(-X80)



Specifications

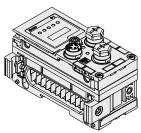


EX600-SEC

SI	Unit (EX600-SEC□)					
	Model	EX600-SEC1	EX600-SEC2			
u	Protocol	EtherCAT (Conformar	nce Test Record V.1.2)			
cati	Communication speed	100	Mbps			
in	Configuration file	XML file*1				
Communication	Occupation area (Number of inputs/outputs)	Max. (512 inputs/512 outputs)				
	ternal current consumption ower supply for Control/Input)	100 mA or less				
	Output type	Source/PNP (Negative common)	Sink/NPN (Positive common)			
-	Number of outputs	32 outputs (8/16/24/32 outputs selectable)				
utput	Load	Solenoid valve with surge voltage suppressor 24 VDC, 1.5 W or less (SMC)				
15	Power supply					

13	Power supply	24 VDC, 2 A	
Ŭ	Fail safe	HOLD/CLEAR/Forced power ON	
	Protection	Short-circuit protection	
Enclosure		IP67 (Manifold assembly)	
Standards		CE marking (EMC directive/RoHS directive), UL (CSA)	
Weight		300 g	


*1 The configuration file can be downloaded from the SMC website: https://www.smcworld.com

SI Unit (EX600-SPN□)

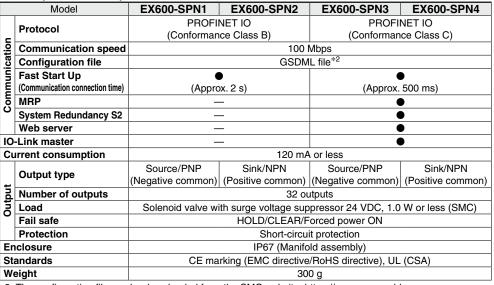


*2 The configuration file can be downloaded from the SMC website: https://www.smcworld.com

EX600-SPN1/2

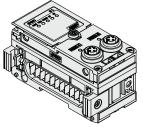

EX600-SPN3/4

Specifications

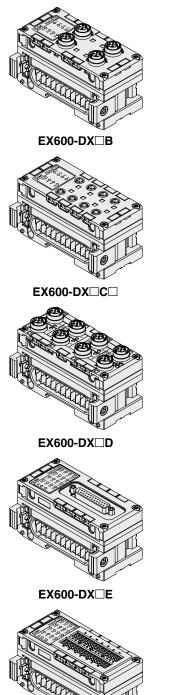

EX600-DX


Digital Input Unit

	Model		EX600-DXPB	EX600-DXNB	EX600-DXPC	EX600-DXNC	EX600-DXPD	EX600-DXND
	Input type		PNP	NPN	PNP	NPN	PNP	NPN
	Input connecto	r	M12 (5-pir	n) socket*1	M8 (3-pin) socket*3	M12 (5-pir	n) socket*1
	Number of inpu	uts	8 inputs (2 inp	uts/Connector)	8 inputs (1 inp	out/Connector)	16 inputs (2 inp	outs/Connector)
	Supplied voltage	ge			24 \	/DC		
	Max. supplied current			onnector Unit	0.25 A/Connector 2 A/Unit			onnector Unit
Input	Protection		Short-circuit protection					
⊑	Input current (at 24 VDC)		9 mA or less					
	ON voltage	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)						
	OFF voltage		5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				U ,	
	Open circuit	2 wires	-		0.5 mA	/Input*2	-	-
	detection current	3 wires	-	_	0.5 mA/Co	onnector*2	-	-
Сι	irrent consumpt	ion	50 mA	or less	55 mA	or less	70 mA	or less
Enclosure				IP67 (Manifold assembly)				
St	andards		CE marking (EMC directive/RoHS directive), UL (CSA)					
W	eight		30	0 g	27	5 g	34	0 g


*1 M12 (4-pin) connector can be connected.
*2 Function only applies to the EX600-DX□C1.
*3 When connecting the M8 plug connector, the tightening torque must be 0.2 N·m ±10%. If tightened with an excessive tightening torque, this may cause the connector thread of the unit to break.

Model		EX600-DXPE	EX600-DXNE	EX600-DXPF	EX600-DXNF		
	Input type	PNP	NPN	PNP	NPN		
	Input connector		D-sub socket (25 pins) Lock screw: No.4-40 UNC		nal block (32 pins)		
	Number of inputs	16 ir	nputs	16 inputs (2 inp	outs x 8 blocks)		
	Supplied voltage		24 \	/DC			
Input	Max. supplied current	2 A/	2 A/Unit		/Block /Unit		
1	Protection	Short-circuit protection					
	Input current (at 24 VDC)	5 mA or less					
	ON voltage	· ·	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)				
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 (At PNP input, between the pin for input terminal and supplied voltage of 0 V)					
Ap	plicable wire	_		0.08 to 1.5 mm ²	(AWG16 to 28)		
Cu	irrent consumption	50 mA or less		55 mA or less			
Enclosure IP40 (Manifold assembly)							
St	Standards CE marking (EMC directive/RoHS directive), UL (CSA)				(CSA)		
W	eight		30	0 g			

Specifications

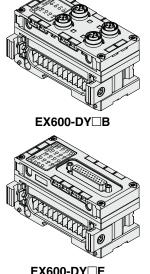

EX600-DY□E EX600-DM□E

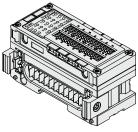

EX600-DY⊡F EX600-DM⊡F

Digital Output Unit


	Model	EX600-DYPB	EX600-DYNB	EX600-DYPE	EX600-DYNE	EX600-DYPF	EX600-DYNF	
	Output type	PNP	NPN	PNP	NPN	PNP	NPN	
	Output connector	M12 (5-pir	M12 (5-pin) socket*1		D-sub socket (25 pins) Lock screw: No.4-40 UNC		erminal block pins)	
Output	Number of outputs	8 outputs (2 out	puts/Connector)	16 ou	utputs	16 outputs (2 ou	tputs x 8 blocks)	
Out	Supplied voltage		24 VDC					
	Max. load current	0.5 A/Output 2 A/Unit						
	Protection		Short-circuit protection					
Ap	oplicable wire	-			_		1.5 mm² 6 to 28)	
Сι	Irrent consumption			50 mA	or less			
Enclosure		IP67 IP40 (Manifold assembly) (Manifold assembly)						
Standards CE marking (EMC directive/RoHS directive), UL (CSA)								
Weight 300 g								

*1 M12 (4-pin) connector can be connected.

Digital Input/Output Unit

_								
	Model	EX600-DMPE	EX600-DMNE	EX600-DMPF	EX600-DMNF			
In	put/Output type	PNP	NPN	PNP	NPN			
Connector		D-sub sock Lock screw: I	· · · /	Spring type termin	nal block (32 pins)			
	Number of inputs	8 in	outs	8 inputs (2 inp	uts x 4 blocks)			
	Supplied voltage		24 \	/DC				
Input	Max. supplied current	2 A/	Unit		′Block ′Unit			
	Protection	Short-circuit protection						
Ē	Input current (at 24 VDC)		5 mA	or less				
	ON voltage	17 V or more (At NPN input, between the pin for input terminal and supplied voltage of +24 V) (At PNP input, between the pin for input terminal and supplied voltage of 0 V)						
	OFF voltage	5 V or less (At NPN input, between the pin for input terminal and supplied voltage of +24 (At PNP input, between the pin for input terminal and supplied voltage of 0 V)						
	Number of outputs	8 out	tputs	8 outputs (2 out	puts x 4 blocks)			
Ħ	Supplied voltage	24 VDC						
Output	Max. load current	0.5 A/Output 2 A/Unit						
	Protection		Short-circu	t protection				
A	oplicable wire	-	_	0.08 to 1.5 mm ²	(AWG16 to 28)			
С	urrent consumption	50 mA	or less	60 mA	or less			
Er	nclosure	IP40 (Manifold assembly)						
St	andards	CE ma	rking (EMC directive	/RoHS directive), UL	(CSA)			
W	eight		30	0 g				

Specifications

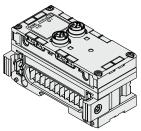

EX600-AXA

Analog Input Unit


Model			EX600	-AXA	
	Input type		Voltage input	Current input	
	Input connector		M12 (5-pin) socket*1		
	Input chan	nel	2 channels (1 channel/Connector)		
	Supplied v	oltage	24 VDC		
	Max. suppl	ied current	0.5 A/Connector		
÷	Protection		Short-circui	t protection	
Input	Input signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA	
-		16 bit resolution	-10 to 10 V, -5 to 5 V	-20 to 20 mA	
	Max. rated input signal		±15 V	±22 mA*2	
	Input impedance		100 kΩ	50 Ω	
	Linearity (2	25°C)	±0.05% F.S.		
	Repeatability (25°C)		±0.15% F.S.		
	Absolute accuracy (25°C)		±0.5% F.S.	±0.6% F.S.	
Current consumption			70 mA or less		
Enclosure			IP67 (Manifold assembly)		
Standards			CE marking (EMC directive/RoHS directive), UL (CSA)		
We	eight		290 g		

*1 M12 (4-pin) connector can be connected.
*2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

Analog Output Unit


Model			EX600-AYA		
	Output type		Voltage output	Current output	
Output	Output connector		M12 (5-pin) socket*3		
	Output cha	innel	2 channels (1 channel/Connector)		
	Supplied v	oltage	24 \	/DC	
	Max. load current		0.5 A/Connector		
	Protection		Short-circui	t protection	
	Output signal range	12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA	
	Load impedance		1 k Ω or more	600 Ω or less	
	Linearity (25°C)		±0.05% F.S.		
	Repeatability (25°C)		±0.15% F.S.		
	Absolute accuracy (25°C)		±0.5% F.S.	±0.6% F.S.	
Current consumption			70 mA or less		
Enclosure			IP67 (Manifold assembly)		
Standards			CE marking (EMC directive/RoHS directive), UL (CSA)		
W	eight		290 g		

*3 M12 (4-pin) connector can be connected.

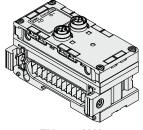

EX600-AYA

Specifications

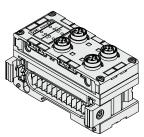


EX600-AMB

Analog Input/Output Unit

Model		EX600-AMB			
	Input type	Voltage input	Current input		
	Input connector	M12 (5-pin) socket*1			
	Input channel	2 channels (1 channel/Connector)			
	Supplied voltage	24 VDC			
	Max. supplied current	0.5 A/Connector			
	Protection	Short-circui	t protection		
Input	Input signal range	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
	Max. rated input signal	15 V	22 mA*2		
	Input impedance	100 kΩ	250 Ω		
	Linearity (25°C)	±0.05% F.S.			
	Repeatability (25°C)	±0.15% F.S.			
	Absolute accuracy (25°C)	±0.5% F.S.	±0.6% F.S.		
	Output type	Voltage output	Current output		
	Output connector	M12 (5-pin) socket*1			
	Output channel	2 channels (1 channel/Connector)			
	Supplied voltage	24 VDC			
	Max. load current	0.5 A/Connector			
Output	Protection	Short-circuit protection			
Ō	Output 12 bit resolution	0 to 10 V, 1 to 5 V, 0 to 5 V	0 to 20 mA, 4 to 20 mA		
	Load impedance	1 k Ω or more	600 Ω or less		
	Linearity (25°C)	±0.05% F.S.			
	Repeatability (25°C)	±0.15%	% F.S.		
	Absolute accuracy (25°C)	±0.5% F.S.	±0.6% F.S.		
C	urrent consumption	100 mA	or less		
Er	nclosure	IP67 (Manifold assembly)			
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)			
w	eight	300) g		


*1 M12 (4-pin) connector can be connected.
*2 When input signal exceeds 22 mA, the protection function activates and the input signal is interrupted.

Specifications

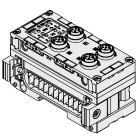

EX600-L□B1

<u>10-</u>	Link Master Unit				
Model		EX600-LAB1 EX600-LBB1		EX600-LBB1	
IO-Link version		Version 1.1			
10	-Link port class	Clas	ss A	Class B	
Co	ommunication speed	COM1 (4.8 kBaud) COM2 (38.4 kBaud) COM3 (230.4 kBaud) * Changes automatically according to the connected device			
N	umber of IO-Link ports		2	4	
Compatible SI unit (Protocol)				4 (PROFINET) 0 (EtherNet/IP™)	
ly current	Device power supply (L+)	0.5 A/Connector (2 A/Unit)		0.5 A/Connector (1 A/Unit)	
Max. supply current	External power supply (P24)	_		1.6 A/Connector (3 A/Unit)	
	Pin no.	2	4	4	
	Input type		PI	NP	
Input	Protection		Short-circui	it protection	
<u>n</u>	Rated input current	Approx. 2.5 mA		Approx. 5.8 mA	
	ON voltage	13 V or more			
	OFF voltage		8 V o	r less	
	Pin no.		2	4	
Ħ	Output type	PNP			
Output	Max. load current (C/Q line)	0.25 A/Output (Supplied from the power supply for control/input)			
	Protection	Short-circuit protection			
Cı	urrent consumption		50 mA	or less	
Er	nclosure	IP67 (Manifold assembly)			
St	andards	CE marking (EMC directive/RoHS directive), UL (CSA)			
w	eight		32	0 g	

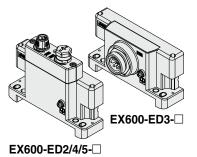


End Plate

Model			EX600-ED2-	EX600-ED3-	EX600-ED4/5-		
su	Power supply	PWR IN	M12 (5-pin) plug	7/8 inch (5-pin) plug	M12 (4-pin) plug		
atio	connector	PWR OUT	—	—	M12 (5-pin) socket		
specifications	Rated	Power supply for control/input	24 VDC ±10%				
	voltage	Power supply for output	24 VDC +10/-5%				
Power	Rated	Power supply for control/input	Max 2 A	Max. 8 A	Max. 4 A		
R	current	Power supply for output	Wax. 2 A	Max. o A	Max. 4 A		
Enclosure			IP67 (Manifold assembly)				
Standards ^{*1}			CE marking (EMC directive/RoHS directive), UL (CSA)				
Weight			170 g	175 g	170 g		

*1 The EX600-ED4/5- is not compliant with UL (CSA) standards.

Handheld Terminal

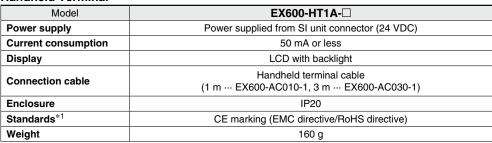

*1 The handheld terminal is not compliant with UL (CSA) standards.


* Cannot be used with the EX600-SPN3/4 and EX600-LAB1/LBB1




EX600-HT1A-


|--|

Dimensions

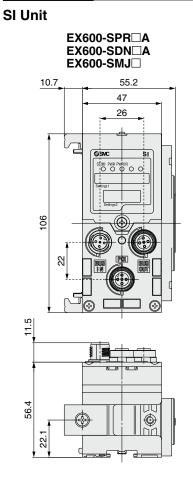



EX600-SPN3/4

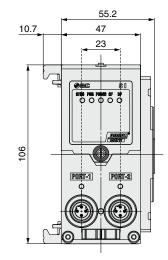


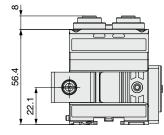




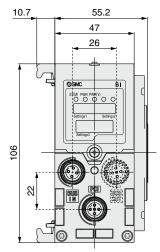


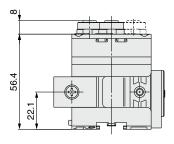

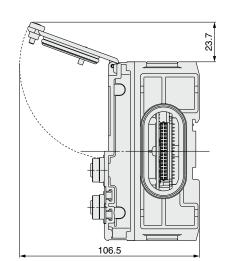

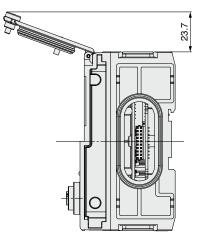

Dimensions

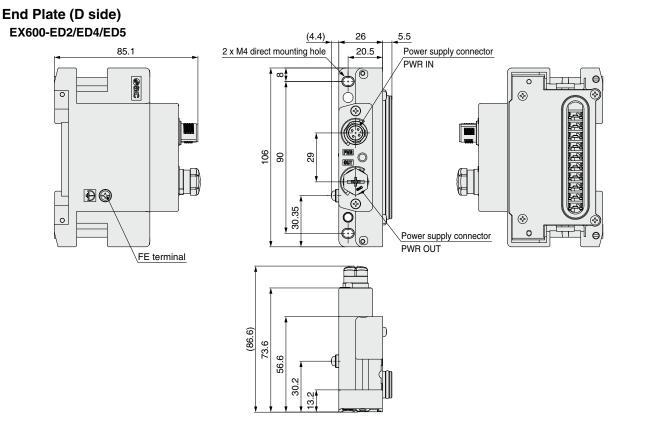

Power supply connector PWR IN: M12 5-pin plug, B-coded

Configuration	EX600-ED2			
Configuration	Pin no.	Description		
	1	24 V (for output)		
2	2	0 V (for output)		
5	3	24 V (for control/input)		
	4	0 V (for control/input)		
	5	FE		

EX600-ED3


Power supply connector PWR IN:							
M12 4-pin plug, A-coded							
	EVCOD ED4 (P)	1.43	EVO00 I				


Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2	
Configuration	Pin no.	Description	Pin no.	Description
3 2	1	24 V (for control/input)	1	24 V (for output)
60	2	24 V (for output)	2	0 V (for output)
$\left \circ \right\rangle$	3	0 V (for control/input)	3	24 V (for control/input)
4 1	4	0 V (for output)	4	0 V (for control/input)


Power supply connector PWR OUT: M12 5-pin socket, A-coded

Configuration	EX600-ED4 (Pin arrangement 1)		EX600-ED5 (Pin arrangement 2	
Connyuration	Pin no.	Description	Pin no.	Description
1 2	1	24 V (for control/input)	1	24 V (for output)
60	2	24 V (for output)	2	0 V (for output)
	3	0 V (for control/input)	3	24 V (for control/input)
4 5 3	4	0 V (for output)	4	0 V (for control/input)
. 5 0	5	Unused	5	Unused


2 x M4 direct

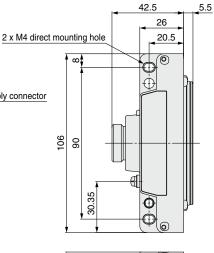



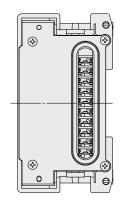


Power supply connector PWR: 7/8 inch 5-pin plug




Dimensions


Digital Unit




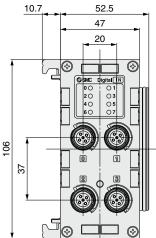

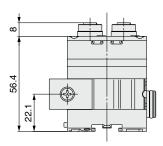




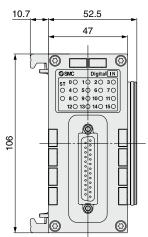


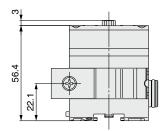



EX600-DX□C□

EX600-DXDD

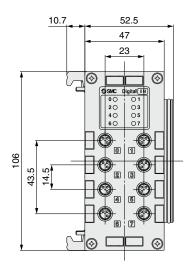


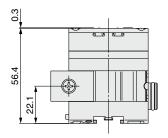


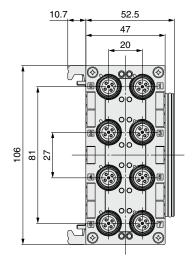


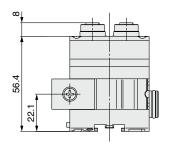

EX600-DX□F EX600-DY□F EX600-DM□F

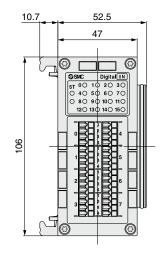

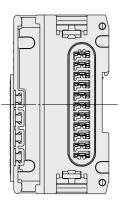

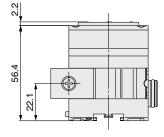



Fieldbus System For Input/Output **EX600** Series

Dimensions


Analog Unit


EX600-AXA EX600-AYA 52.5 10.7

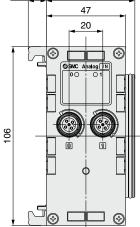

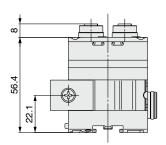



IO-Link Master Unit EX600-LAB1 EX600-LBB1

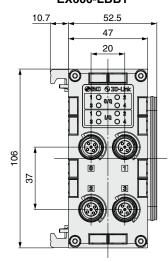


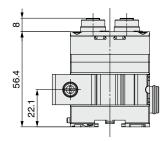




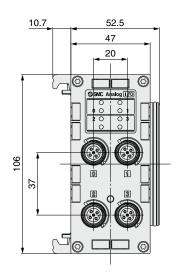

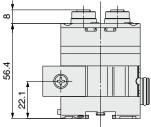

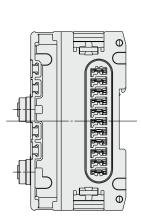

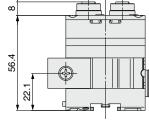

Φ,


물

2

Ξo Φ,


þ


Parts Description

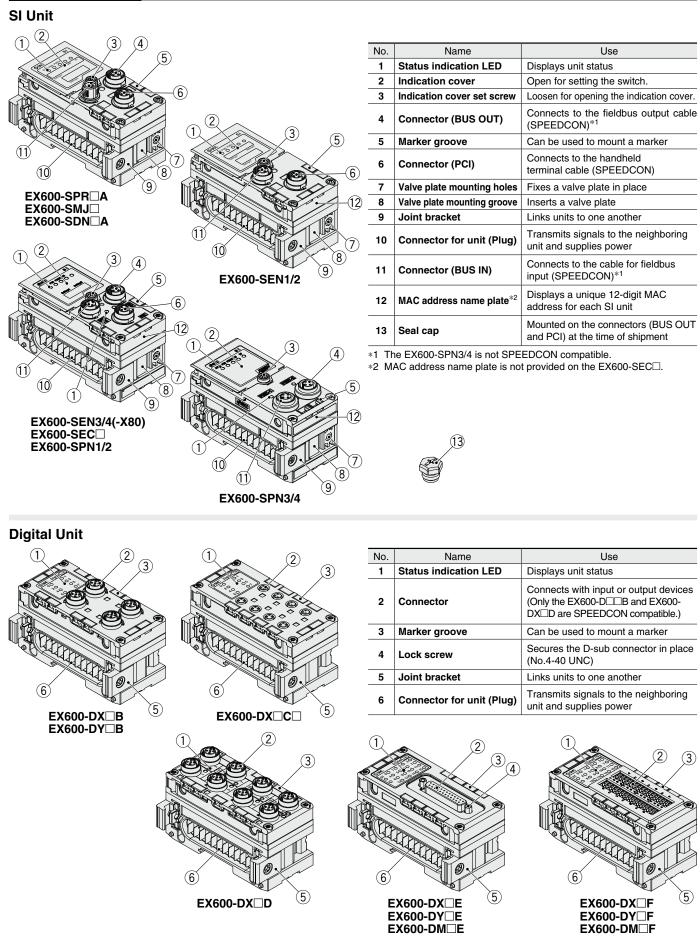

Parts Description


Analog Unit

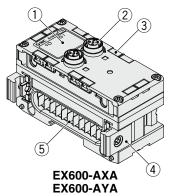

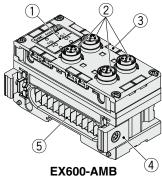


_		
No.	Name	Use
1	Status indication LED	Displays unit status
2	Connector	Connects with input or output devices (SPEEDCON)
3	Marker groove	Can be used to mount a marker
4	Joint bracket	Links units to one another
5	Connector for unit (Plug)	Transmits signals to the neighboring unit and supplies power

IO-Link Master Unit

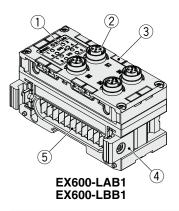

No. Name Use 1 Status indication LED Displays unit status Connects with IO-Link, input, or output 2 Connector devices (SPEEDCON) 3 Marker groove Can be used to mount a marker 4 Joint bracket Links units to one another Connector for unit Transmits signals to the neighboring 5 (Plug) unit and supplies power

End Plate

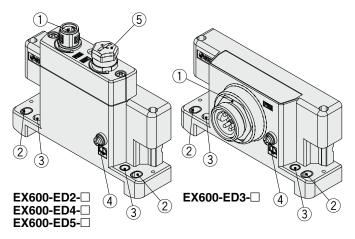


No.	Name	Use		
1	Power connector (PWR IN)	Supplies power to the unit and/or input/output device (Only the EX600-ED2-□ is SPEEDCON compatible.)		
2	Fixing hole for direct mounting	Connects directly to equipment		
3	Fixing hole for DIN rail	Converts to manifold or for DIN rail mounting		
4	FE terminal	Used for grounding Ground this terminal securely to improve noise immunity.		
	EX600-ED2-□ Connector (Unused)	This connector has not yet been used. Do not remove the seal cap.		
5	EX600-ED4- EX600-ED5- Power connector (PWR OUT)	Supplies power to the device on the downstream side		


LED Indicator

EX600-SPR EX600-SDN ST(M): Unit diagnostic state ST(M): Unit diagnostic state BF: Communication state 1 C 7 2 \$1 5 1MB NB Q Ø 0,0 000 PWR: Power supply for control and input PWR: Power supply for control and input SF: System state 3 3 PWR(V): Power supply PWR(V): Power supply for output - \overline{O} \overline{O} ÷ for output \$ Æ

EX600-SEN1/SEN2

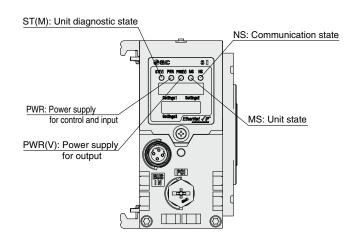

EX600-SEN3/SEN4(-X80)

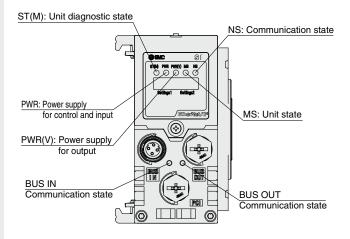


Ø


NS: Communication state

MS: Unit state

EX600-SEC

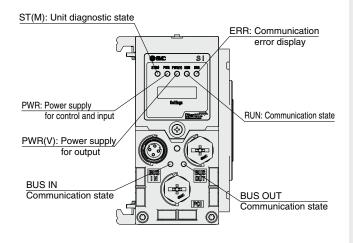


EX600-SPN1/SPN2

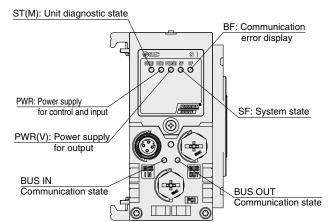

SMC


Fieldbus System For Input/Output **EX600** Series

LED Indicator

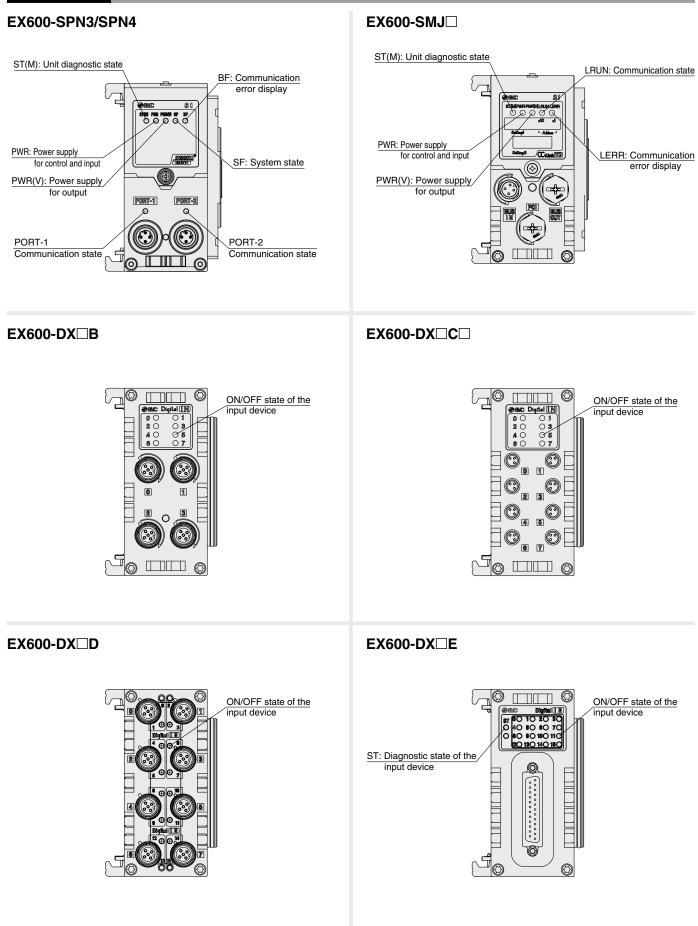

SMC


LED Indicator

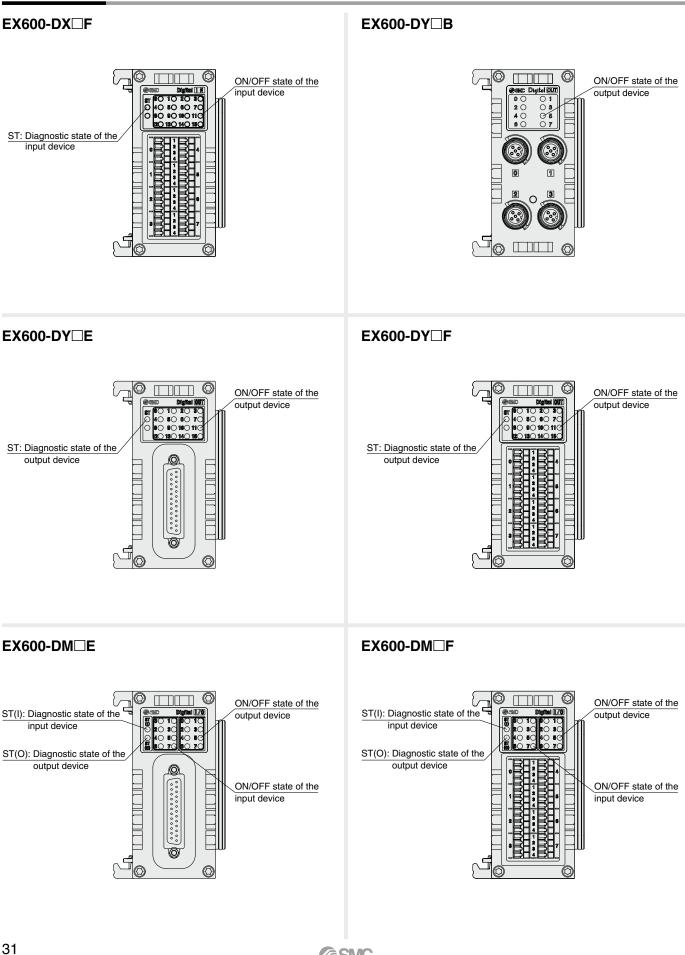


SMC

Fieldbus System For Input/Output **EX600** Series

LED Indicator

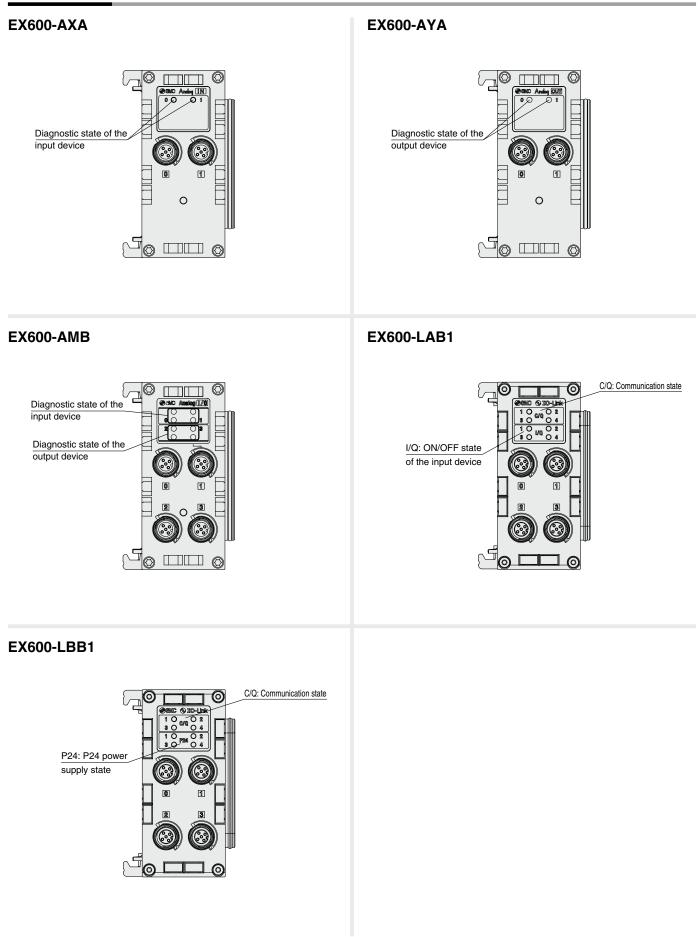

EX600 Series Accessories

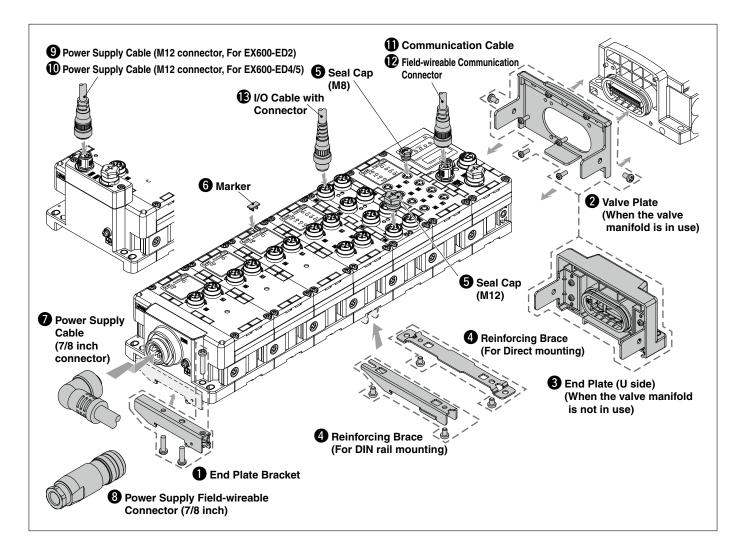

End Plate Bracket

This bracket is used for the end plate of DIN rail mounting.



EX600-ZMA2

Enclosed parts Round head screw (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.

EX600-ZMA3 (Specialized for SY series)


Enclosed parts Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.

2 Valve Plate EX600-ZMV1 **EX600-ZMV2** (Specialized for SY series) **Enclosed parts Enclosed parts** Round head screw (M4 x 6) 2 pcs. Round head screw (M4 x 6) 2 pcs. Round head screw (M3 x 8) 4 pcs. Round head screw (M3 x 8) 2 pcs. 33



Send Plate (U side)

The end plate is for use when the manifold valve is not connected.

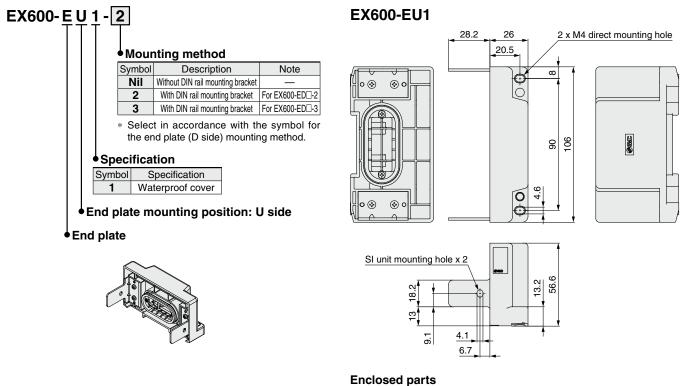

Round head screw (M4 x 5) 2 pcs.

Reinforcing Brace

This bracket is used on the bottom of the unit at the intermediate position for connecting 6 units or more.

* Be sure to attach this bracket to prevent connection failure between the units caused by deflection.





Seal Cap (10 pcs.)


Be sure to mount a seal cap on any unused I/O connectors. Otherwise, the specified enclosure cannot be maintained.






Marker (1 sheet, 88 pcs.)


The signal name of $\ensuremath{\text{I/O}}$ device and each unit address can be entered and mounted on each unit.

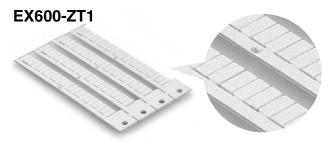

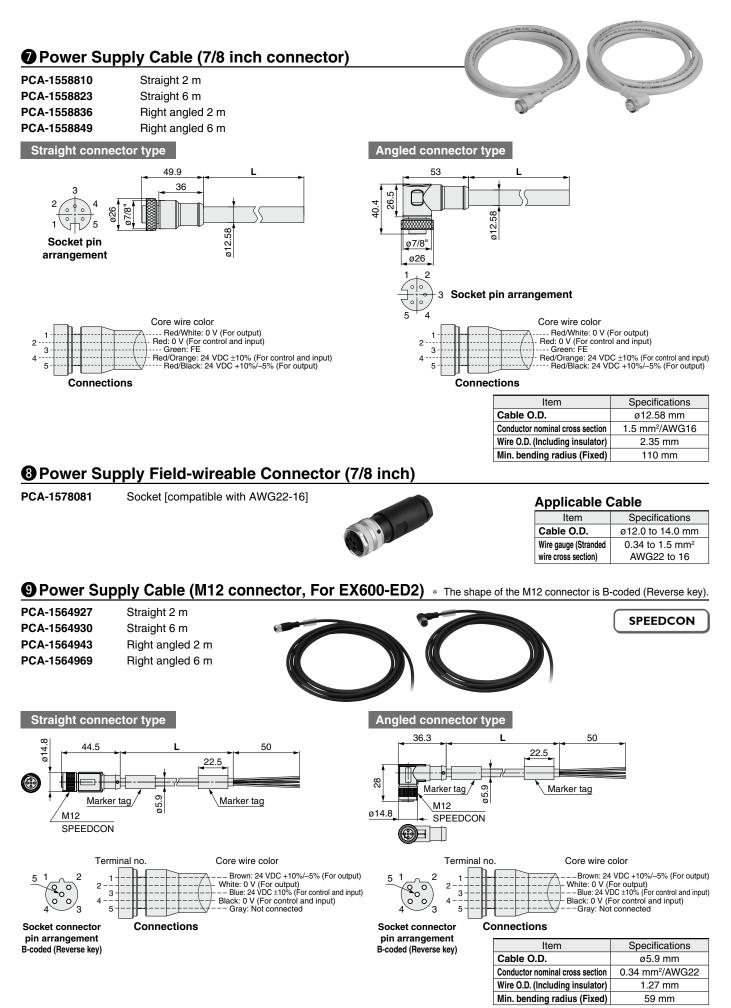

Accessories **EX600** Series




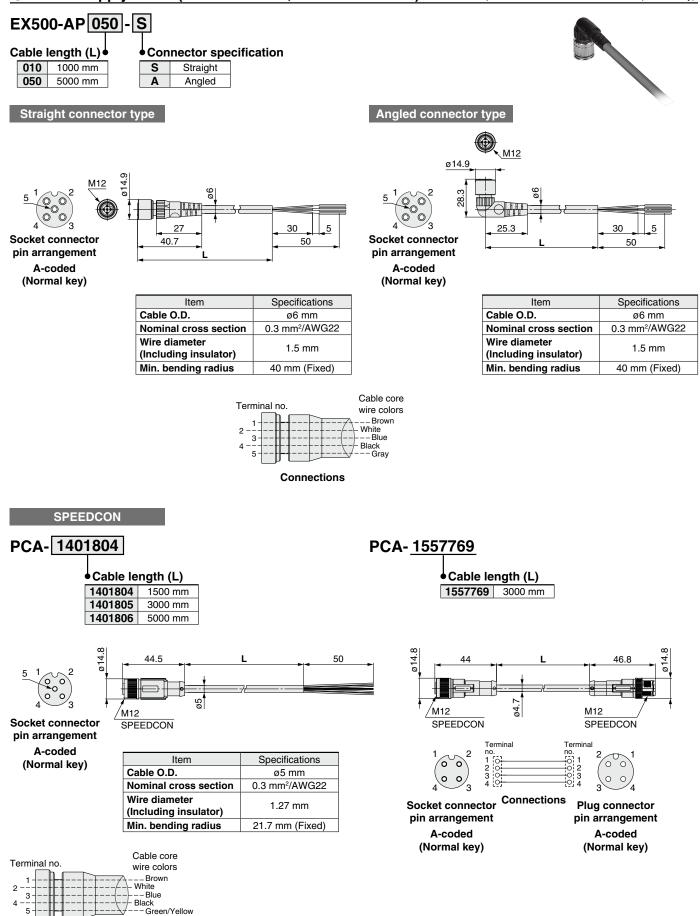


Connections



Communication Cable

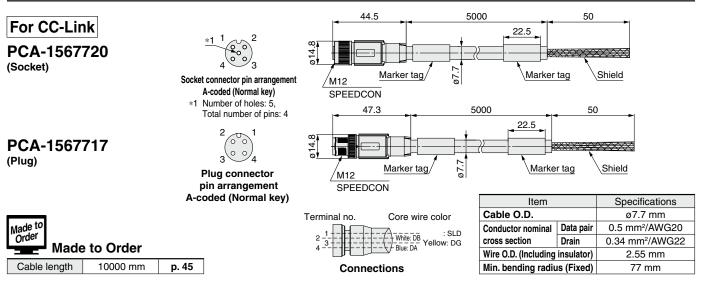


EX9-AC 005 MJ-SSPS (With connector on both sides (Socket/Plug))

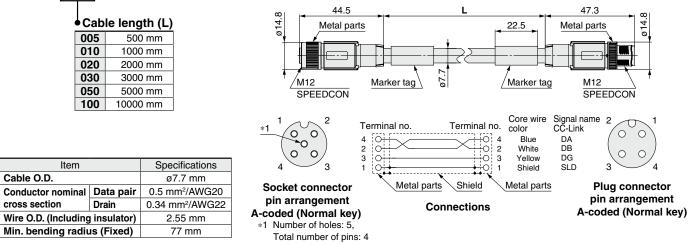

EX9-AC 005 MJ-SAPA (With angled connector on both sides (Socket/Plug))


Cab	le length (L)
005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm

Item		Specifications
Cable O.D.		ø7.7 mm
Conductor nominal	Data pair	0.5 mm ² /AWG20
cross section	Drain	0.34 mm ² /AWG22
Wire O.D. (Including	j insulator)	2.55 mm
Min. bending radiu	us (Fixed)	77 mm

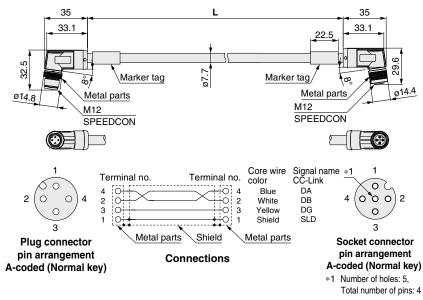



Accessories **EX600** Series

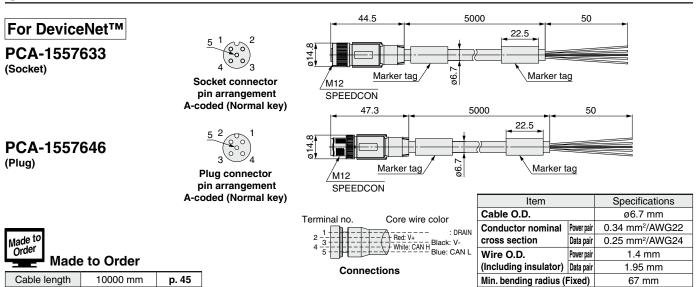


Communication Cable

EX9-AC 005 DN-SSPS (With connector on both sides (Socket/Plug))

Cab	le length (L)
005	500 mm
010	1000 mm
020	2000 mm
030	3000 mm
050	5000 mm
100	10000 mm
100	10000 mm


Item		Specifications	
Cable O.D.		ø6.7 mm	
Conductor nominal	Power pair	0.34 mm ² /AWG22	
cross section Data pair		0.25 mm ² /AWG24	
Wire O.D.	Power pair	1.4 mm	
(Including insulator)	Data pair	1.95 mm	
Min. bending radius (Fixed)	67 mm	

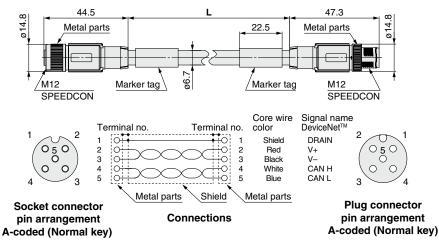


EX9-AC 005 DN-SAPA (With angled connector on both sides (Socket/Plug))

• Cable length (L)				
005	500 mm			
010	1000 mm			
020	2000 mm			
030	3000 mm			
050	5000 mm			
100	10000 mm			


Item		Specifications	
Cable O.D.		ø6.7 mm	
Conductor nominal	Power pair	0.34 mm ² /AWG22	
cross section	Data pair	0.25 mm ² /AWG24	
Wire O.D.	Power pair	1.4 mm	
(Including insulator)	Data pair	1.95 mm	
Min. bending radius (I	Fixed)	67 mm	

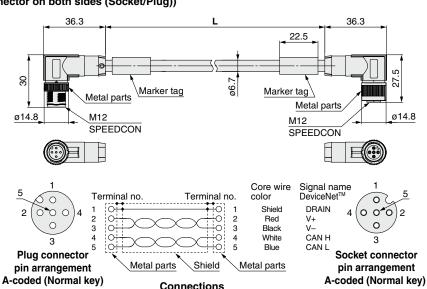

Communication Cable

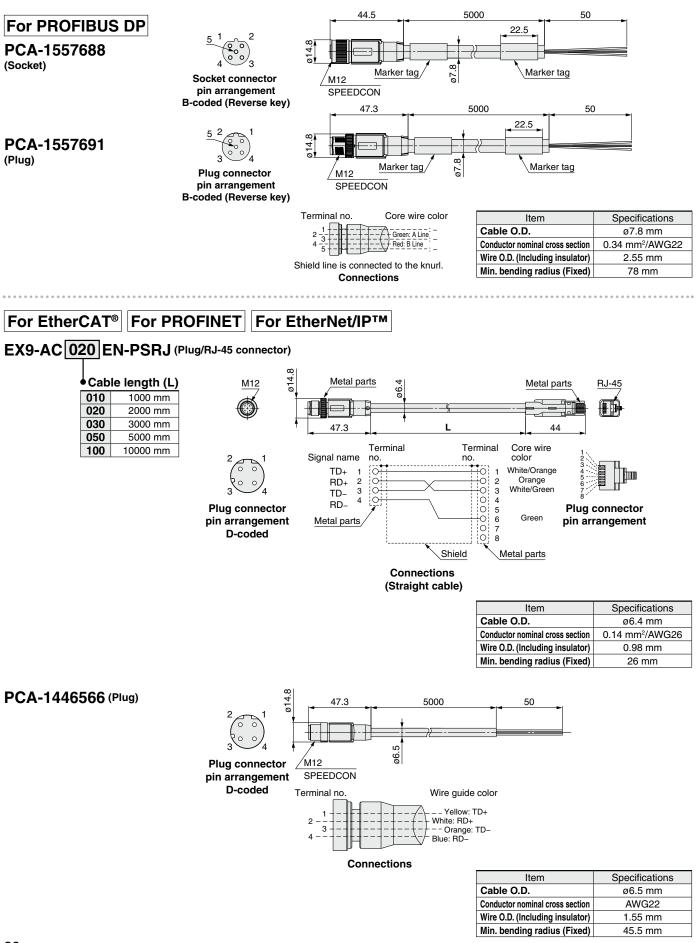

Communication Cable

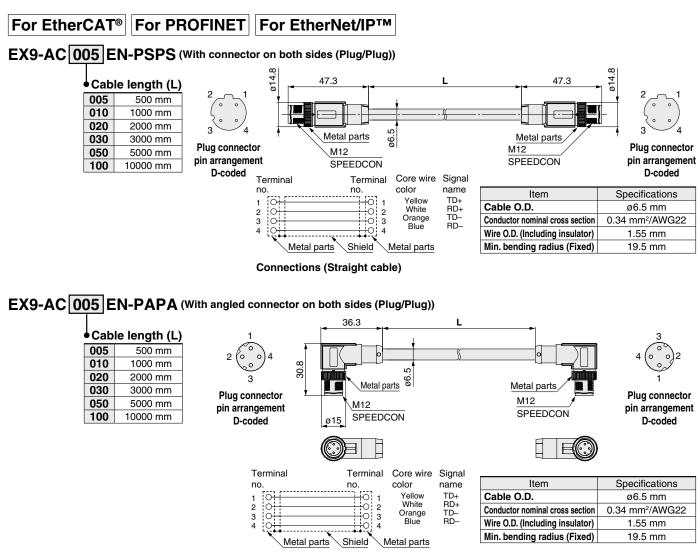


Connections (Straight cable)

Communication Cable

For IO-Link Master Unit

EX9-AC 005 -SSPS (With connector on both sides (Socket/Plug))

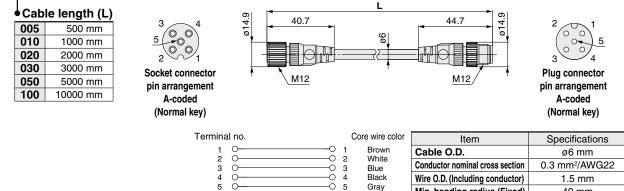


Gray



Item	Specifications		
Cable O.D.	ø6 mm		
Conductor nominal cross section	0.3 mm ² /AWG22		
Wire O.D. (Including conductor)	1.5 mm		
Min. bending radius (Fixed)	40 mm		

Pield-wireable Communication Connector

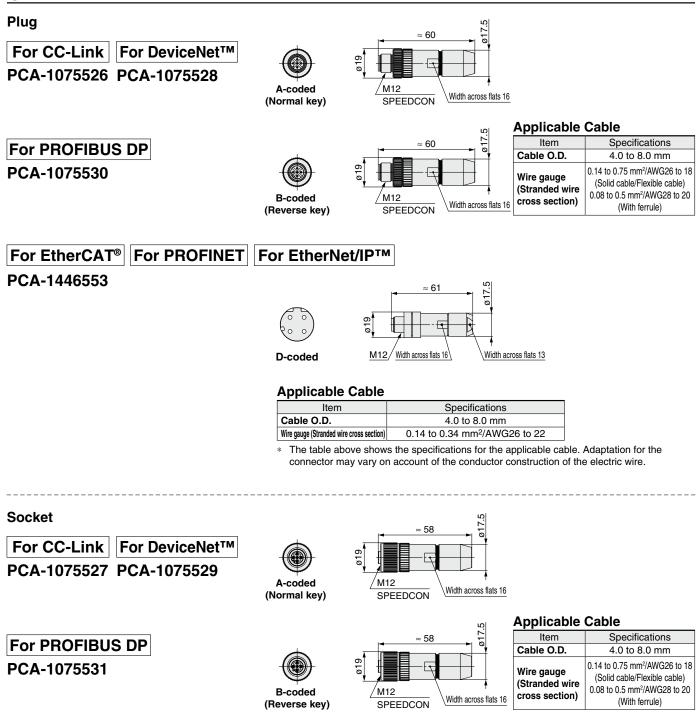


I/O Cable with Connector, I/O Connector

For details, refer to the Web Catalog

	the web catalog.			
Name	Use	Part no.	Description	
Cable with	For sensor	PCA-1557769	Cable with M12 connector (4 pins/3 m)	
connector		PCA-1557772	Cable with M8 connector (3 pins/3 m)	
		PCA-1557730	Field-wireable connector (M8/3 pins/Plug/Piercecon® connection)	
Field-wireable connector	For sensor	For sensor	PCA-1557743	Field-wireable connector
	Salar Old Part	PCA-1557756	(M12/4 pins/Plug/QUICKON-ONE connection/SPEEDCON)	
Y connector	For sensor	PCA-1557785	Y connector (2 x M12 (5 pins)-M12 (5 pins)/SPEEDCON)	
r connector		PCA-1557798	Y connector (2 x M8 (3 pins)-M12 (4 pins)/SPEEDCON)	

* When using the Y connector, connect it to the connector on the I/O unit through the sensor cable (PCA-1557769) with the M12 connector.

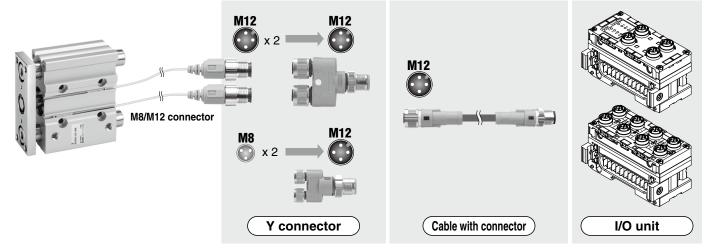

EX600 Series Made to Order Please contact SMC for detailed specifications and lead times.

Made to Order

SI Unit

Prepare the SI unit, each type of unit, and the manifold valve (without SI unit) separately, and combine them before use.


① Ethernet POWERLINK compatible EX600-SPL1-X26


• Dimensions are the same as those of the EX600-SEN3.

③CC-Link IE Field compatible EX600-SCF1-X60

56.4

ц З



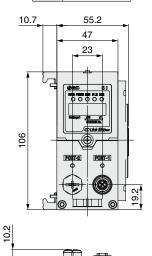

② Modbus/TCP compatible EX600-SMT1-X25

Dimensions are the same as those of the EX600-SEN3.


Communication Cable



For CC-Link For DeviceNet™


EX9-AC100 MJ-X12

Applicable protocol
 MJ CC-Link
 DN DeviceNet[™]





Dimensions



Connections

Terminal no.	Core wire color: Signal name (CC-Link)
1	Shield: SLD
2	White: DB
3	Yellow: DG
4	Blue: DA

 Cable O.D.
 Ø7.7 mm

 Conductor nominal cross section
 Data pair
 0.5 mm²/AWG20

 Wire O.D. (Including insulator)
 0.34 mm²/AWG22

 Wire O.D. (Including insulator)
 2.55 mm

 ber of
 Min. bending radius (Fixed)
 77 mm

Item


Specifications

t *1 Number of holes: 5, Total number of ey) pins: 4


For DeviceNet™

Dimensions

Connections



SPEEDCON



	001111001				
	Terminal no.	Core wire color: Signal name (DeviceNet [™])	Item		Specifications
3	1	Shield: DRAIN	Cable O.D.		ø6.7 mm
	2	Red: V+	Conductor nominal	Power pair	0.34 mm ² /AWG22
	3	Black: V-	cross section	Data pair	0.25 mm ² /AWG24
tor	4	White: CAN H	Wire O.D.	Power pair	1.4 mm
ent	5	Blue: CAN L	(Including insulator)	Data pair	2.05 mm
key)			Min. bending radius (I	Fixed)	67 mm



EX600 Series **Specific Product Precautions**

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For fieldbus system precautions, refer to the "Operation Manual" on the SMC website: https://www.smcworld.com

Mounting

A Caution

- 1. When handling and assembling units, do not touch the sharp metal parts of the connector or plug.
- 2. When connecting six stations or more, be sure to use the intermediate reinforcing brace (EX600-ZMB1 or EX600-ZMB2).

Operating Environment

A Caution

1. Select the proper type of enclosure according to the operating environment.

IP65/67 is achieved when the following conditions are met.

- 1) Provide appropriate wiring between all units using electrical wiring cables, communication connectors and cables with M12 connectors.
- 2) Appropriately mount each unit and valve manifold.
- 3) Be sure to mount a seal cap on any unused connectors.

If using in an environment that is exposed to water splashes, please take measures such as using a cover.

When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to the EX600-D $\Box\Box$ E or EX600-D $\Box\Box$ F, manifold enclosure is IP40.

Also, the handheld terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Adjustment / Operation

▲Warning

<Handheld Terminal>

1. Do not apply pressure to the LCD.

There is a possibility of the crack of LCD and injuring.

2. The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.

This may cause injuries or equipment damage.

3. Incorrect setting of parameters can cause a malfunction. Be sure to check the settings before use

This may cause injuries or equipment damage.

A Caution

<Handheld Terminal>


1. Do not press the setting buttons with a sharp pointed object.

This may cause damage or equipment failure.

2. Do not apply excessive load and impact to the setting buttons.

This may cause damage, equipment failure or malfunction.

When the order does not include the SI unit, a valve plate which connects the manifold and SI unit, is not mounted. Use attached valve holding screws and mount the valve plate. (Tightening torque: 0.6 to 0.7 N·m)

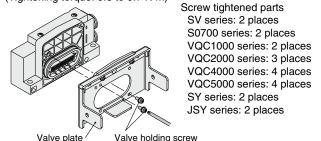

Valve holding screw

Trademark

DeviceNet[™] is a trademark of ODVA EtherNet/IP™ is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany. Modbus® is a registered trademark of Schneider Electric, licensed to the Modbus Organization, Inc. QuickConnect[™] is a trademark of ODVA.



▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

- Caution: indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

AWarning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems.
 - ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
 - ISO 10218-1: Manipulating industrial robots Safety. etc.

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

have been added as applicable solenoid valves. TS nit has been added.
nit has been added.
ve been added as connectable valves.
nensions" pages of the connectable valves have been deleted.
2 (4/5 pins) A-coded power supply connectors have been added.
been decreased from 68 to 48. YT
mpatible SI unit has been added (PROFINET). ZR
/11 as

\Lambda Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.